

1. PCIe/PXIe-5113/5113S Specifications

Multi-functional Data Acquisition Boards



🔗 Please download JYTEK [<JYPEDIA>](#), you can quickly inquire the product prices, the key features and available accessories.

Overview

JYTEK JY-5113 board includes the PCIe-5113/5113S and PXIe-5113/5113S models, which belong to the JY-5110 series. The PCIe-5113 is a board based on the PCI Express interface, providing up to 64 channels of analog inputs of up to 1M samples per second, 4 channels of analog outputs, 16 channels of digital IO or 4 32-bit counters/timers; the PXIe-5113 is a board based on the PXI Express interface, providing up to 64 channels of analog inputs of up to 1M samples per second, 4 channels of analog outputs, 16 lines of Digital IO or 2 32-bit counters/timers.

1.1. Main Features

- High accuracy: 340 ppm
- Up to 64 single-ended/32 differential analog input channels;
- Sampling rates: 1MS/s; 8-ch 1MS/s/ch (5113S)
- 16 bits ADC
- 64M samples of analog input FIFO buffer
- 4 simultaneous 16-bit analog output channels
- 32M sample FIFO buffer for analog output
- 16 lines of Digital IO
- DIO supports hardware timing up to 10MHz
- 2 channels 32-bit timer/counter
- DMA for AI, AO and DIO
- Analog/Digital/Software Trigger

1.2. Analog Input

Analog Input	PCIe/PXle-5113	PCIe/PXle-5113S
Number of channels	64 SE/ 32 DIFF	64 SE/ 32 DIFF
ADC resolution (Bits)	16	16
Single channel maximum sample rate	1 MS/s	1 MS/s or 8-ch 1MS/s/ch
Multichannel maximum sample rate with same range(aggregate)	1 MS/s/n (n=1,2,3...64)	1 MS/s/n (n=1,2,3...8)
Clock	100 MHz	100 MHz
Input range(V)	$\pm 10/\pm 5/\pm 2.5$	$\pm 10/\pm 5/\pm 2.5$
Input mode	RSE / Differential	RSE / Differential
Input impedance	$>1M\Omega$ $330pF$	$>1M\Omega$ $330pF$
Input coupling	DC	DC
Overvoltage protection	± 25 V	± 25 V
CMRR	85 dB	85 dB
Crosstalk	-74 dB	-74 dB
DNL	No Missing Code	No Missing Code
INL	70 ppm of Range Typical	70 ppm of Range Typical
Input FIFO	128 M Samples	128 M Samples
Trigger type	Digital, Analog, Software	Digital, Analog, Software
Trigger mode	StartTrigger, ReferenceTrigger, ReTrigger	StartTrigger, ReferenceTrigger, ReTrigger
Analog trigger voltage range	± 10 V Software Programmable	± 10 V Software Programmable
Overvoltage Protection	Continuous : 20 mA, ± 25 V	Continuous : 20 mA, ± 25 V
	Instantaneous : 40 mA, ± 25 V	Instantaneous : 40 mA, ± 25 V

Table 1 Analog Input Specifications

1.3. Analog Output

Analog Output		PCIe/PXle-5113	PCIe/PXle-5113S
Number of channels		4	
DAC resolution		16 bits	
Maximum update rate (simultaneous)	1 channel	2 MS/s	
	2 channels (1 channel per bank)*	2 MS/s	
	4 channels	1 MS/s	
Clock		100 MHz	
Clock accuracy		Jitter <20 ps	
Output range(V)		±10	
Output mode		RSE	
Output impedance		0.2 Ω	
Output coupling		DC	
Output current drive		±10 mA	
Output FIFO		32 M Samples	
Trigger source		Digital, Software	
Trigger type		Start Trigger	
* Each bank consists of 2 AO channels. Any channels being used within a single bank will update simultaneously.			

Table 2 Analog Output Specifications

1.4. Counter Input/Output

CIO	PCle/PXIe-5113	PCle/PXIe-5113S
Number of channels	2	
Resolution	32 bits	
Counter Input	edge count, period measurement, frequency measurement, pulse width measurement, two-edge interval measurement, quadrature encoder, etc.	
Counter Output	Single, finite and continuous pulse	
Clock	100 MHz	
FIFO	4 M Samples	
Input	Gate, Source, Aux	
Output	OUT	

Table 3 Counter Input Operations Specifications

1.5. PFI Specifications

PFI	PCle/PXIe-5113	PCle/PXIe-5113S
Number of channels	16	
External digital trigger interface	Trigger voltage : 3.3 V TTL	
	Trigger edge: Rising/Falling	
Initial state	Input	

Table 4 PFI Specifications

1.6. Digital IO Specifications

DIO	PCIe/PXIe-5113	PCIe/PXIe-5113S
Number of channels	16 Lines	
Ground reference	D GND	
Directional control	Independent control of each port	
Max update rate	10 MHz	
Max	10 MHz	
DI FIFO	32M Samples	
DO FIFO	32M Samples	
Initial state	Input	
Digital Input	Logic Low: VIL Min : 0 / Max : 0.8 V	
	Logic High: VIH Min : 2 V / Max : 5.3 V	
Digital Output	Logic Low : 0 V, IOL Max: 12 mA	
	Logic High : 2.6 V~3.3 V, IOH: -12 mA~0 mA	

Table 5 Digital IO Specifications

1.7. Basic DC AI Accuracy

JY-5113/5113S Basic Accuracy = $\pm$ (% Reading+% Range)												
Nominal Range (V)	24 Hour Tcal $\pm 1^{\circ}\text{C}$			90 Day Tcal $\pm 5^{\circ}\text{C}$			Temperature Coefficients($^{\circ}\text{C}$)		24 Hr Full Scale Accuracy	90 Day Full Scale Accuracy	Full Scale Accuracy(%)	
2.5	0.007	+	0.033	0.018	+	0.033	0.0004	+	0.0002	1000 μV	1300 μV	0.052
5	0.007	+	0.026	0.018	+	0.027	0.0004	+	0.0002	1650 μV	2300 μV	0.046
10	0.007	+	0.018	0.013	+	0.021	0.0004	+	0.0002	2500 μV	3400 μV	0.034
Accuracy valid to 95% of full range												
Valid for one channel only. 95% of Confidence Interval												
Max sampling rates for 5113: 1 MS/s												
The 90-day accuracy is 2.5 times the 24-hour accuracy.												

Table 6 Basic DC AI Accuracy

AI Bandwidth		
Analog Input Bandwidth		
Nominal Range Full Scale (V)	Bandwidth select	-3dB Bandwidth (kHz)
All range	15KHz	15
All range	39KHz	31
All range	80KHz	73

Table 7 AI Bandwidth Specifications

1.8. Basic AO Accuracy

JY-5113/5113S Basic AO Accuracy = ±(% of Output+% of Range)												
Nominal Range (V)	24 Hour Tcal ±1C°			90 Days Tcal ± 5°			Temperature Coefficients(°C)		24 Hr Full Scale Accuracy	90 Day Full Scale Accuracy	Full Scale Accuracy(%)	
10	0.009	+	0.016	0.0260	+	0.0270	0.0018	+	0.0013	2500 uV	5300 uV	0.053

Accuracy valid to 99% of full range.
Valid for all update rates.
Add accuracy adjustment if temperature is outside calibration temperature range.
The 90-day accuracy is 2.5 times the 24-hour accuracy.

Table 8 Basic AO Accuracy

1.9. System Noise

Nominal Range (V)	Bandwidth select (KHz)	SystemNoise (μVrms)
2.5	15	56
5	15	91
10	15	170
2.5	39	73
5	39	110
10	39	190
2.5	80	230
5	80	300
10	80	410

Table 9 System Noise Specifications Physical and Environment

1.10. Physical and Environment

Operating Environment

Ambient temperature range	0 °C to 50 °C
Relative humidity range	20% to 80%, noncondensing

Storage Environment

Ambient temperature range	-20 °C to 80 °C
Relative humidity range	10% to 90%, noncondensing

Table 10 Physical and Environment

1.11. Power Consumption (typical)

Voltage	Current	Power	Total Power
12V	0.75A	9W	9.2W
3.3V	0.06A	0.2W	

Table 11 5113 Power Consumption

1.12. Front Panel and Pin Definition

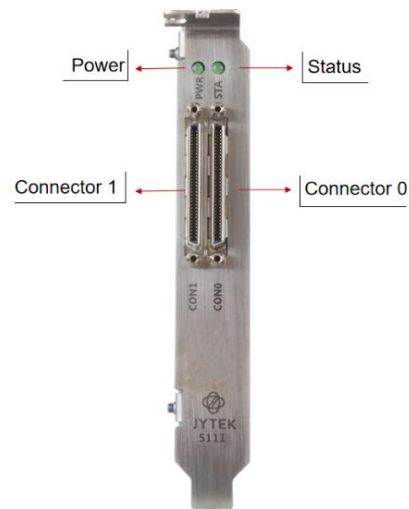


Figure 1 PCIe/PXle 5113 Front Panel

Connector 1				Connector 0			
Pin	Identification	Pin	Identification	Pin	Identification	Pin	Identification
1	PFI 8 / DIO 8	35	D_GND	1	PFI 0 / DIO 0	35	D_GND
2	PFI 9 / DIO 9	36	D_GND	2	PFI 1 / DIO 1	36	D_GND
3	PFI 10 / DIO 10	37	D_GND	3	PFI 2 / DIO 2	37	D_GND
4	PFI 11 / DIO 11	38	D_GND	4	PFI 3 / DIO 3	38	D_GND
5	PFI 12 / DIO 12	39	D_GND	5	PFI 4 / DIO 4	39	D_GND
6	PFI 13 / DIO 13	40	D_GND	6	PFI 5 / DIO 5	40	D_GND
7	PFI 14 / DIO 14	41	D_GND	7	PFI 6 / DIO 6	41	D_GND
8	PFI 15 / DIO 15	42	D_GND	8	PFI 7 / DIO 7	42	D_GND
9	AO2	43	AO_GND	9	AO0	43	AO_GND
10	AO3	44	AO_GND	10	AO1	44	AO_GND
11	AI 32 (AI 16+)	45	AI 40 (AI 16-)	11	AI 0 (AI 0+)	45	AI 8 (AI 0-)
12	AI_GND	46	AI_GND	12	AI_GND	46	AI_GND
13	AI 33 (AI 17+)	47	AI 41 (AI 17-)	13	AI 1 (AI 1+)	47	AI 9 (AI 1-)
14	AI 34 (AI 18+)	48	AI 42 (AI 18-)	14	AI 2 (AI 2+)	48	AI 10 (AI 2-)
15	AI_GND	49	AI_GND	15	AI_GND	49	AI_GND
16	AI 35 (AI 19+)	50	AI 43 (AI 19-)	16	AI 3 (AI 3+)	50	AI 11 (AI 3-)
17	AI 36 (AI 20+)	51	AI 44 (AI 20-)	17	AI 4 (AI 4+)	51	AI 12 (AI 4-)
18	AI_GND	52	AI_GND	18	AI_GND	52	AI_GND
19	AI 37 (AI 21+)	53	AI 45 (AI 21-)	19	AI 5 (AI 5+)	53	AI 13 (AI 5-)
20	AI 38 (AI 22+)	54	AI 46 (AI 22-)	20	AI 6 (AI 6+)	54	AI 14 (AI 6-)
21	AI_GND	55	AI_GND	21	AI_GND	55	AI_GND
22	AI 39 (AI 23+)	56	AI 47 (AI 23-)	22	AI 7 (AI 7+)	56	AI 15 (AI 7-)
23	AI 48 (AI 24+)	57	AI 56 (AI 24-)	23	AI 16 (AI 8+)	57	AI 24 (AI 8-)
24	AI_GND	58	AI_GND	24	AI_GND	58	AI_GND
25	AI 49 (AI 25+)	59	AI 57 (AI 25-)	25	AI 17 (AI 9+)	59	AI 25 (AI 9-)
26	AI 50 (AI 26+)	60	AI 58 (AI 26-)	26	AI 18 (AI 10+)	60	AI 26 (AI 10-)
27	AI_GND	61	AI_GND	27	AI_GND	61	AI_GND
28	AI 51 (AI 27+)	62	AI 59 (AI 27-)	28	AI 19 (AI 11+)	62	AI 27 (AI 11-)
29	AI 52 (AI 28+)	63	AI 60 (AI 28-)	29	AI 20 (AI 12+)	63	AI 28 (AI 12-)
30	AI_GND	64	AI_GND	30	AI_GND	64	AI_GND
31	AI 53 (AI 29+)	65	AI 61 (AI 29-)	31	AI 21 (AI 13+)	65	AI 29 (AI 13-)
32	AI 54 (AI 30+)	66	AI 62 (AI 30-)	32	AI 22 (AI 14+)	66	AI 30 (AI 14-)
33	AI_GND	67	AI_GND	33	AI_GND	67	AI_GND
34	AI 55 (AI 31+)	68	AI 63 (AI 31-)	34	AI 23 (AI 15+)	68	AI 31 (AI 15-)

Note:

- ◆ At JY-5113S AI channel synchronization, each bank can only select one;
In RSE mode, the following is the distribution of the banks:

Bank1 AI_0 - AI_7
Bank2 AI_8 - AI_15
Bank3 AI_16 - AI_23
Bank4 AI_24 - AI_31
Bank5 AI_32 - AI_39
Bank6 AI_40 - AI_47
Bank7 AI_48 - AI_55
Bank8 AI_56 - AI_63

In DIFF mode, the following is the distribution of the banks:

Bank1 AI_0 - AI_7
Bank2 AI_8 - AI_15
Bank3 AI_16 - AI_23
Bank4 AI_24 - AI_31

Please pay attention to the wiring method.

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1_Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Table 12 5113 Pin Definition

AI_GND	Analog Input Reference Ground
AI<0..31>	Analog Input channel
AO_GND	Analog Output Reference Ground
AO<0..3>	Analog Output Channel
D_GND	Digital Signal Reference Ground
DIO<0..15>	Digital I/O Channel
PFI<0..15>	Programmable Function Interface
+5V_OUT	5V power supply

Table 13 Cable Specification

1.13. Accessories

- DIN-68 (PN: JY1717615-01)
SCSI 68-pin Terminal board
- ACL-1016868-1 (PN: JY1016868-01)
1M 68pin VHDCI68M-SCSI68M cable
- ACL-1016868-2 (PN: JY1016868-02)
2M 68pin VHDCI68M-SCSI68M cable

2. Special Operation Note

In the operation of the JY-5113, it is crucial to note that the device **does not support the mixed use of single-ended and differential measurements**. All input channels must be configured consistently as either single-ended or differential for the entirety of the operation.

- **Single-ended mode:** In this mode, each signal is measured with respect to a common ground.
- **Differential mode:** In this mode, the measurement is taken between two input signals, ensuring noise rejection and higher signal integrity.

If your application requires switching between these two modes, it is recommended to reconfigure the channels uniformly before starting a new measurement session.

3. Table of Contents

Table of Contents

1. PCIe/PXle-5113/5113S Specifications.....	1
1.1. Main Features.....	1
1.2. Analog Input	2
1.3. Analog Output	2
1.4. Counter Input/Output	3
1.5. PFI Specifications	3
1.6. Digital IO Specifications	4
1.7. Basic DC AI Accuracy.....	4
1.8. Basic AO Accuracy	4
1.9. System Noise	5
1.10. Physical and Environment	5
1.11. Power Consumption (typical)	5
1.12. Front Panel and Pin Definition	6
1.13. Accessories	8
2. Special Operation Note	9
3. Table of Contents	10
4. Software	16
4.1. Supported Operating System	16
4.2. Programming Languages	16
5. Order Information.....	16
6. JYPEDIA	16
7. Additional Hardware Information	17
7.1. Basic DC AI Accuracy.....	17
7.2. Basic AO Accuracy	17
8. Additional Software Information	19
8.1. System Requirements.....	19
8.2. System Software	19
8.3. C# Programming Language.....	20

8.4. PCIe/PXIe-5113 Hardware Driver	20
8.5. Install the SeeSharpTools from JYTEK	21
8.6. Running C# Programs in Linux	21
9. Operating JY5113	22
9.1. Quick Start	22
9.2. Data Acquisition Methods	22
9.2.1. Continuous Acquisition	25
9.2.2. Finite Acquisition	26
9.2.3. Single Point Acquisition	27
9.2.4. Record Acquisition	28
9.3. Analog Input Terminal Type	30
9.3.1. DIFF Mode	31
9.3.2. RSE Mode	34
9.4. Trigger Source	35
9.4.1. Immediate trigger	35
9.4.2. Software Trigger	36
9.4.3. External Analog Trigger	37
9.4.4. External Digital Trigger	41
9.5. Trigger Mode	43
9.5.1. Start Trigger	43
9.5.2. Reference Trigger	44
9.5.3. ReTrigger	45
Learn by Example 9.5	45
9.6. AO Operations	48
9.6.1. Finite Output	48
9.6.2. Continuous NoWrapping Output	49
9.6.3. Continuous Wrapping Output	50
9.7. Digital I/O Operations	50
9.7.1. Static DI/DO	51
9.7.2. Dynamic DI/DO	51
9.8. Counter Input Operations	52
9.8.1. Edge Counting	54

9.8.2. Pulse Measurement.....	58
9.8.3. Frequency Measurement	63
9.8.4. Period Measurement.....	67
9.8.5. Two-Edge Separation	68
9.8.6. Quadrature Encoder	72
9.8.7. Two-Pulse Encoder	76
9.9. Counter Output Operations	81
9.9.1. Single Pulse Output	81
9.9.2. Finite Pulse Output.....	83
9.9.3. Continuous Pulse Output	84
9.10. System Synchronization Interface (SSI) for PCIe Modules	85
9.11. DIP Switch in PCIe/PXle-5113.....	86
10. Calibration	86
11. Appendix(Measurement Issues).....	87
11.1. Performance and Tests.....	87
11.1.1. AI Accuracy	87
11.1.2. AI Bandwidth	88
11.1.3. System Noise	88
11.1.4. PCIe/PXle-5113 CMRR	88
11.1.5. AO Accuracy.....	89
11.2. Floating Signals and Ground Referenced Signals	89
11.3. Differential, NRSE, RSE Modes	89
11.4. Reducing the Common Mode Voltage Effect	90
12. About JYTEK	92
12.1. JYTEK China.....	92
12.2. JYTEK Software Platform	92
12.3. JYTEK Warranty and Support Services.....	92
13. Statement.....	93
Table 1 Analog Input Specifications	2
Table 2 Analog Output Specifications	2
Table 3 Counter Input Operations Specifications	3
Table 4 PFI Specifications.....	3

Table 5	Digital IO Specifications	4
Table 6	Basic DC AI Accuracy.....	4
Table 7	AI Bandwidth Specifications	4
Table 8	Basic AO Accuracy	4
Table 9	System Noise Specifications Physical and Environment.....	5
Table 10	Physical and Environment.....	5
Table 11	5113 Power Consumption.....	5
Table 12	5113 Pin Definition	7
Table 13	Cable Specification.....	7
Table 14	Supported Linux Versions	19
Table 15	SSI Connector Pin Assignment for PCIe-5113	86
Table 16	Typical AI Accuracy	87
Table 17	AI Bandwidth	88
Table 18	Typical AO Accuracy.....	89

Figure 1	PCIe/PXle 5113 Front Panel.....	6
Figure 2	Sample Rate and Internal AD Conversion	23
Figure 3	MultiChannel Continuous Acquisition.....	25
Figure 4	Differential Mode for Grounding Signals	31
Figure 5	10V Range Diamond Plot	32
Figure 6	5V Range Diamond Plot	32
Figure 7	2.5V Range Diamond Plot	33
Figure 8	Choose Differential in AI Terminal.....	34
Figure 9	RSE Mode for Floating Signals.....	35
Figure 10	Immediate trigger Paraments	36
Figure 11	Software trigger Acquisition.....	37
Figure 12	Rising Slope Trigger	38
Figure 13	Falling Slope Trigger.....	38
Figure 14	Hysteresis with Rising Slope Trigger	39
Figure 15	Hysteresis with Falling Slope Trigger	39
Figure 16	Entering Window Trigger	40
Figure 17	Leaving Window Trigger	40
Figure 18	Analog Trigger Acquisition	41
Figure 19	External Digital Trigger	42
Figure 20	Digital Trigger Acquisition	43
Figure 21	Start Trigger.....	44
Figure 22	Reference Trigger.....	45
Figure 23	ReTrigger.....	45
Figure 24	Retrigger Paraments.....	46
Figure 25	Retrigger In Start Trigger Mode	47
Figure 26	Retrigger In Reference Trigger Mode	47
Figure 27	Complete Retrigger Count.....	48
Figure 28	AI Continuous Paraments	49
Figure 29	AI Continuous Paraments	50

Figure 30	Single Digital Output	51
Figure 31	DO ContinuousNoWrapping Output.....	52
Figure 32	Counter Terminal	53
Figure 33	Counter Signal Wiring Instruction	54
Figure 34	Simple Edge Counting in Single Mode	54
Figure 35	Buffered Edge Counting with Internal Sample Clock	55
Figure 36	Simple Edge Counting with Implicit SampleClk	55
Figure 37	Count Direction	56
Figure 38	EdgeCounting For Single Mode.....	56
Figure 39	EdgeCounting For Finite Mode	57
Figure 40	Counter Values For Internal Clock	58
Figure 41	Counter Values For Implicit Clock.....	58
Figure 42	Pulse Measurement in Single Mode	59
Figure 43	Pulse Measurement with Internal SampleClk	60
Figure 44	Pulse Measurement with Implicit SampleClk	60
Figure 45	Pulse Measure Value For Single Mode.....	61
Figure 46	Pulse Measure For Finite Mode.....	62
Figure 47	Pulse Measure Values For Finite Mode	62
Figure 48	Frequency Measurement with Internal Sample Clock.....	64
Figure 49	Frequency Measure For Single Mode.....	65
Figure 50	Frequency Measure For Continuous Mode	66
Figure 51	Frequency Measure Values	66
Figure 52	Peroid Measure For Single Mode	67
Figure 53	Peroid Measure For Continuous Mode	68
Figure 54	Two-Edge Separation in Single Mode.....	69
Figure 55	Two-Edge Separation with Internal Sample Clock	69
Figure 56	Two-Edge Separation with Implicit Sample Clock.....	70
Figure 57	Two-EdgeSeparation Measure For Single Mode	71
Figure 58	Two-EdgeSeparation Measure For Finite Mode	72
Figure 59	Quadrature Encoder x1 Mode	73
Figure 60	Quadrature Encoder x2 Mode	73
Figure 61	Quadrature Encoder x4 mode	73
Figure 62	Quadrature Encoder x1 with Sample Clock	74
Figure 63	Quadrature Encoder x4 with Implicit Sample Clock	75
Figure 64	QuadEncoder For Single Mode	75
Figure 65	QuadEncoder For Continuous Mode	76
Figure 66	Two-Pulse Encoder in Single Mode	77
Figure 67	Two-Pulse Encoder with Internal Sample Clock	77
Figure 68	Two-Pulse Encoder with Implicit Sample Clock	78
Figure 69	Two-PulseEncoder For Single Mode	79
Figure 70	Two-PulseEncoder For Finite Mode.....	80
Figure 71	Two-PulseEncoder For Continuous Mode	81
Figure 72	Single Pulse Output	82
Figure 73	Single Pulse Generation	82

Figure 74	Finite Pulse Output	83
Figure 75	Finite Pulses Generation	84
Figure 76	Continuous Pulse Generation	85
Figure 77	SSI Connector in PCIe-5113.....	85
Figure 78	AI Measurement Error.....	87
Figure 79	AI Error due to System Random Noise	88
Figure 80	Common Mode Rejection Ratio	88
Figure 81	Six Measurement Scenarios	90
Figure 82	Using Resister to Reduce Common Mode Voltage Effect.....	91

4. Software

4.1. Supported Operating System

Windows 7/10, x64/x86, Linux. See additional information.

4.2. Programming Languages

Microsoft C#. See additional software information for other languages.

5. Order Information

- PCIe-5113 (PN: JY9785803-01)
64-ch AI (16-Bit, 1 MS/s), 4-ch AO (16-Bit, 2 MS/s), 16 DIO PCIe Multifunction I/O Card
- PXIe-5113 (PN: JY4726411-01)
64-ch AI (16-Bit, 1 MS/s), 4-ch AO (16-Bit, 2 MS/s), 16 DIO PXIe Multifunction I/O Card
- PCIe-5113S (PN: JY9785803-02)
64-ch AI 1 MS/s or 8-ch 1MS/s/ch (16-Bit), 4-ch AO (16-Bit, 2 MS/s), 16 DIO PCIe Multifunction I/O Card
- PXIe-5113S (PN: JY4726411-02)
64-ch AI 1 MS/s or 8-ch 1MS/s/ch (16-Bit), 4-ch AO (16-Bit, 2 MS/s), 16 DIO PXIe Multifunction I/O Card

6. JYPEDIA

JYPEDIA is an excel file. It contains JYTEK product information, pricing, inventory information, drivers, software, technical support, knowledge base etc. You can register and download a [JYPEDIA](#) excel file from our web www.jytek.com. JYTEK highly recommends you use this file to obtain information from JYTEK.

7. Additional Hardware Information

7.1. Basic DC AI Accuracy

The DAQ mode is the normal data acquisition mode commonly found in commercial DAQ hardware. The basic AI DC accuracy Table 6 of the DAQ mode provides accuracy entries when PCIe/PXIe-5113 operates in the single channel mode and within the indicated calibration temperature range. Please note that this accuracy is valid for every single point regardless how many sample points you acquire.

Each entry in the basic accuracy table is a pair of gain and offset coefficients. Using these gain and offset coefficients, your measurement accuracy can be calculated by following formula:

$$\text{Accuracy} = \pm(\% \text{ of Reading} + \% \text{ of Range})$$

For example, at the 2.5 V range and 24 Hours column, if your measurement or reading is 1V, the accuracy of this measurement is:

$$\pm(0.008\% * 1 + 0.052\% * 2.5) = \pm 0.00138 \text{ V} = \pm 1380 \mu\text{V}$$

The basic accuracy table also provides full-scale accuracy entries for a quick and convenient look-up. For example, the full-scale accuracy for the 2.5 V range and the 24-Hour calibration column is 1500 μV .

7.2. Basic AO Accuracy

The AO output accuracy of PCIe/PXIe-5113 when using the analog output function can be calculated according to the corresponding parameters in the Table 8

Each entry in the basic accuracy table is a pair of gain and offset coefficients. Using these gain and offset coefficients, your AO output basic accuracy is calculated by following formula:

$$\text{Accuracy} = \pm(\% \text{ of Output} + \% \text{ of Range})$$

For example, at the 10V range and 24 Hours column, if your output is 4V, the accuracy of this measurement is:

$$\pm(0.007\% * 4 + 0.018\% * 10) = \pm 0.00208V = \pm 2080 \mu V$$

The basic accuracy table also provides full-scale accuracy entries for a quick and convenient look-up. For example, the full-scale accuracy for the 5V range and the 24-Hour calibration column is 2500 μV .

8. Additional Software Information

8.1. System Requirements

The PCIe/PXle-5113 can be used in a Windows or a Linux operating system.

Microsoft Windows: Windows 7 32/64 bit, Windows 10 32/64 bit.

Linux Kernel Versions: There are many Linux versions. It is not possible JYTEK can support and test our devices under all different Linux versions. JYTEK supports the following Linux versions only.

Linux Version	
Ubuntu LTS	
16.04:	4.4.0-21-generic(desktop/server)
16.04.6:	4.15.0-45-generic(desktop) 4.4.0-142-generic(server)
18.04:	4.15.0-20-generic(desktop) 4.15.0-91-generic(server)
18.04.4:	5.3.0-28-generic (desktop) 4.15.0-91-generic(server)
Localized Chinese Version	
中标麒麟桌面操作系统软件（兆芯版）V7.0（Build61）: 3.10.0-862.9.1.nd7.zx.18.x86_64	
中标麒麟高级服务器操作系统软件V7.0U6: 3.10.0-957.el7.x86_64	

Table 14 Supported Linux Versions

8.2. System Software

When using the PCIe/PXle-5113 in the Window environment, you need to install the following software from Microsoft website:

Microsoft Visual Studio Version 2015 or above,

.NET Framework version is 4.0 or above.

.NET Framework is coming with Windows 10. For Windows 7, please check .NET Framework version and upgrade to 4.0 or later version.

Given the resources limitation, JYTEK only tested PCIe/PXle-5113 be with .NET Framework 4.0 with Microsoft Visual Studio 2015. JYTEK relies on Microsoft to maintain the compatibility for the newer versions.

8.3. C# Programming Language

All JYTEK default programming language is Microsoft C#. This is Microsoft recommended programming language in Microsoft Visual Studio and is particularly suitable for the test and measurement applications. C# is also a cross platform programming language.

8.4. PCIe/PXle-5113 Hardware Driver

After installing the required application development environment as described above, you need to install the PCIe/PXle-5113 hardware driver.

JYTEK hardware driver has two parts: the shared common driver kernel software (FirmDrive) and the specific hardware driver.

Common Driver Kernel Software (FirmDrive): FirmDrive is the JYTEK's kernel software for all hardware products of JYTEK instruments. You need to install the FirmDrive software before using any other JYTEK hardware products. FirmDrive only needs to be installed once. After that, you can install the specific hardware driver.

Specific Hardware Driver: Each JYTEK hardware has a C# specific hardware driver. This driver provides rich and easy-to-use C# interfaces for users to operate various PCIe/PXle-5113 function. JYTEK has standardized the ways which JYTEK and other vendor's DAQ boards are used by providing a consistent user interface, using the methods, properties and enumerations in the object-oriented programming environment. Once you get yourself familiar with how one JYTEK DAQ card works, you should be able to know how to use all other DAQ hardware by using the same methods.

Note that this driver does not support cross-process, and if you are using more than one function, it is best to operate in one process.

8.5. Install the SeeSharpTools from JYTEK

To efficiently and effectively use PCIe/PXle-5113 board, you need to install a set of free C# utilities, SeeSharpTools from JYTEK. The SeeSharpTools offers rich user interface functions you will find convenient in developing your applications. They are also needed to run the examples come with PCIe/PXle-5113 hardware. Please register and download the latest SeeSharpTools from our website, www.jytek.com.

8.6. Running C# Programs in Linux

Most C# written programs in Windows can be run by MonoDevelop development system in a Linux environment. You would develop your C# applications in Windows using Microsoft Visual Studio. Once it is done, run this application in the MonoDevelop environment. This is JYTEK recommended way to run your C# programs in a Linux environment.

If you want to use your own Linux development system other than MonoDevelop, you can do it by using our Linux driver. However, JYTEK does not have the capability to support the Linux applications. JYTEK completely relies upon Microsoft to maintain the cross-platform compatibility between Windows and Linux using MonoDevelop.

9. Operating JY5113

This chapter provides the operation guides for PCIe/PXle-5113, including AI, AO, DI, DO, Timer and programmable I/O interface, etc.

JYTEK provides extensive examples, on-line help and documentation to assist you to operate the PCIe/PXle-5113 board. JYTEK strongly recommends you go through these examples before writing your own application. In many cases, an example can also be a good starting point for a user application.

9.1. Quick Start

After you have installed the driver software and the SeeSharpTools, you are ready to use Microsoft Visual Studio C# to operate the PCIe/PXle-5113 products.

If you are already familiar with Microsoft Visual Studio C#, the quickest way to use PCIe/PXle-5113 board is to go through our extensive examples. We provide source code of our examples. In many cases, you can modify the source code and start to write your applications.

We also provide **Learn by Example** in the following sections. These examples will help you navigate and learn how to use this PCIe/PXle-5113.

9.2. Data Acquisition Methods

PCIe/PXle-5113 uses a scanning method to acquire analog data, meaning there is only one ADC chip on the device and all input channels share this ADC. In the scan acquisition mode, you need to configure AI channels and set up some parameters through PCIe/PXle-5113 driver software. The most important parameters are *Data Acquisition mode*, *Sample Rate*, *SamplesToAcquire*, *Channel Count*, *ChannelRange* and *Analog Input Terminal Type*.

AI Acquisition mode (AI Mode): PCIe/PXIe-5113 provides 4 acquisition modes, **Continuous, Finite, Single Point, Record**, which will be described in details in Section 9.2.1-9.2.4.

SampleRate: How fast data are acquired per second per channel. For example, if the sample rate is 1000Hz, you acquire two channels of data, you will have 2000 points/second.

SamplesToAcquire: This parameter behaves differently in the different AI acquisition modes. In the continuous acquisition mode, *SamplesToAcquire* is the buffer size used in the AI acquisition task, please see Section 9.2.1; in the finite acquisition mode, it is the total number of samples to capture, please see Section 9.2.2.

Channel Count: how many channels you want to collect data. You can set up the channels in different orders, for instance 2,3,1,0. The acquired data will be arranged in the way you specify as shown in Figure 2. In this particular case, *Channel Count* is 4.

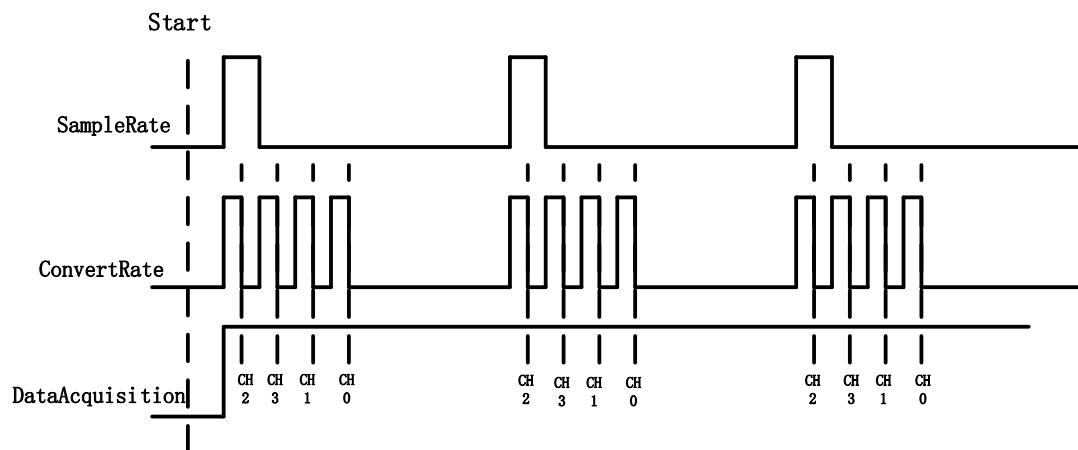


Figure 2 Sample Rate and Internal AD Conversion

ConvertRate denotes the working rate of ADC. In default: $ConvertRate = SampleRate * ChannelCount$. User can redefine the *ConvertRate* in our software. If user want to redefine *ConvertRate*, The following conditions must be met:

*Multichannel maximum sample rate (aggregate) $\geq \text{ConvertRate} \geq \text{SampleRate} * \text{ChannelCount}$.*

User can get Multichannel maximum sample rate (aggregate) from section Appendix.

Learn by Example 9.2

- Connect the two signal sources' positive outputs to PCIe/PXIe-5113 AI Ch0 (AI0+, Pin #11) and AI Ch1 (AI1+, Pin #13), two negative terminals to the ground (AI_GND, Pin #12). (AI0+, AI_GND) and (AI1+, AI_GND) consist of two channels of RSE inputs and they share the same GND.
- Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$) and a squarewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$).
- Open **Analog Input --> Winform AI Continuous MulitiChannel**, enable Ch0 and Ch1 and set the related parameters. This sample program will continuously acquire data from multiple channels.
- Sample Rate is set by Sample Rate(Sa/s). In this example, Sample Rate is 200,000 Sa/s.
- Samples to Acquire is the samples to be acquired for each channel in one block. The continuous mode will acquire blocks after blocks until Stop button is pressed. In this example, Samples to Acquire is 20000.
- When Start is clicked, the acquisition starts.
- The result is shown below.

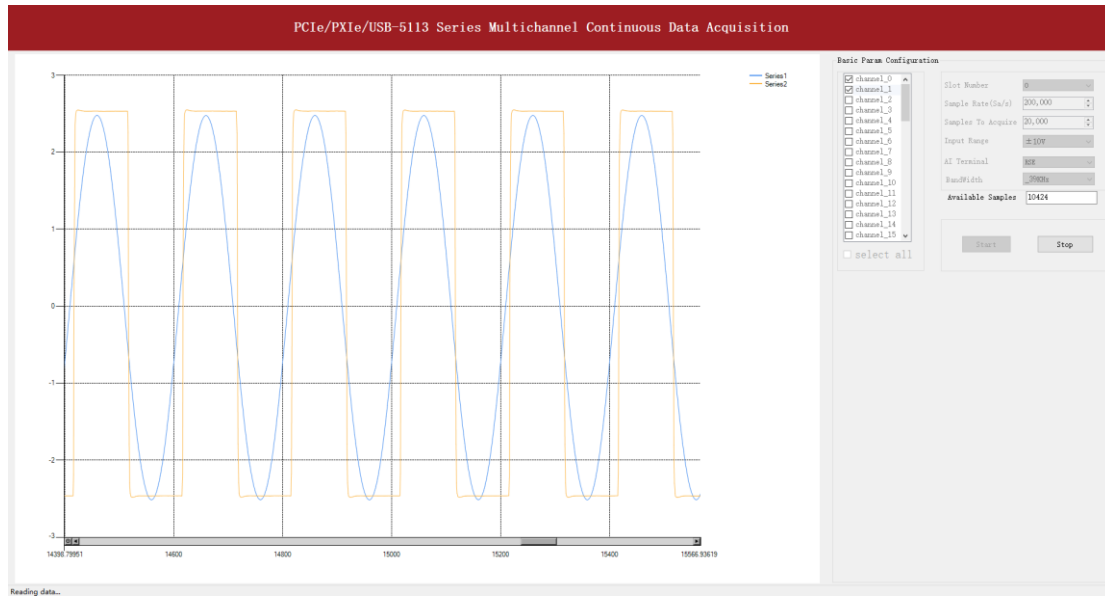


Figure 3 MultiChannel Continuous Acquisition

9.2.1. Continuous Acquisition

An AI acquisition task will acquire the data continuously until the task is stopped. The PCIe/PXIe-5113 device will continue acquiring data and save the data in a circular buffer. You specify how many samples to read back by the user buffer's length, if your program does not read the data fast enough, the circular buffer may overflow. In this case, the driver software will throw out an error message.

Tip: User buffer's length $1/10^{\text{th}}$ to $1/4^{\text{th}}$ *SampleRate* is a good start.

Learn by Example 9.2.1

- Connect the signal source's positive terminal to PCIe/PXIe-5113 AI Ch0 (AI0+, Pin #11), the negative terminal to the ground (AI_GND, Pin #12). (AI0+, AI_GND) consists of an RSE input.

- Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$).

- Open **Analog Input --> Winform AI Continuous**, set the numbers as shown. This sample program will continuously acquire data from a single channel.


■ Sample Rate is set by Sample Rate(Sa/s). In this example, Sample Rate is 200,000 Sa/s.

■ Samples to Acquire is the samples to be acquired in one block. The continuous mode will acquire blocks after blocks until Stop button is pressed. In this example, Samples to Acquire is 20000.

■ The acquisition begins immediately after clicking Start. The Available Samples keeps increasing and the waveform is displayed in real time.

■ Click Stop to stop the acquisition.

■ The result is shown below.

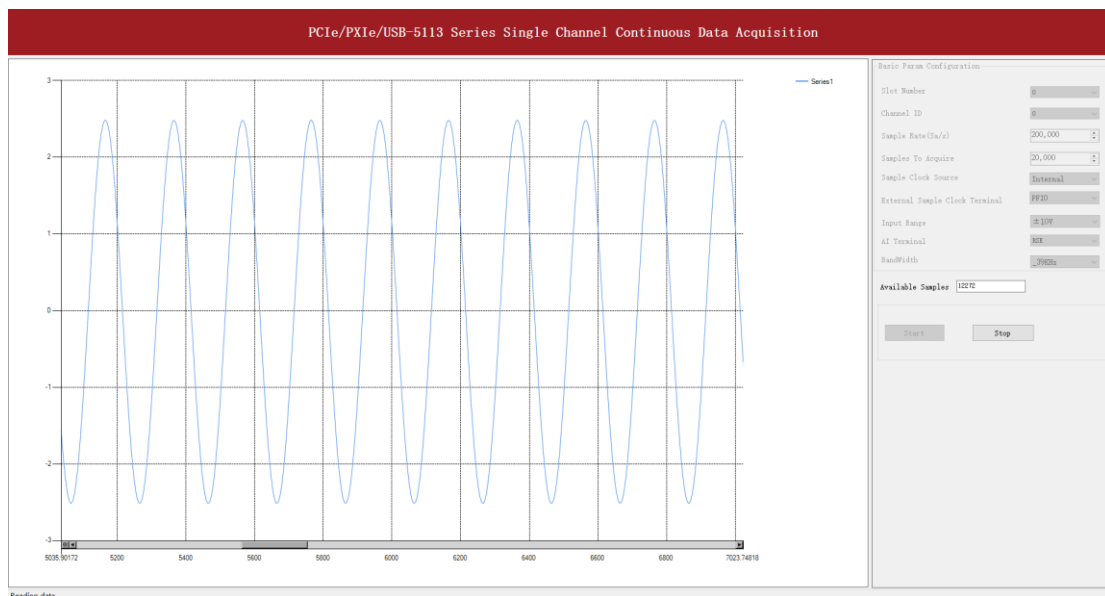

9.2.2. Finite Acquisition

In the Finite Acquisition mode, an AI acquisition task will capture specific total number of samples by the parameter, SamplesToAcquire.

You can use the sample program **Analog Input --> Winform AI Finite** to learn more about Finite Acquisition.

Learn by Example 9.2.2

■ Connect the signal source's positive terminal to PCIe/PXIe-5113 AI Ch0 (AI0+, Pin #11), the negative terminal to the ground (AI_GND, Pin #12). (AI0+, AI_GND) consists of an RSE input.

■ Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$).

■ Open **Analog Input --> Winform AI Finite**, enable Ch0 and set the numbers as shown. This sample program will acquire a finite number of samples.


■ Sample Rate is set by Sample Rate(Sa/s). In this example, Sample Rate is 200,000 Sa/s.

■ Samples to Acquire is the total number of samples to capture. In this example, Samples to Acquire is 1,000.

■ The acquisition stops automatically when the specified number of samples is reached.

■ Click Start to begin the acquisition.

■ The result is shown below.

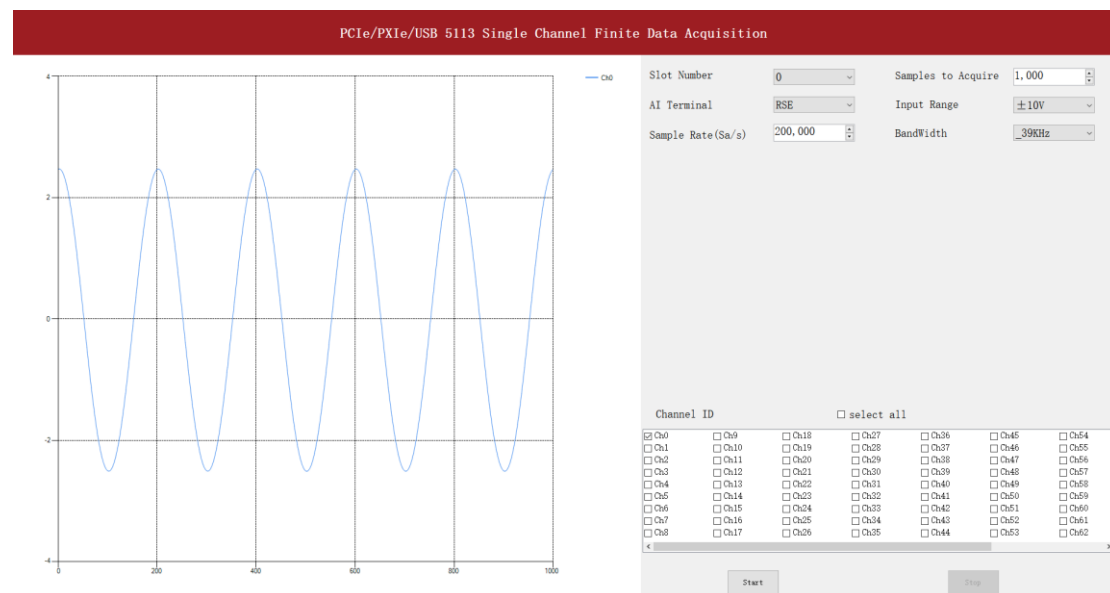


9.2.3. Single Point Acquisition

In the Single Acquisition mode, it is to capture a single sample for each acquisition.

You can use sample program: **Analog Input --> Console AI Single Point** to learn more about the single point Acquisition.

Learn by Example 9.2.3

- Connect the signal source's positive terminal to PCIe/PXle-5113 AI Ch0 (AI0+, Pin #11), the negative terminal to the ground (AI_GND, Pin #12). (AI0+, AI_GND) consists of an RSE input.
- Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$).
- Open **Analog Input --> Console AI Single Point**, input BoardNumber (0) and ChannelID (0) as shown. This sample program reads one voltage value at a time.
- After each reading, enter 1 to keep reading, or 0 to stop.
- The result is shown below. The read values (0.48V, 1.18V, 1.71V, 1.98V, 2.15V, 2.43V, 2.23V) are the instantaneous values of the sinewave at different times.

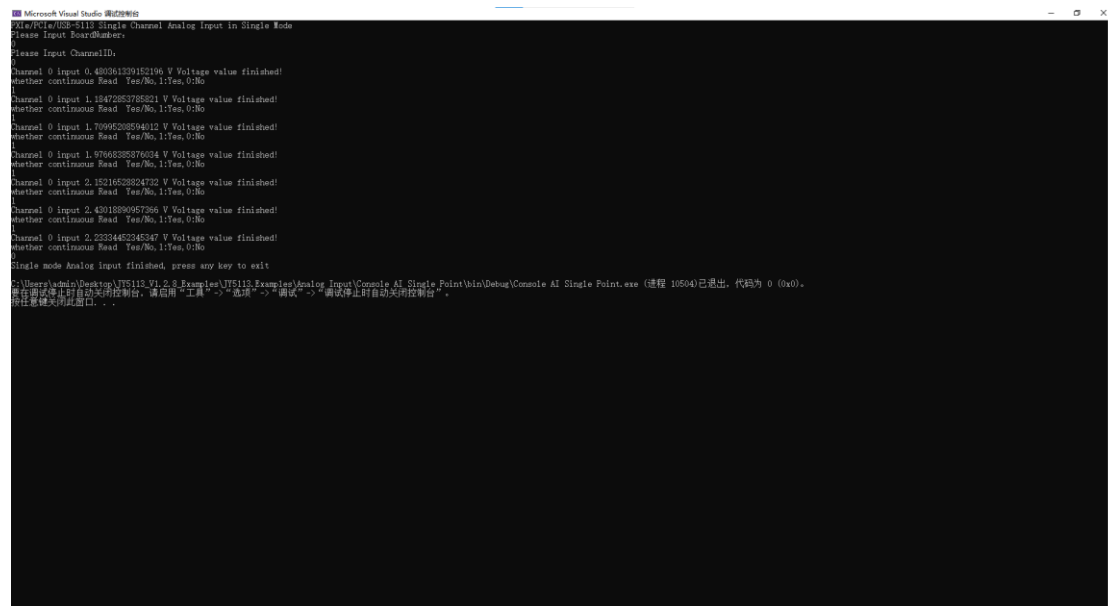

```

Microsoft Visual Studio 调试器
D:\Program Files\JYTEK\5113\Example\Analog Input\Single Point\Console AI Single Point.exe
Please Input BoardNumber:
Please Input ChannelID:
Channel 0 Input 0.48096139152196 V Voltage value finished!
whether continuous Read Yes/No, 1/Yes, 0/No:
Channel 0 Input 1.1847285378521 V Voltage value finished!
whether continuous Read Yes/No, 1/Yes, 0/No:
Channel 0 Input 1.7099530594612 V Voltage value finished!
whether continuous Read Yes/No, 1/Yes, 0/No:
Channel 0 Input 1.976682837604 V Voltage value finished!
whether continuous Read Yes/No, 1/Yes, 0/No:
Channel 0 Input 2.1521652824722 V Voltage value finished!
whether continuous Read Yes/No, 1/Yes, 0/No:
Channel 0 Input 2.430189095736 V Voltage value finished!
whether continuous Read Yes/No, 1/Yes, 0/No:
Channel 0 Input 2.2334452345347 V Voltage value finished!
whether continuous Read Yes/No, 1/Yes, 0/No:
Single mode Analog Input finished, press any key to exit
D:\Program Files\JYTEK\5113\Example\Analog Input\Single Point\Console AI Single Point.exe (进程 18504) 已退出。 代码为 0 (0x0)。
按任意键继续。

```



9.2.4. Record Acquisition

AI Task will continuously capture the data and then save them to a storage disk. During the capturing process, user can preview the captured data randomly when the

capturing process is available. The mode is particularly useful for high-speed acquisition and recording applications.

Learn by Example 9.2.4

- Connect the signal source's positive terminal to PCIe-5113 AI Ch0 (AI0+, Pin #11), the negative terminal to the ground (AI_GND, Pin #12). (AI0+, AI_GND) consists of an RSE input.
- Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$).
- Open **Record --> Winform AI Finite Streaming**, set the numbers as shown. This sample program acquires data and streams it to a disk file (.bin).
- Sample Rate is set by Sample Rate(Sa/s). In this example, Sample Rate is 200,000 Sa/s .
- Record Preview Data is the number of preview points displayed per block. In this example, it is 1,000.
- Record Time (s) is the recording duration. In this example, it is 3 seconds (600,000 samples per channel in total).
- Click Start to begin recording. The data is saved to the selected File Path with a .bin file, and the recording stops automatically after the Record Time.
- To verify the recorded data, open **Record --> Winform AI Data Playback**, click Open File to select the .bin file, and click Start Playback to play back the waveform. Data Read Per Channel increases until all samples are played back.
- The results are shown below.

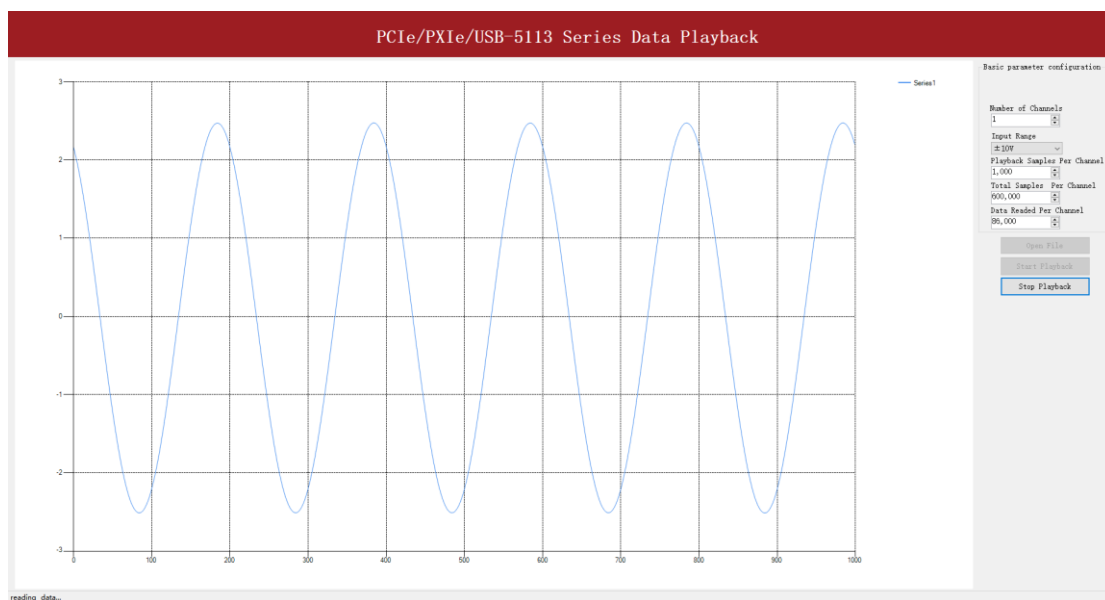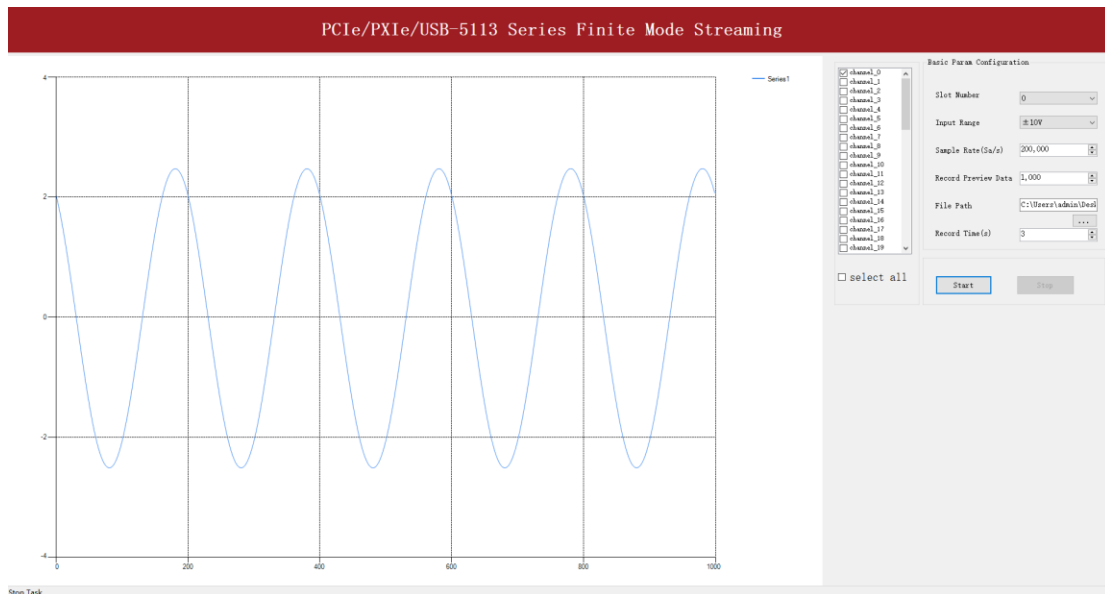

9.3. Analog Input Terminal Type

The PCIe/PXIe-5113 provide 2 analog input terminal types:

- Differential (DIFF)
- Referenced Single-Ended (RSE)

The DIFF connection is recommended for ground-referenced signal sources and it is usually better in rejecting the common-mode noise. However, to acquire one input signal, two AI channels are required to form the differential pair. The RSE is recommended when the input signal sources are floating signals. In RSE mode, these floating signal sources all share the same ground reference (AI_GND). Because of it, the RSE mode can acquire twice as many channels than the DIFF mode. Appendix has more details on these 2 modes.

9.3.1. DIFF Mode

The DIFF mode connects signal's positive side to AI's positive input, signal's grounded negative side to AI's negative input as shown in Figure 4. The common noise appears on both positive and negative terminals of the differential amplifier; thus it will be cancelled out. Therefore, the DIFF mode has better signal-to-noise ratio (SNR). Please see Appendix for more explanations.

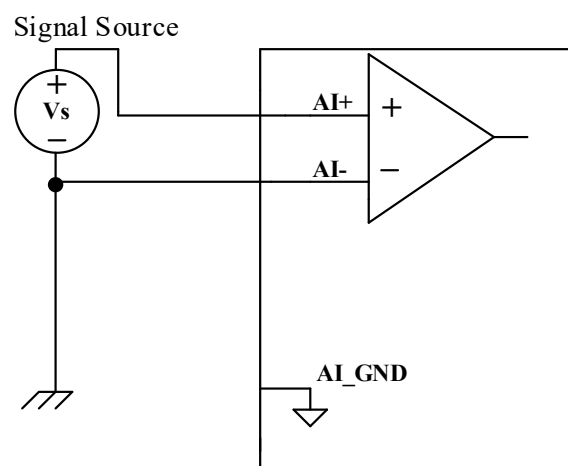


Figure 4 Differential Mode for Grounding Signals

The following figures show the actual collected voltage range diamond plots in DIFF mode for three ranges: $\pm 10V$ (Figure 4), $\pm 5V$ (Figure 4), and $\pm 2.5V$ (Figure 4).The inputs at both ends V_{in+} and V_{in-} must be within the range.

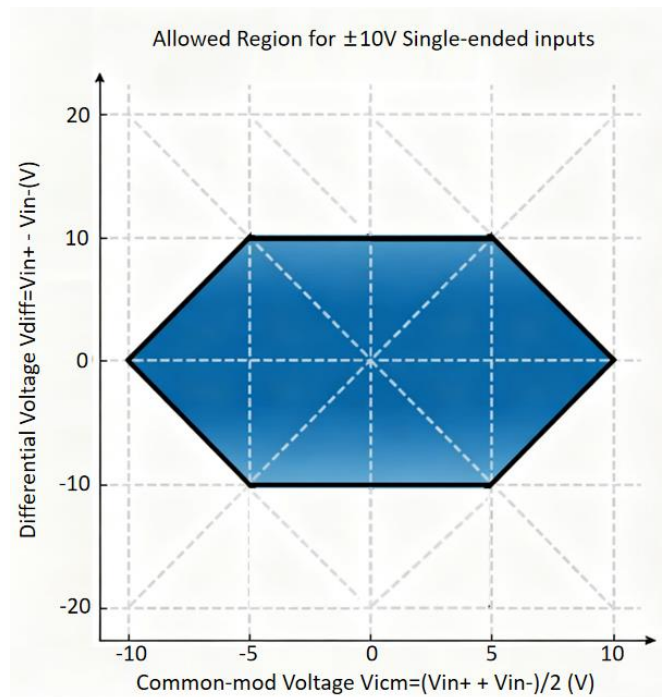


Figure 5 10V Range Diamond Plot

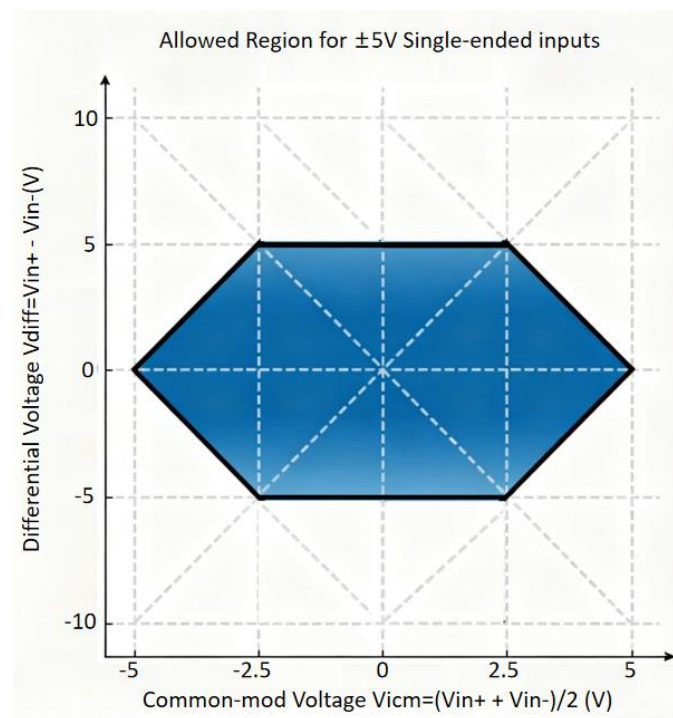


Figure 6 5V Range Diamond Plot

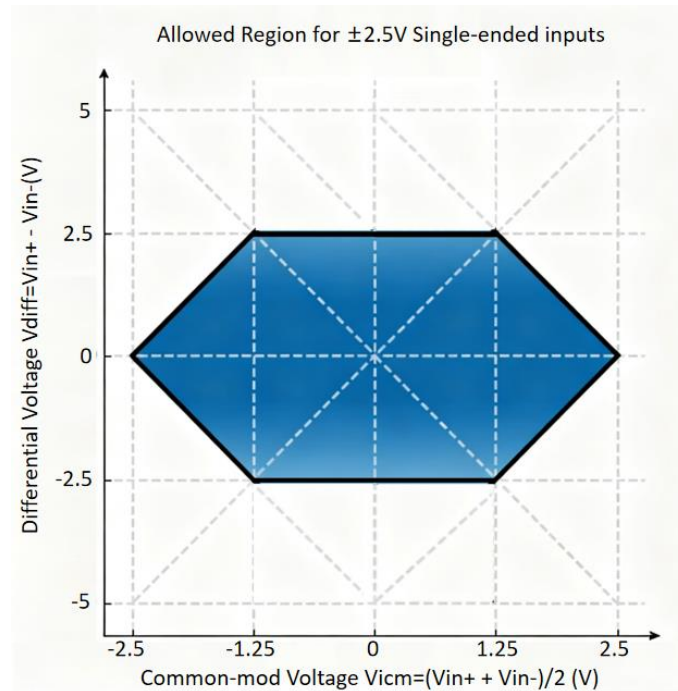


Figure 7 2.5V Range Diamond Plot

Learn by Example 9.3.1

- Open Analog Input → **Winform AI Continuous MultiChannel**.
- Connect the two signal sources' positive outputs to AI Ch0 (AI0+, Pin #11) and AI Ch1 (AI1+, Pin #13), and the two negative terminals to AI0- (Pin #45) and AI1- (Pin #47), and the signal grounds to AI_GND. (AI0+, AI0-) and (AI1+, AI1-) form two pairs of DIFF inputs.
- Set a sinewave signal ($f = 1 \text{ kHz}$, $V_{pp} = 5 \text{ V}$) and a squarewave signal ($f = 1 \text{ kHz}$, $V_{pp} = 5 \text{ V}$).
- Choose Differential in AI Terminal.
- Set Sample Rate = 200,000 Sa/s and Samples to Acquire = 20,000, then click Start.

The two channels are acquired in differential mode and displayed in real time.

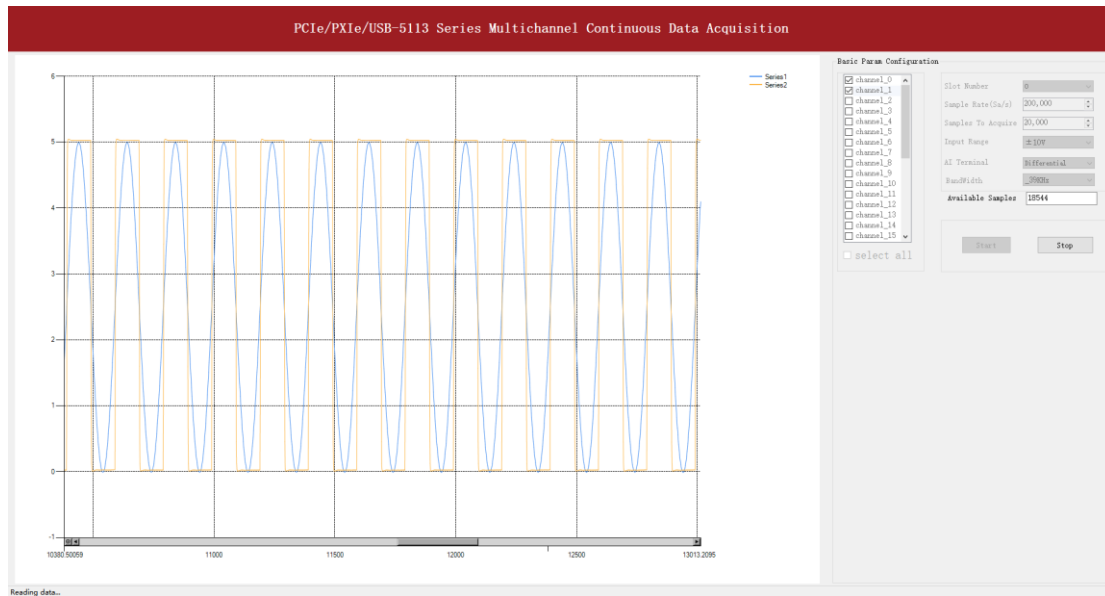


Figure 8 Choose Differential in AI Terminal

9.3.2. RSE Mode

In the RSE mode, all input signals' negative sides are connected to the AI ground of Instrumentation Amplifier, as shown in Figure 9. This mode works for measurements from floating sources. The RSE mode is suitable when these two conditions exist:

- The input signals are floating, meaning they are not connected to the ground
- When the common mode noise is low, meaning a clean environment.

The RSE mode offers twice as many measurement channels as the DIFF mode. Please see Appendix for more explanations.

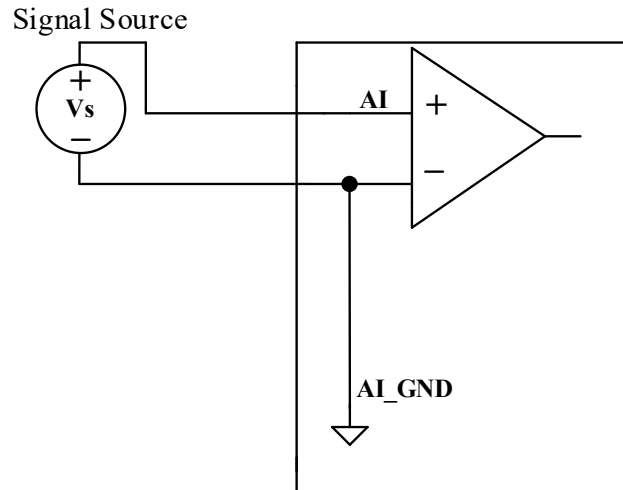


Figure 9 RSE Mode for Floating Signals

9.4. Trigger Source

There are 4 trigger types: Immediate trigger, Software trigger, Analog trigger, and Digital trigger. The trigger type is a property and set by driver software.

9.4.1. Immediate trigger

This trigger mode does not require configuration and is triggered immediately when an operation starts. The operation can be AI, AO, DI, DO, CI, CO etc.

Learn by Example 9.4.1

- Use the same program and connection as in **Learn by Example 9.2.**
- With Immediate trigger, you can click Start to generate the task instead of sending a trigger signal. The acquisition begins immediately after clicking Start.
- The result is shown below.

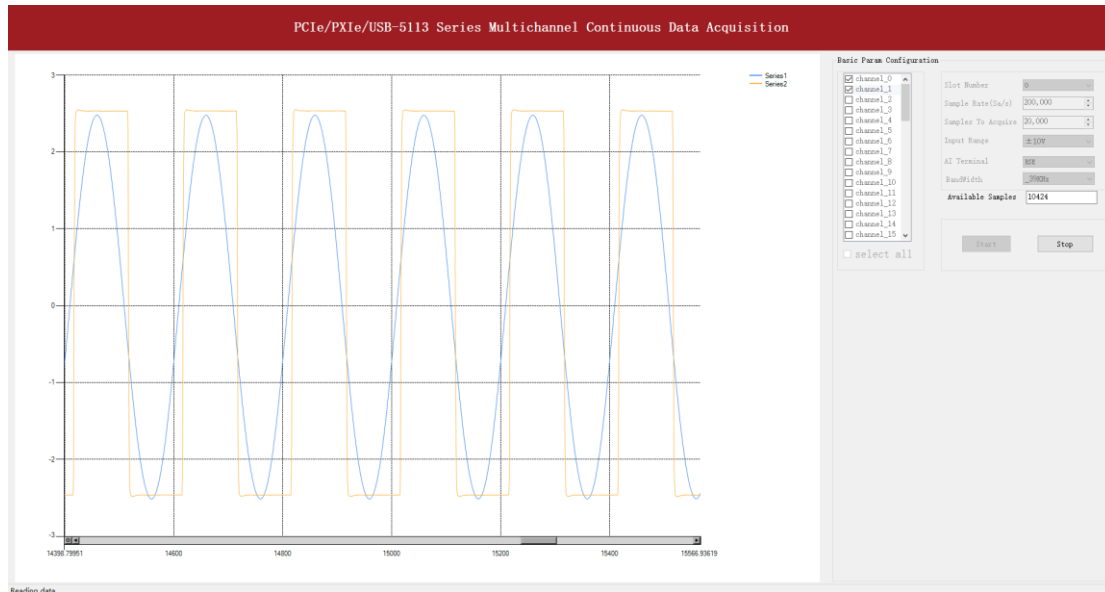


Figure 10 Immediate trigger Parameters

9.4.2. Software Trigger

A software trigger must be configured by the driver software. The trigger starts when a trigger software routine is called.

Learn by Example 9.4.2

- Connect the signal source's positive terminal to PCIe/PXIe-5113 AI Ch0 (AI0+, Pin #11), the negative terminal to the ground (AI_GND, Pin #12). (AI0+, AI_GND) consists of an RSE input.
- Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$).
- Open **Analog Input --> Winform AI Finite Soft Trigger**, set the numbers as shown. This sample program starts the acquisition when a software trigger is sent.
- Sample Rate is set by Sample Rate(Sa/s). In this example, Sample Rate is 200,000 Sa/s.
- Samples to Acquire is the samples to be acquired in one block. In this example, Samples to Acquire is 1,000.
- Click Start to prepare the task, then click Send Soft Trigger. The acquisition begins at the moment the soft trigger is sent.
- The result is shown below.

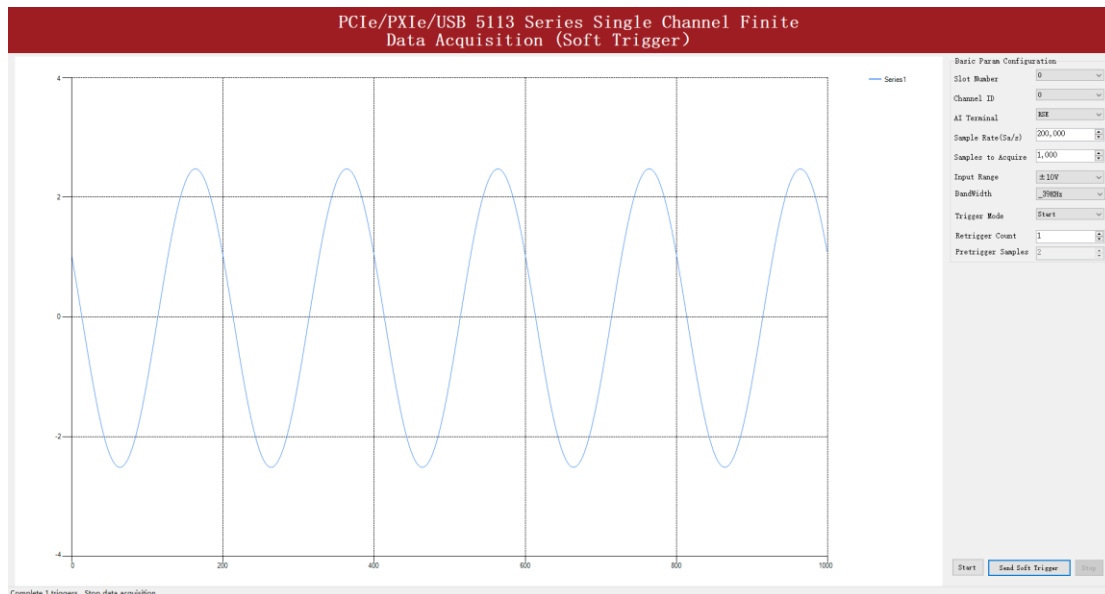


Figure 11 Software trigger Acquisition

9.4.3. External Analog Trigger

You can assign one of measurement channels as the analog trigger source. PCIe/PXIe-5113 provides three analog trigger modes:

- Edge comparator,
- Hysteresis comparator,
- Window comparator.

Analog trigger threshold range can be arbitrarily selected in the effective range of the selected channel. When setting the threshold, please pay attention to the physical unit currently in use.

Edge comparator

In the Edge comparator, there are two trigger conditions: *Rising Slope Trigger* and *Falling Slope Trigger*.

Rising Slope Trigger: The Edge comparator output is high when the signal goes above the threshold; the output is low when the signal goes below the threshold as shown in 错误!不能识别的开关参数。2.

Falling Slope Trigger: The Edge comparator output is high when the signal goes below the threshold; the output is low when the signal goes above the threshold as shown in 错误!不能识别的开关参数。3.

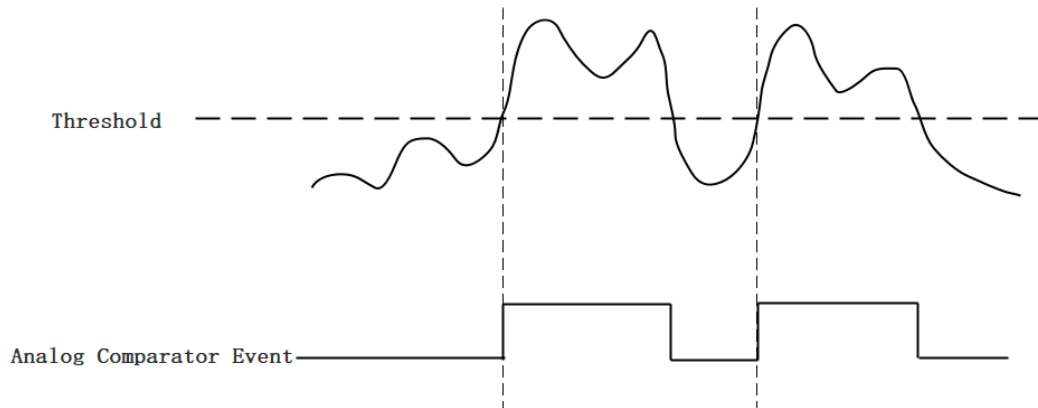


Figure 12 Rising Slope Trigger

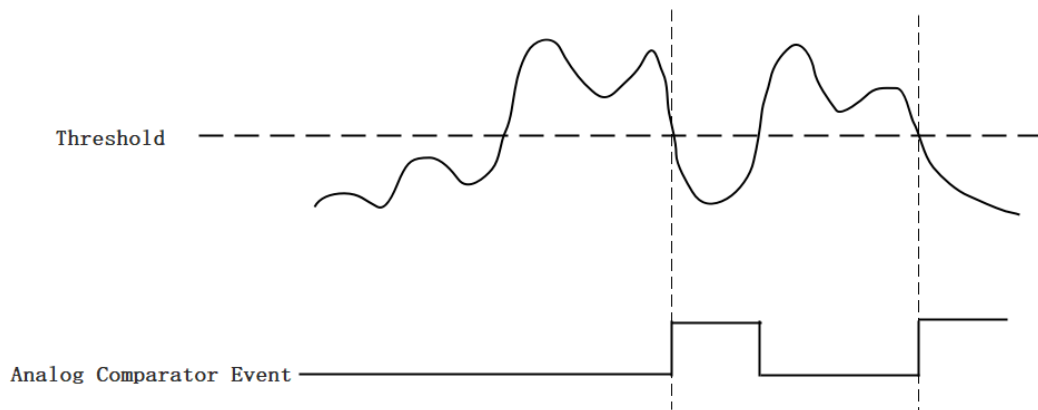


Figure 13 Falling Slope Trigger

Hysteresis Comparator

The hysteresis comparator is designed for preventing spurious triggering. You can set hysteresis region by setting high threshold and low threshold. There are two trigger conditions: *Hysteresis with Rising Slope Trigger* and *Hysteresis with Falling Slope Trigger*.

Hysteresis with Rising Slope Trigger: The Hysteresis comparator output is high when the signal must first be below the low threshold, then goes above the high threshold.

The output will change to low when the signal goes below the low threshold as shown in Figure 14.

Hysteresis with Falling Slope Trigger: The Hysteresis comparator output is high when the signal must first be above the high threshold, then goes below the low threshold. The output will change to low when the signal goes above the high threshold as shown in Figure 15.

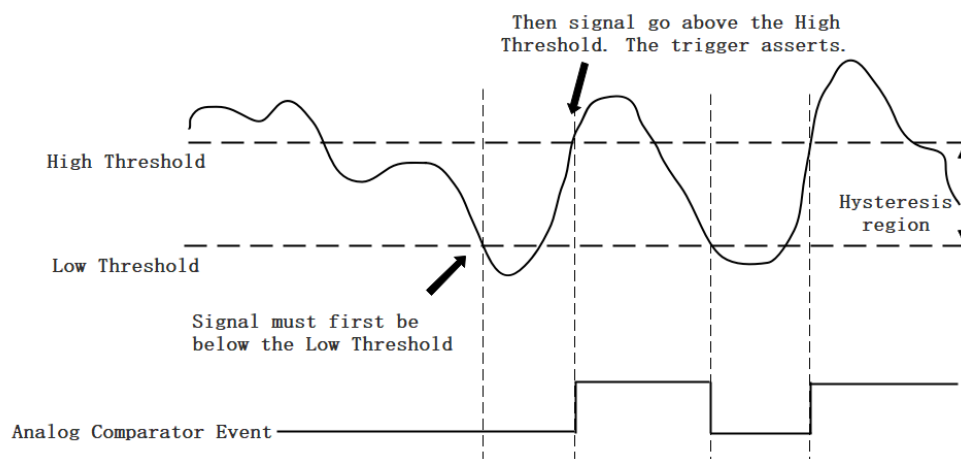


Figure 14 Hysteresis with Rising Slope Trigger

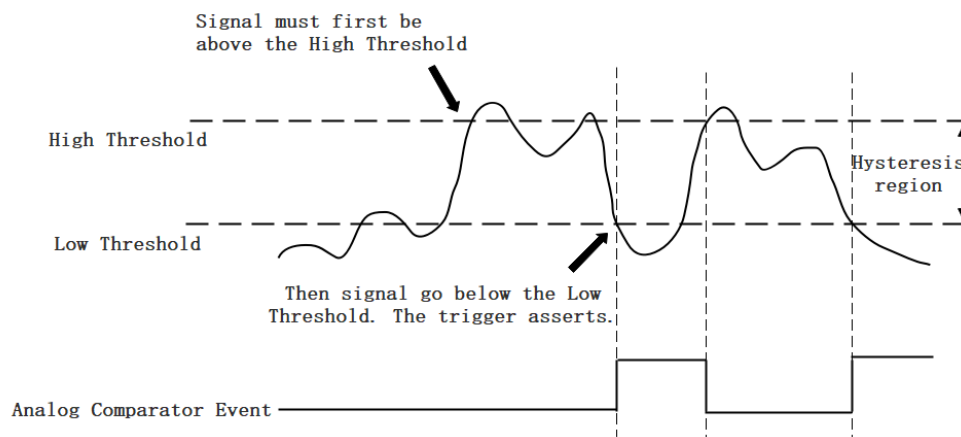


Figure 15 Hysteresis with Falling Slope Trigger

Window comparator

The window comparator is designed to acquire signal from interesting window by setting High Threshold and Low Threshold. There are two trigger conditions: *Entering Window Trigger* and *Leaving Window Trigger*.

Entering Window Trigger: The window comparator output is high when the signal enters the window defined by the *Low Threshold* and *High Threshold*. The output will change to low when the signal leaves the window as shown in Figure 166.

Leaving Window Trigger: The window comparator output is high when the signal leaves the window defined by the *Low Threshold* and *High Threshold*. The output will change to low when the signal enters the window as shown in Figure 17 Leaving Window Trigger.

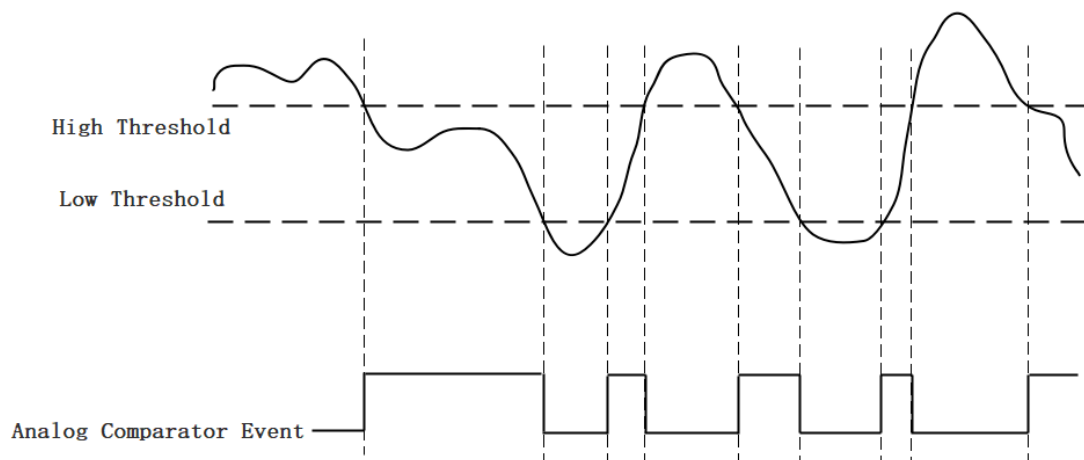


Figure 16 Entering Window Trigger

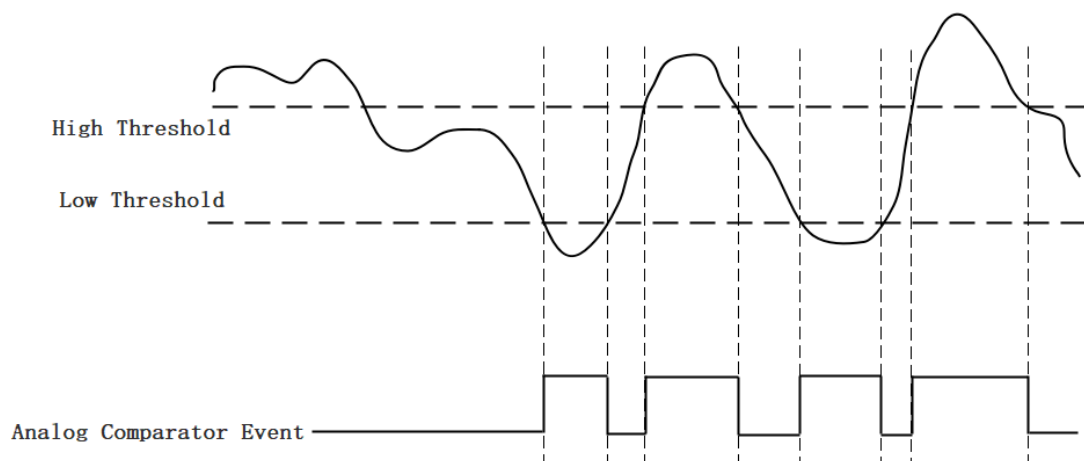


Figure 17 Leaving Window Trigger

Learn by Example 9.4.3

- Connect the signal source's positive terminal to PCIe/PXIe-5113 AI Ch0 (AI0+, Pin #11), the negative terminal to the ground (AI_GND, Pin #12). (AI0+, AI_GND) consists of an RSE input.
- Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$). This signal is also used as the analog trigger source.
- Open **Analog Input --> Winform AI Finite Analog Trigger**, set the numbers as shown. This sample program starts the acquisition when the analog signal meets the trigger condition.
- Set the trigger parameters, in this example, Trigger Source = Channel 0 (AI0), Trigger Comparator = Edge, Trigger Edge = Rising, Threshold = 2V.
- Set Sample Rate(Sa/s) to 200,000 and Samples to Acquire to 1,000 as shown.
- Click Start and wait. The acquisition starts only when the signal crosses 2V on the rising edge.
- The result is shown below.

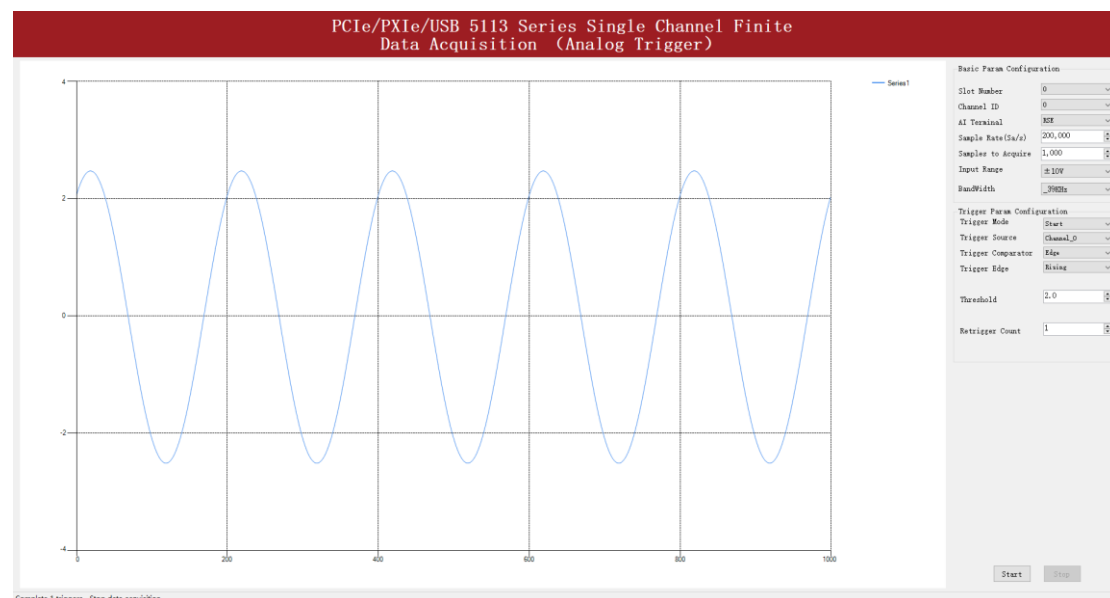


Figure 18 Analog Trigger Acquisition

9.4.4. External Digital Trigger

PCIe/PXIe-5113 supports different external digital trigger sources from PXI Trigger bus (PXI_TRIG<0..7>), PXI_STAR and connectors of front panel (PFI). The high pulse width

of digital trigger signal must be longer than 20 ns for effective trigger. The module will monitor the signal on digital trigger source and wait for the rising edge or falling edge of digital signal which depending on the set trigger condition, then cause the module to acquire the data as shown in 错误!不能识别的开关参数。9.



Figure 19 External Digital Trigger

Learn by Example 9.4.4

- Connect the signal source's positive terminal to PCIe/PXle-5113 AI Ch0 (AI0+, Pin #11), the negative terminal to the ground (AI_GND, Pin #12). (AI0+, AI_GND) consists of an RSE input.
- Connect the digital trigger signal's positive terminal to PFI0 (Connector 0 Pin #1), the negative terminal to the ground (DGND, Pin #35). (PFI0, DGND) provides the trigger signal.
- Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$) for AI Ch0, and a squarewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$) as the digital trigger.
- Open **Analog Input --> Winform AI Finite Digital Trigger**, set the numbers as shown. This sample program starts the acquisition on the specified edge of an external digital signal.
- Set the trigger parameters as shown: Trigger Source = PFI0, Trigger Edge = Rising.
- Set Sample Rate(Sa/s) to 200,000 and Samples to Acquire to 1,000 as shown.
- Click Start and wait. The acquisition begins when the rising edge of the trigger signal arrives, and the waveform is displayed in real time.
- The result is shown below.

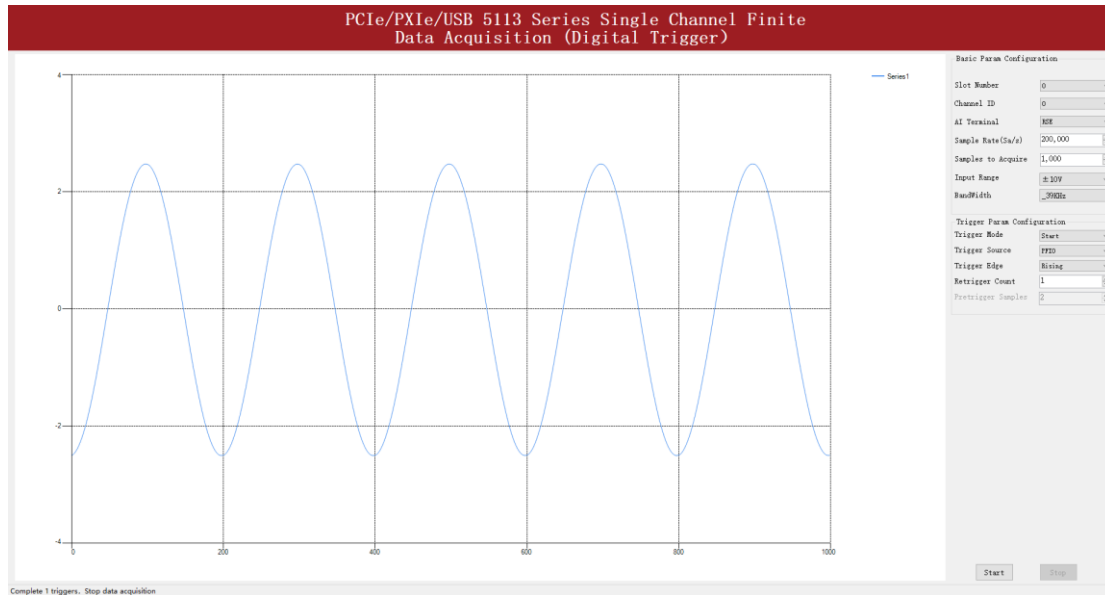


Figure 20 Digital Trigger Acquisition

- Since the squarewave is used for the digital trigger source, when a rising edge of the squarewave occurs, the digital trigger will be activated, and the data acquisition will start.

9.5. Trigger Mode

The PCIe/PXIe-5113's analog inputs support several trigger modes: start trigger, reference trigger, and re-trigger.

9.5.1. Start Trigger

In this mode, data acquisition begins immediately after the trigger. This trigger mode is suitable for continuous acquisition and finite acquisition. As shown in 错误!不能识别的开关参数。1.

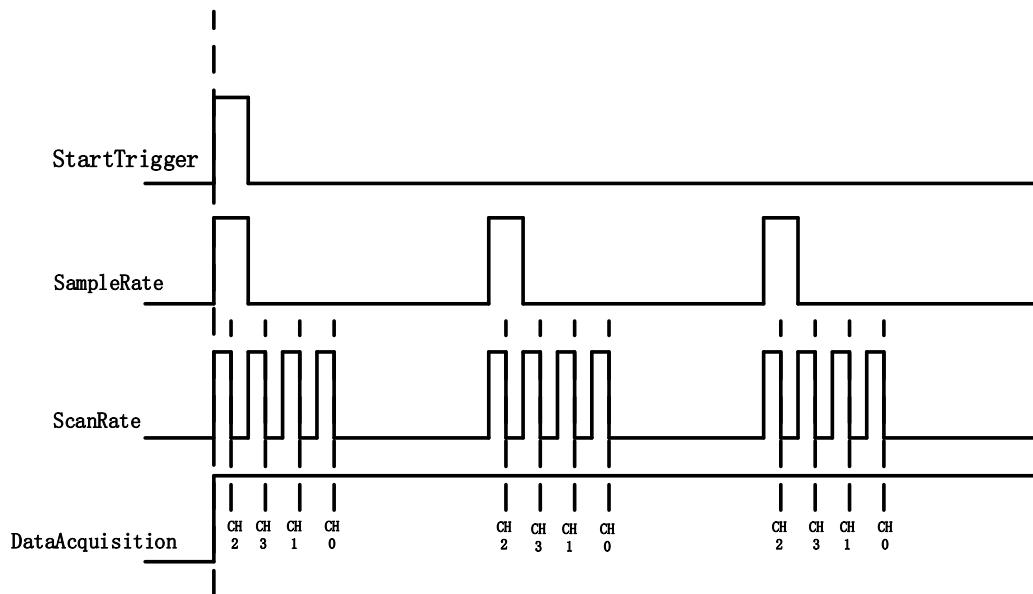


Figure 21 Start Trigger

9.5.2. Reference Trigger

This trigger mode is suitable for finite acquisition. In this mode, user can set the number of pre-trigger samples. The default number of pre-trigger points is 0. First you need to start the data acquisition. When the reference trigger condition is met, the routine will return the acquired data points. If when the points less than the pre-trigger samples, the trigger signal be ignored. An example is show below.

Example

- Total samples: 1000;
- Channel Count: 1
- Pre-trigger samples: 10;
- After triggering, it returns total 1000 samples, 10 being pre-triggered, 990 after triggering

The principle is shown in 错误!不能识别的开关参数。2.

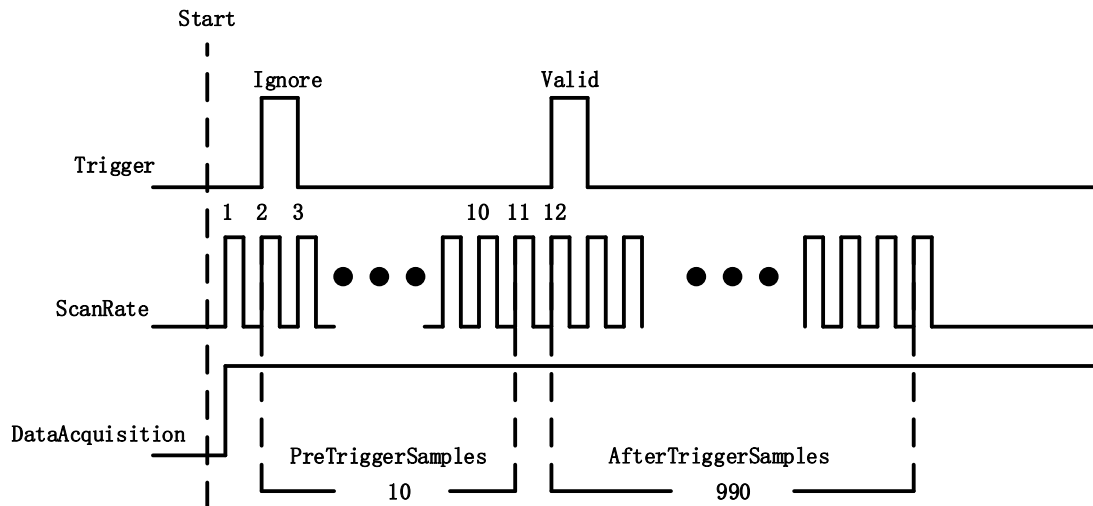


Figure 22 Reference Trigger

9.5.3. ReTrigger

PCIe/PXIe-5113 supports retrigger mode. In the retrigger mode, you can set the number of retrigger and the length of each acquisition. Assuming that the number of re triggers is n and the length of each trigger acquisition is m , the length of all acquisition data is $n * m * \text{channelcount}$. Show in 错误!不能识别的开关参数。3.

When the number of retrigger is - 1, it is infinite.

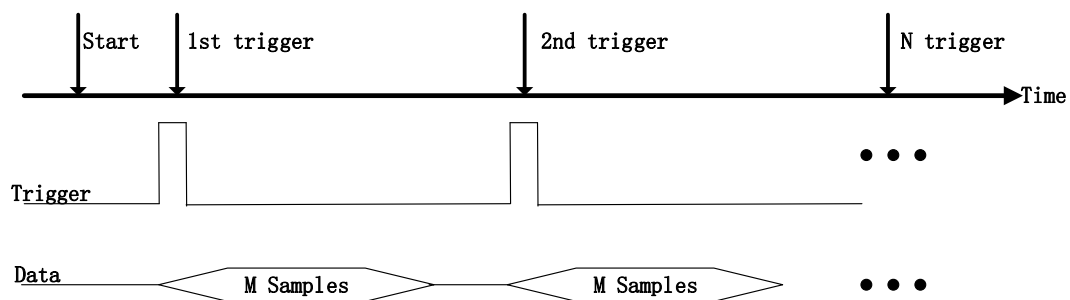


Figure 23 ReTrigger

Learn by Example 9.5

- Use the same connection and program as in Learn by Example 9.4.3 (**Winform AI Finite Analog Trigger**).Set a sinewave signal ($f=1\text{kHz}$, $V_{pp}=5\text{V}$).

- Open **Analog Input-->Winform AI Finite Analog Trigger**, set the following numbers as shown.

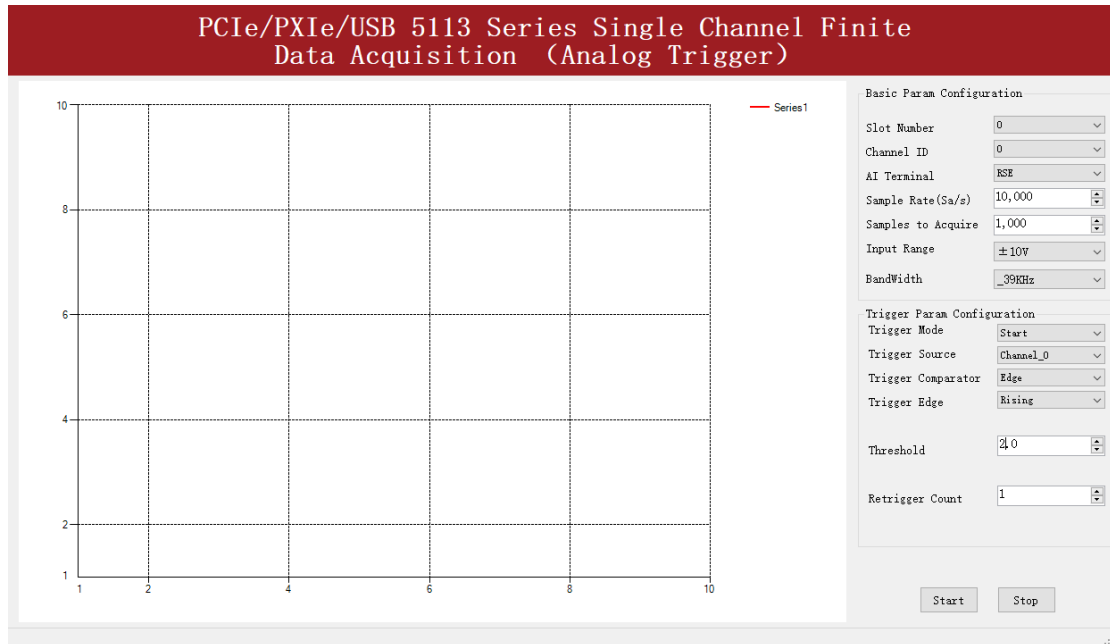


Figure 24 Retrigger Parameters

- You can use three different kinds of triggers in this program as mentioned in **9.5**. *Start Trigger* and *Reference Trigger* can be set by **Trigger Mode**. For *ReTrigger* can be used by changing the numbers in **Retrigger Count**.
- PretriggerSamples is set by **Pretrigger Samples**.
- Now the trigger is a **Start Trigger**. Click **Start** to begin the data acquisition, the result is shown below:

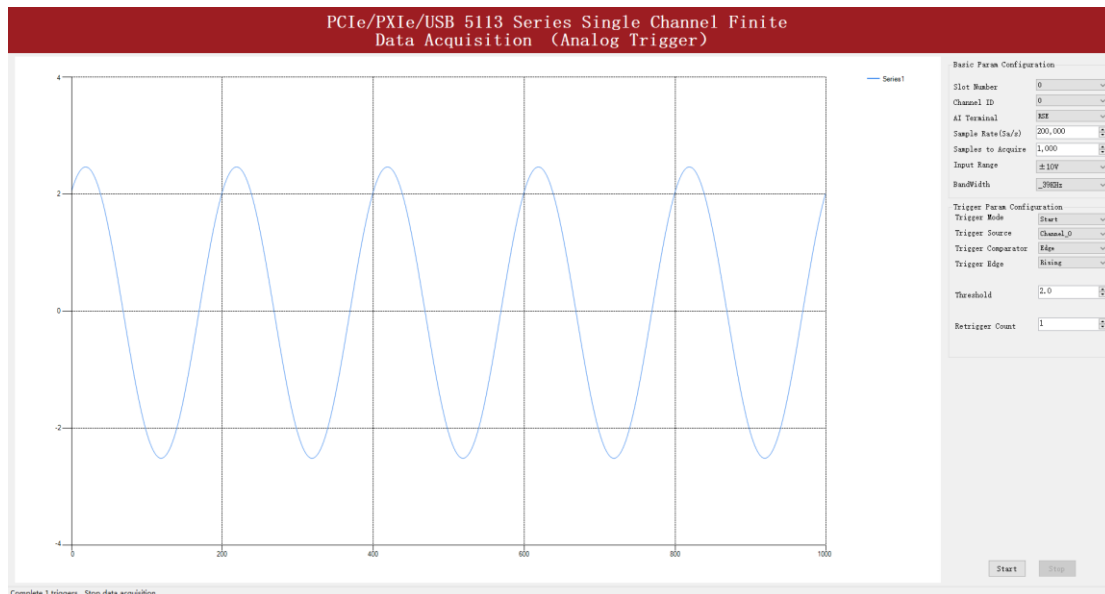


Figure 25 Retrigger In Start Trigger Mode

- Reference Trigger: set Trigger Mode = Reference and Pretrigger Samples = 100.
Click Start; the acquisition starts at the trigger point and also keeps the 100 samples before the trigger.

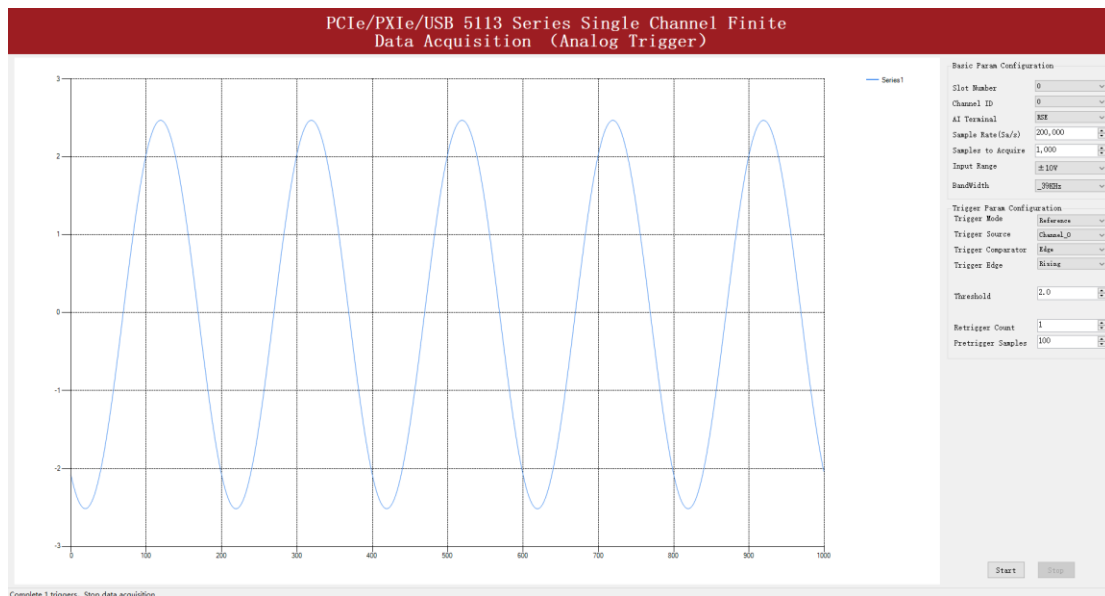


Figure 26 Retrigger In Reference Trigger Mode

- You can see the horizontal movement between two signals due to the change of **Trigger Mode**.

- ReTrigger: set Retrigger Count = 3 (a value other than 0) and click Start; a trigger occurs each time the signal crosses the threshold on the rising edge, and after 3 triggers the acquisition stops .

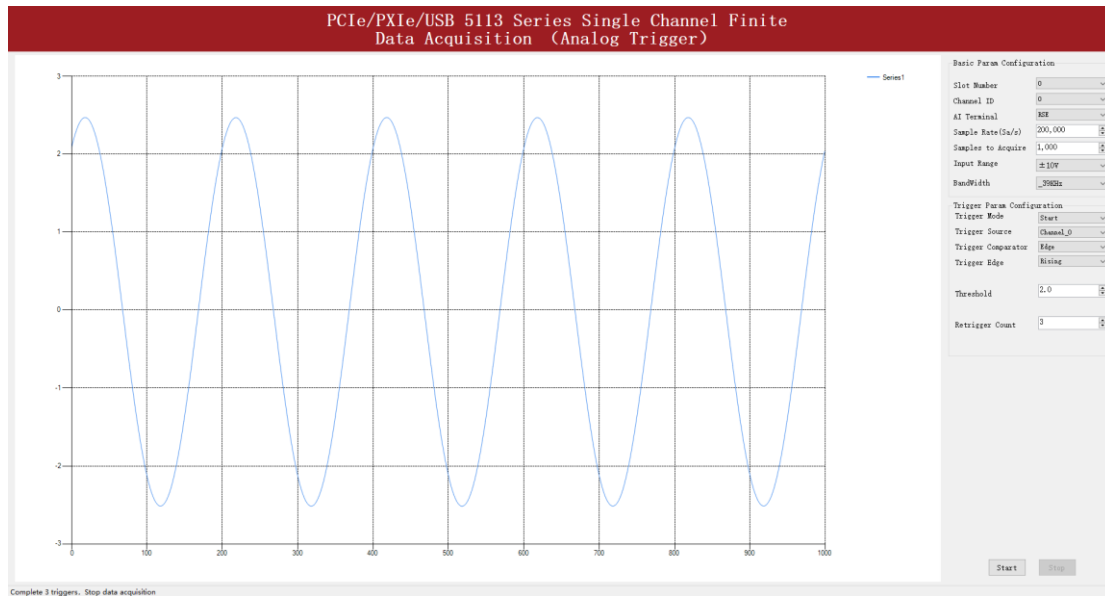


Figure 27 Complete Retrigger Count

- It shows the acquisition process through every trigger signal.

9.6. AO Operations

The PCIe/PXIe-5113 AO provides 16-bit simultaneous outputs. The analog output has three modes of operation: Finite, ContinuousWrapping, and ContinuousNoWrapping.

9.6.1. Finite Output

The finite output requires the user to write a piece of data. After starting the AO, it starts to output the written data until the output is completed.

Learn by Example 9.6.1

- Connect PCIe/PXIe-5113 AO0 (Pin #9) to the oscilloscope probe and AO0_GND (Pin #43) to the oscilloscope ground.
- Open Analog Output -> **Winform AO Finite**.
- Slot Number = 0; Channel ID = 0.

- Update Rate(Sa/s) = 20,000; Samples to Update = 200,000.
- Wave Type = Sine; Wave Amplitude = 5 V; Wave Frequency = 1,000.
- Click Start; the board outputs the 200,000 samples once at 20,000 Sa/s and stops automatically; the oscilloscope shows a 1 kHz, 5 V sinewave.

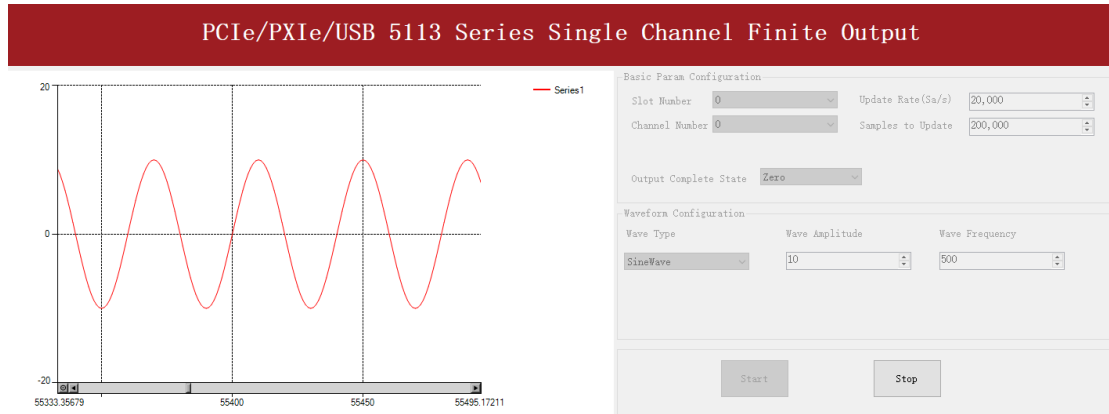



Figure 28 AI Continuous Parameters

9.6.2. Continuous NoWrapping Output

The continuous acyclic output needs to write a piece of data before starting the AO. After the AO starts, user needs to continuously write new data to ensure the continuous output of the AO.

Learn by Example 9.6.2

- Connect PCIe/PXIe-5113 AO0 (Pin #9) to the oscilloscope probe and AO0_GND (Pin #43) to the oscilloscope ground.
- Open **Analog Output-->Winform AO Continuous NoWrapping**, set the following numbers as shown.
- Click Start and the result is shown below.

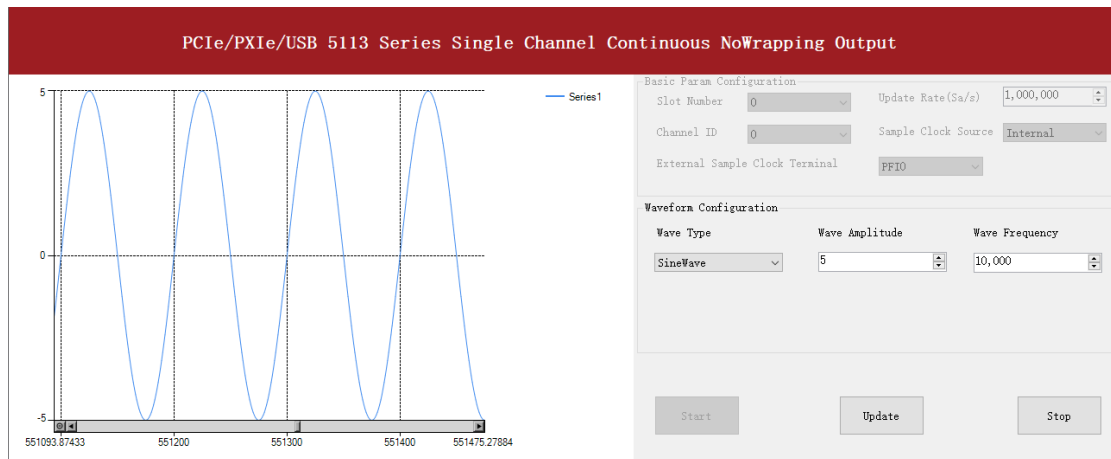

9.6.3. Continuous Wrapping Output

The continuous loop output first writes a piece of data before starting the AO. After the AO starts, the board will repeatedly output this data until user sends a stop command.

Learn by Example 9.6.3

- Connect PCIe/PXIe-5113 AO0 (Pin #9) to the oscilloscope probe and AO0_GND (Pin #43) to the oscilloscope ground.
- Open **Analog Output-->Winform AO Continuous Wrapping**, set the following numbers as shown.
- Click Start and the result is shown below.

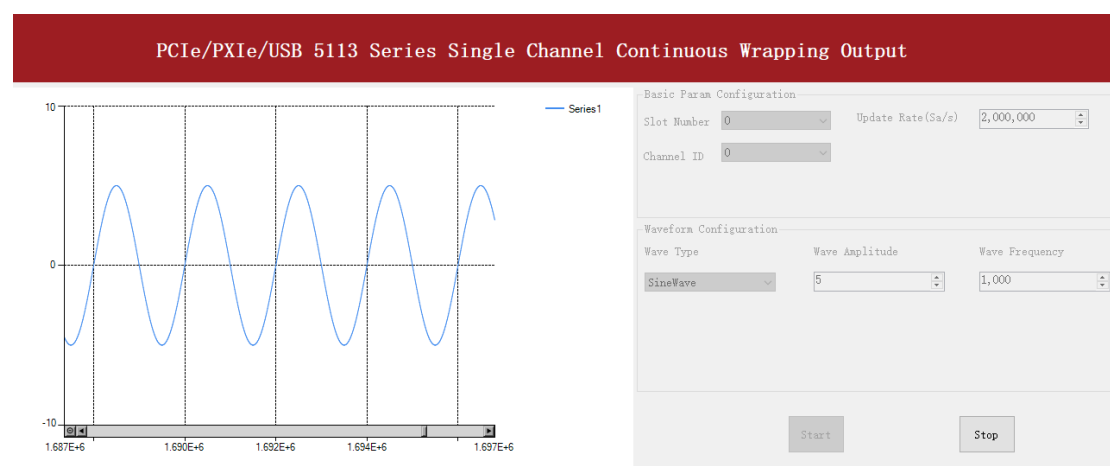


Figure 29 AI Continuous Parameters

9.7. Digital I/O Operations

The PCIe/PXle-5113 provides powerful programmable digital I/O functions.

9.7.1. Static DI/DO

Programmable I/O supports static TTL, 16 digital I/O channels. User can access these I/O information through software polling.

Learn by Example 9.7.1

■ Connect the oscilloscope probe to PCIe/PXle-5113 PFI 0 / DIO_0 (Connector 0 Pin #1), and the ground lead to D_GND (Connector 0 Pin #35). (PFI 0 / DIO_0, D_GND) provides the digital output signal for observation.

■ Open **Digital Output --> Winform DO SinglePoint**.

■ Set Slot Number to 0, Line to 0, and select HighLevel(true).

■ Click Start to output high level.

■ The oscilloscope displays approximately 5V DC level.

■ Change the setting to LowLevel(false) and click Start.

■ The oscilloscope displays approximately 0V DC level. The result matches the software configuration.



Figure 30 Single Digital Output

9.7.2. Dynamic DI/DO

The PCIe/PXle-5113 supports both dynamic DI/DO operation with a maximum sample rate (update rate) of up to 10MHz. User can acquire or output digital waveforms in this way.

Learn by Example 9.7.2

■ Connect the oscilloscope probe to PCIe/PXIe-5113 PFI 0 / DIO_0 (Connector 0 Pin #1), and the ground lead to D_GND (Connector 0 Pin #35). (PFI 0 / DIO_0, D_GND) provides the digital output signal for observation.

■ Open **Digital Output --> Winform DO Continuous NoWrapping**.

■ Set Slot Number to 0, Update Rate to 1000000 Sa/s, Signal Frequency to 1000 Hz, and Duty Cycle to 0.5.

■ Click Start to generate the digital waveform.

■ The oscilloscope displays a square wave with frequency 1 kHz, period 1 ms, high level 5V, and low level 0V. The output continues until Stop is clicked.

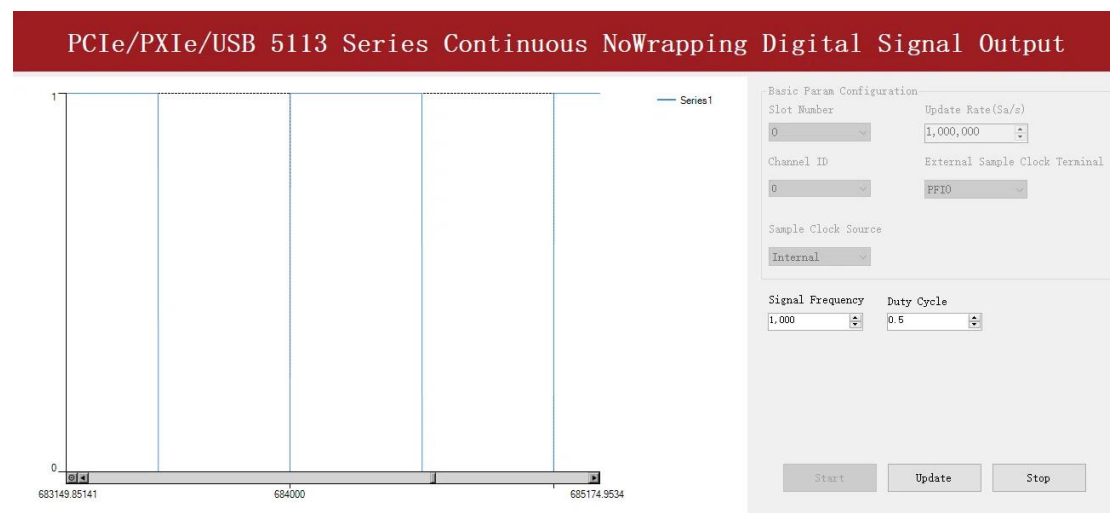


Figure 31 DO ContinuousNoWrapping Output

9.8. Counter Input Operations

The PCIe/PXIe-5113 has four or two identical 32 bits timers/counters.

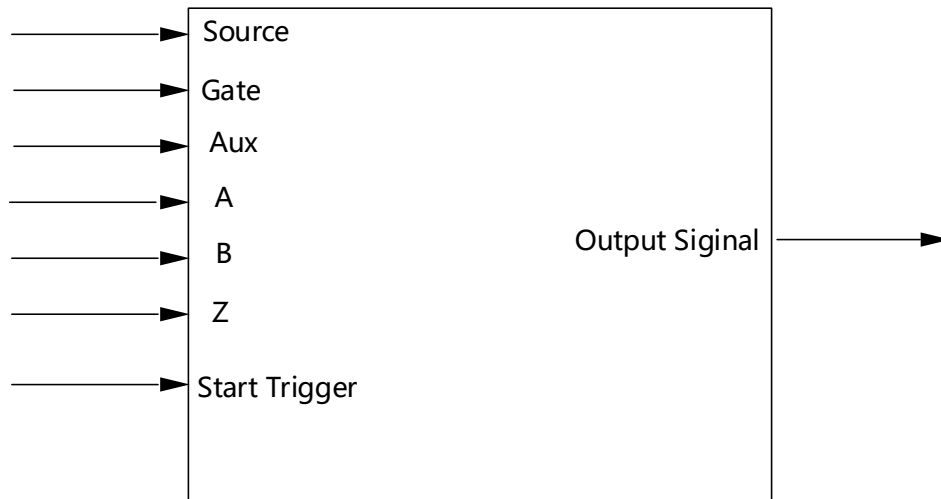


Figure 32 Counter Terminal

Each counter has seven input terminals and one output terminal, and these terminals have different functions in different counter input application types, including:

- Edge Counting
- Pulse Measurement
- Frequency Measurement
- Period Measurement
- Two-Edge Separation
- Quadrature Encoder (X1, X2, X4)
- Two-Pulse Encoder

For buffered acquisition, each counter has a separate DDR storage space and requires a sample clock.

For each counter input application type, the measured signal needs to be connected to different terminals, as shown in the following table.

Measured Signal	Terminal
Edge Counting	Source
Pulse Measurement	Gate
Frequency Measurement	Gate
Period Measurement	Gate
Two-Edge Separation	Gate、Aux
Quadrature Encoder (X1, X2, X4)	A、B、Z
Two-Pulse Encoder	A、B

Figure 33 Counter Signal Wiring Instruction

9.8.1. Edge Counting

The counter counts the number of active edges of input signal.

Timing

1) Single Mode

The count value is written to the register on each rising edge or falling edge of the signal to measure as shown in 错误!不能识别的开关参数。4.

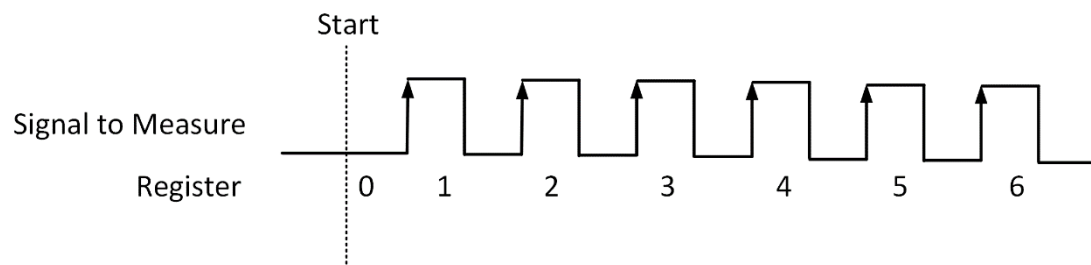


Figure 34 Simple Edge Counting in Single Mode

2) Finite/Continuous Mode with Internal Sample Clock

The count value is stored into the buffer on each rising edge or falling edge of the sample clock as shown in Figure 355.

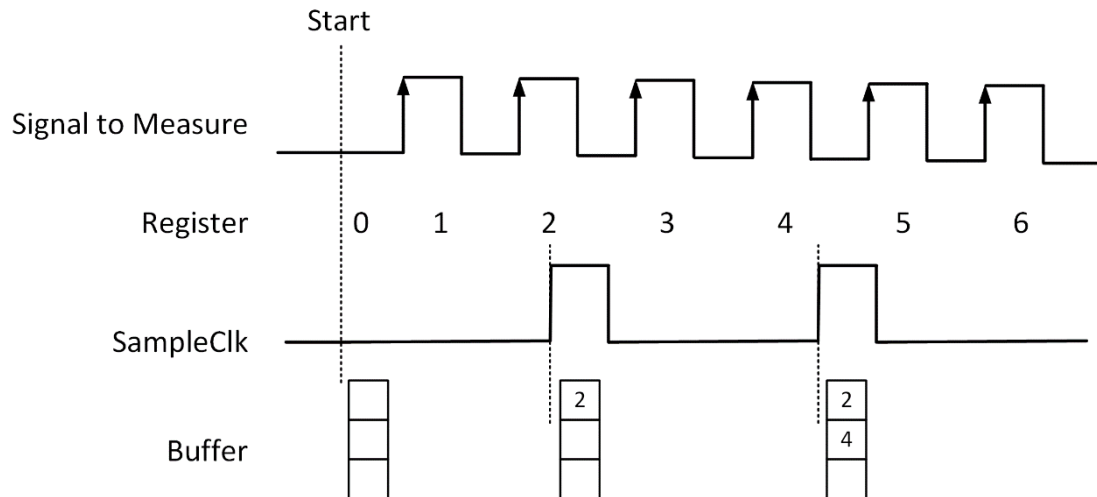


Figure 35 Buffered Edge Counting with Internal Sample Clock

3) Finite/Continuous Mode with Implicit Sample Clock

The count value is stored into the buffer on each rising edge or falling edge of the signal to measure as shown in Figure 366.

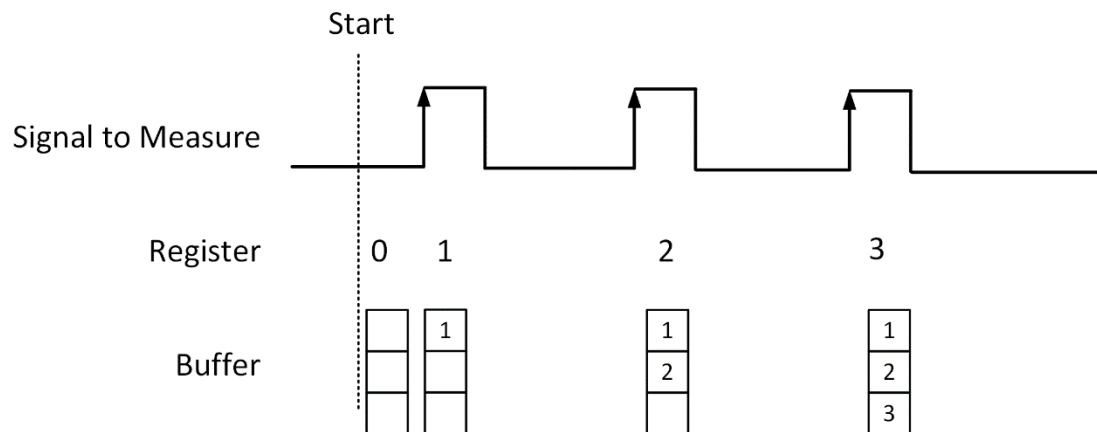


Figure 36 Simple Edge Counting with Implicit SampleClk

Counting Direction

User can control the counting direction through software configuration or by an input signal with Gate terminal. When using an input signal to control the counting direction, the counter counts up when the signal is high and counts down when the signal is low as shown in 错误!不能识别的开关参数。7.

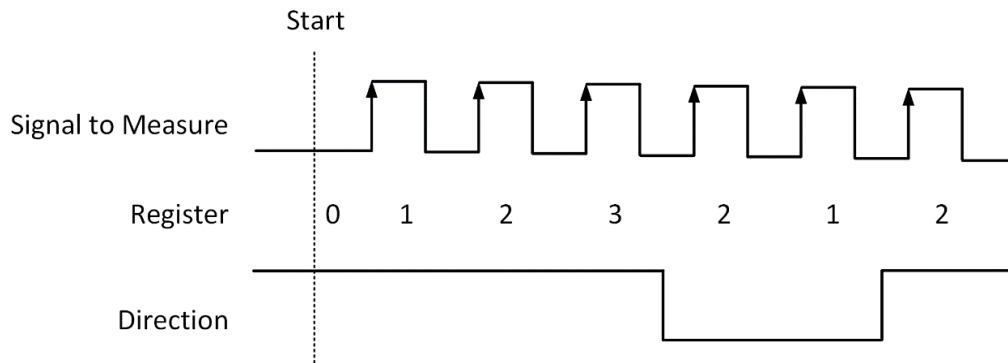


Figure 37 Count Direction

Learn by Examples9.8.1

- Connect the signal source's positive terminal of a signal source to PCIe/PXIe-5113 counter0's edge counting source (CTR0_Source/A, Pin#1), negative terminal to the ground (DGND, Pin#35). (CTR0_Source, DGND) consists of an edge counting counter input and they share the same ground.
- Set a squarewave signal (f=1Hz, Vpp=5V).

Single Mode

- Open **Counter Input-->Winform CI Single EdgeCounting**, set the following numbers as shown:

PCIe/PXIe/USB-5113 Series Single EdgeCounting

Basic Param Configuration

Slot Number: OutEvent Threshold:

Counter ID: OutEvent IdleState:

Init Count: PauseTrigger Terminal:

Counter Direction: PauseTrigger ActivePolarity:

Count Result

Counter Value:

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 38 EdgeCounting For Single Mode

- Counter Direction is set by **Counter Direction**.
- The table in the sample program is a connection diagram for your convenience.

- The *rising edge counter* works when Start is clicked.
- The result is shown by **Counter Value**. In this example the **Counter Value** increases by 1 every second for a 1Hz squarewave.

Finite/Continuous Mode

- Change the squarewave frequency to 50 Hz.
- Open **Counter Input-->Winform CI Finite/Continuous EdgeCounting**, set the following numbers as shown:

PCIe/PXIe/USB-5113 Series Finite EdgeCounting

Basic Param Configuration

Slot Number	0	Init Count	0
Counter ID	0	Sample Rate	100
Counter Direction	Up	Samples to Acquire	10
Clock Source	Internal	External Clock Terminal	PFI1

Start
Stop

CounterValues

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 39 EdgeCounting For Finite Mode

- The table in the sample program is a connection diagram for your convenience.
- Counter Direction is set by **Counter Direction**.
- There are two clock sources in PCIe-5113 *Internal* and *Implicit*: This example uses **Internal** mode set by **Clock Source**.
- Click Start to start counting by rising edge. The result is shown below:

CounterValues
0
1
1
2
2
3
3
4
4
5

Figure 40 Counter Values For Internal Clock

➤ The numbers are stored in a buffer **CounterValues**.

■ Change the **Clock Source** to **Implicit**:

CounterValues
2
3
4
5
6
7
8
9
10
11

Figure 41 Counter Values For Implicit Clock

- The numbers are stored in a buffer **CounterValues**.
- The counter values are different as before because of the change from **Clock Source**.

9.8.2. Pulse Measurement

The counter measures the high-level and low-level duration of signal.

Timing

1) Single Mode

The count value of the duration of the high-level or low-level is written to the register on each rising or falling edge of the pulse to measure, as shown in 错误!不能识别的开关参数。2.

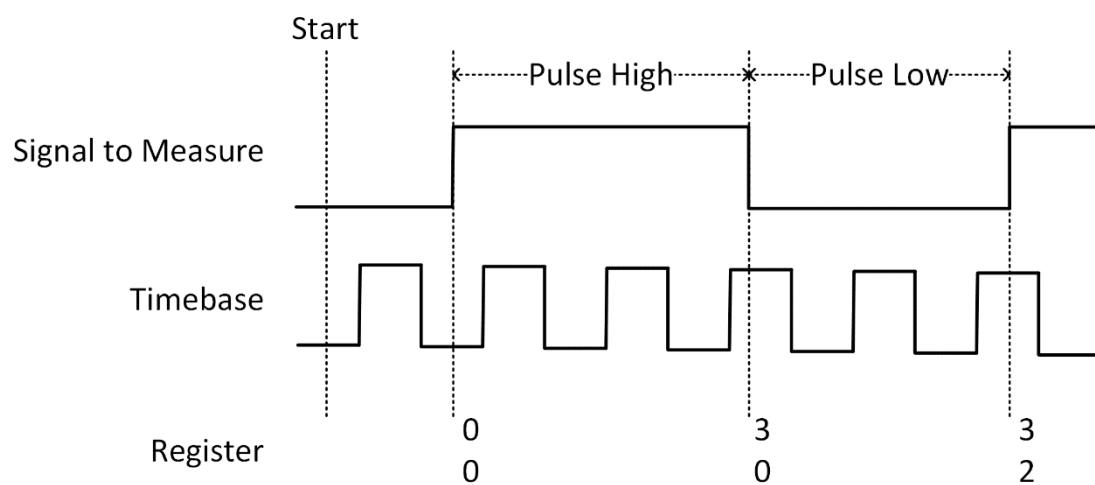


Figure 42 Pulse Measurement in Single Mode

2) Finite/Continuous Mode with Internal Sample Clock

The count value of the duration of the high or low level is stored into the buffer on each rising or falling edge of the sample clock, as shown in 错误!不能识别的开关参数。3.

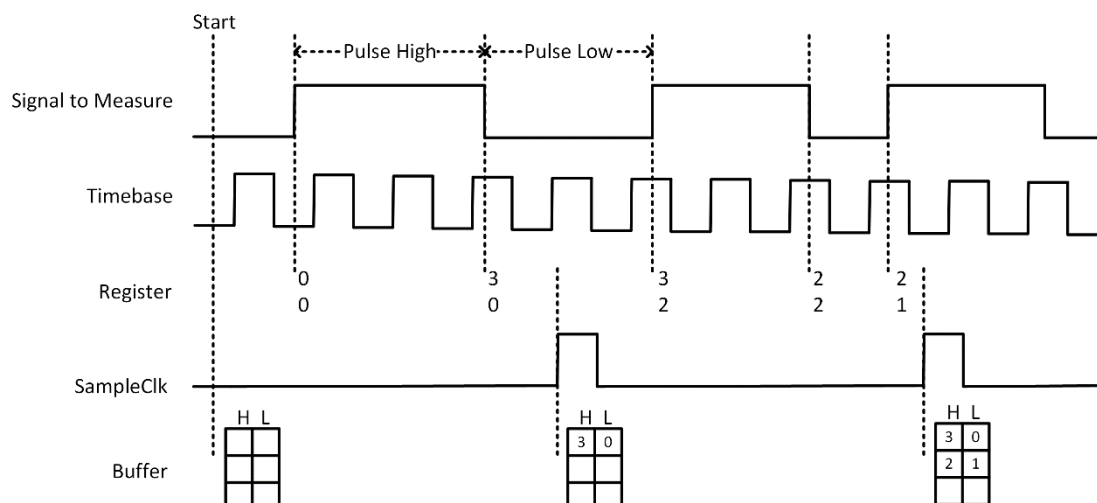


Figure 43 Pulse Measurement with Internal SampleClk

3) Finite/Continuous Mode with Implicit Sample Clock

The count value of the duration of the high-level or low-level is stored into the buffer on each rising or falling edge of the pulse to measure, as shown in 错误!不能识别的开关参数。4.

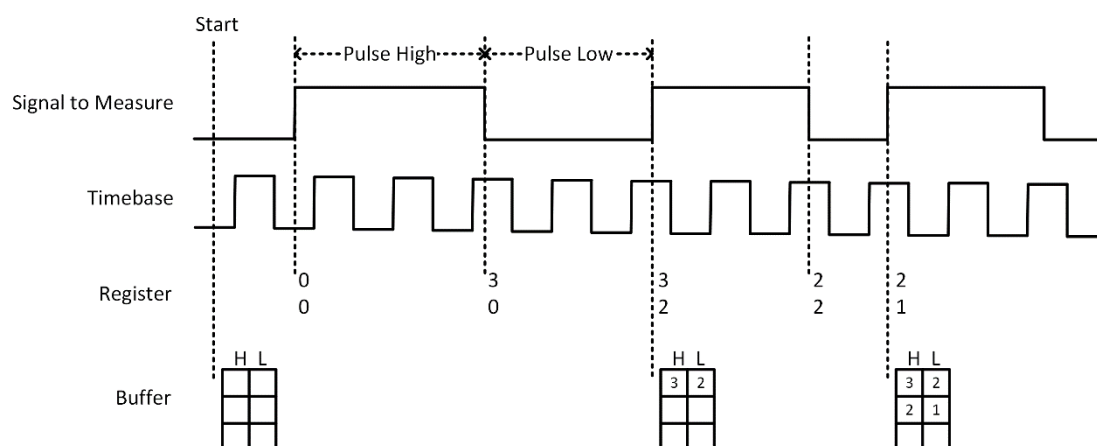


Figure 44 Pulse Measurement with Implicit SampleClk

Learn by Examples 9.8.2

- Connect the signal source's positive terminal to PCIe/PXIe-5113 counter0's pulse measure source (CTR0_Gate/Z, Pin#2), negative terminal to the ground (DGND, Pin#36). (CTR0_Gate/Z, DGND) consists of a pulse measure counter input and they share the same ground.

- Set a squarewave signal (f=1Hz, Duty Cycle=50%, Vpp=5V).

Single Mode

- Open **Counter Input-->Winform CI Single PulseMeasure**, set the following numbers as shown:

PCIe/PXLe/USB-5113 Series Single Pulse Measure

Basic Param Configuration		Measure Result	
Slot Number	0	High Pulse Measure(S)	0.4999954
Counter ID	0	Low Pulse Measure(S)	0.4999954
Measure Type	PulseMeasure		
TimeBase Source	Internal5MHz		
StartingEdge	Falling		
External TimeBase Terminal	PFI1		
External TimeBase Frequency	1,000,000		

Start
Stop

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 45 Pulse Measure Value For Single Mode

Finite/Continuous Mode

- Change the frequency of Squarewave to 50 Hz.
- Open **Counter Input-->Winform CI Finite/Continuous PulseMeasure**, set the following numbers as shown:

PCIe/PXLe/USB-5113 Series Finite Pulse Measure

Basic Param Configuration

Slot Number: Clock Source:

Counter ID: Sample Rate:

Measure Type: Samples to Acquire:

StartingEdge:

External Clock Terminal:

High Pulse Measurea(S)
Low Pulse Measurea(S)

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 46 Pulse Measure For Finite Mode

- The table in the sample program is a connection diagram for your convenience.
- Click Start to begin the finite/continuous pulse measurement. The result is shown below:

High Pulse Measurea(S)	Low Pulse Measurea(S)
0.00999989	0.00999988
0.0099999	0.00999988
0.00999989	0.00999988
0.00999989	0.00999988
0.0099999	0.00999988
0.00999989	0.00999988
0.00999989	0.00999988
0.0099999	0.00999988
0.00999989	0.00999988
0.00999989	0.00999988

Figure 47 Pulse Measure Values For Finite Mode

- The numbers show the duration of **High/Low Pulse** in one signal period and match the duty cycle set before.
- Please refer to **Learn by Examples 9.8.1 Finite/Continuous Mode** about the difference between Internal and Implicit.

9.8.3. Frequency Measurement

The counter measures the frequency of signal to measure.

Timing

1) Single Mode

Frequency Measurement without sample clock is actually using Pulse Width Measurement internally, refer to chapter 9.8.2 for more information.

Every time the user reads the data, driver will automatically calculate the frequency (f_x) according to the HighTick ($tick_h$), LowTick ($tick_l$) values and known frequency of the timebase (f_{base}) according to the formula 1 and return the result to the user.

$$f_x = f_{base} \times \frac{1}{tick_h + tick_l}$$

To configure the counter to work in this mode, set JY5113CITask.Mode to CIMode.Single.

2) Finite/Continuous Mode with Internal Sample Clock (*Averaging*)

Between every two rising edges of the sample clock, the counter counts the numbers of full periods ($T1$) of the signal to measure, and the number of rising edges of timebase ($T2$) during those full periods. These two values are stored into the buffer on each rising edge of the sample clock, as shown in **错误!不能识别的开关参数。8.**

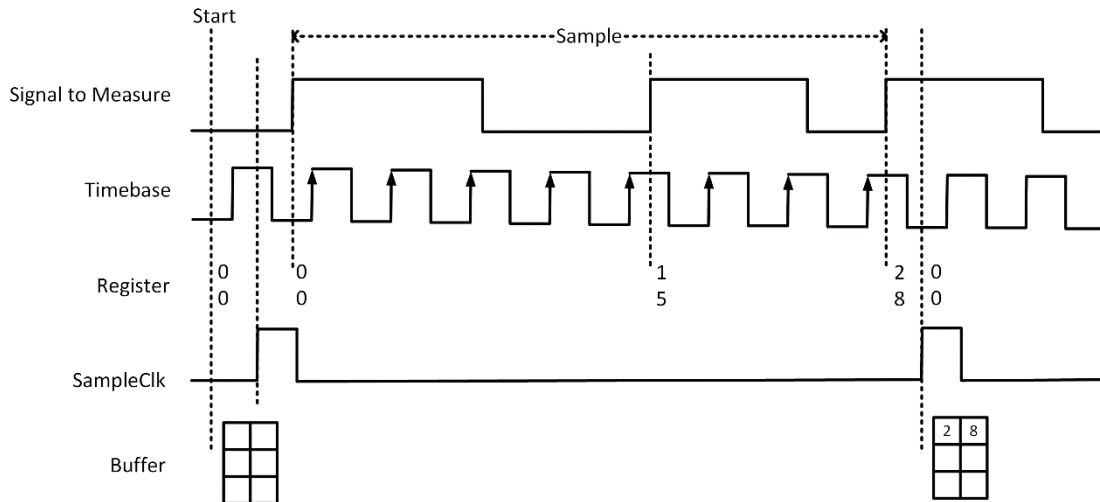


Figure 48 Frequency Measurement with Internal Sample Clock

Every time the user reads the data, driver will automatically calculate the frequency (f_x) according to the buffered values and known frequency of the timebase (f_{base}) by using following formula and return the result to user.

$$f_x = f_{base} \times \frac{T1}{T2}$$

3) Finite/Continuous Mode with Implicit Sample Clock

Frequency Measurement with implicit sample clock is actually using Pulse Measurement internally. refer to chapter 9.8.2 for more information.

Every time the user reads the data, driver will automatically calculate the frequency (f_x) according to the HighTick (T_h) and LowTick (T_l) values according to the formula 1 and return the result to the user.

$$f_x = \frac{1}{T_h + T_l}$$

Learn by Examples 9.8.3

- Connect the signal source's positive terminal to PCIe/PXle-5113 counter0's frequency measure source (CTR0_Gate/Z, Pin#2), negative terminal to the ground

(DGND, Pin#36). (CTR0_Gate/Z, DGND) consists of a frequency measure counter input and they share the same ground.

- Set a squarewave signal (f=50Hz, Duty Cycle=50%, Vpp=5V).

Single Mode

- Open **Counter Input-->Winform CI Single Frequency Measure** and click Start. The result is shown below by **Frequency Measure (Hz)**:

PCIe/PXIe/USB-5113 Series Single Frequency Measure

Basic Param Configuration		Measure Result	5113																								
Slot Number	0	Frequency Measure (Hz)																									
Counter ID	0	50.0004750045125																									
Measure Type	FrequencyMeasure																										
Start Stop																											
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2">Connector 0</th> <th colspan="2">Connector 0</th> </tr> <tr> <th>Pin</th> <th>Identification</th> <th>Pin</th> <th>Identification</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Ctr0_Source/A</td> <td>5</td> <td>Ctr1Source/A</td> </tr> <tr> <td>2</td> <td>Ctr0_Gate/Z</td> <td>6</td> <td>Ctr1_Gate/Z</td> </tr> <tr> <td>3</td> <td>Ctr0_Aux/B</td> <td>7</td> <td>Ctr1_Aux/B</td> </tr> <tr> <td>4</td> <td>Ctr0_Out</td> <td>8</td> <td>Ctr1_Out</td> </tr> </tbody> </table>		Connector 0		Connector 0		Pin	Identification	Pin	Identification	1	Ctr0_Source/A	5	Ctr1Source/A	2	Ctr0_Gate/Z	6	Ctr1_Gate/Z	3	Ctr0_Aux/B	7	Ctr1_Aux/B	4	Ctr0_Out	8	Ctr1_Out
Connector 0		Connector 0																									
Pin	Identification	Pin	Identification																								
1	Ctr0_Source/A	5	Ctr1Source/A																								
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z																								
3	Ctr0_Aux/B	7	Ctr1_Aux/B																								
4	Ctr0_Out	8	Ctr1_Out																								

Figure 49 Frequency Measure For Single Mode

Finite/Continuous Mode

- Open **Counter Input-->Winform CI Finite/Continuous Frequency Measure**.

PCIe/PXIe/USB 5113 Series Continuous Frequency Measure

Basic Param Configuration

Slot Number:
Counter ID:
Measure Type:
Clock Source:
External Clock Terminal:

Sample Rate:
Samples to Acquire:

FrequencyMeasure(Hz)

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 50 Frequency Measure For Continuous Mode

- The table in the sample program is a connection diagram for your convenience.
- Internal and Implicit Sample Clocks are set by **Clock Source** as before. (Please refer to Finite/Continuous Mode for more information.)
- Click Start and it will show the frequency 50 as set in the signal resource.

FrequencyMeasure(Hz)
50.0004750045125
50.0004750045125
50.0004750045125
50.0004812546321
50.0004750045125
50.0004750045125
50.0004750045125
50.0004812546321
50.0004750045125
50.0004750045125

Figure 51 Frequency Measure Values

9.8.4. Period Measurement


The counter measures the period of signal to measure. Period Measurements is using Frequency Measurement internally and returns the inverse result of Frequency Measurement. Refer to chapter 9.8.3 for more information.

Learn by Examples 9.8.4

- Connect the signal source's positive terminal to PCIe/PXIe-5113 counter0's period measure source (CTR0_Gate/Z, Pin#2), negative terminal to the ground (DGND, Pin#36). (CTR0_Gate/Z, DGND) consists of a period measure counter input and share the same ground.
- Set a squarewave signal (f=200Hz, Duty Cycle=50%, Vpp=5V).

Single Mode

- Open **Counter Input-->Winform CI Single Period Measure** and click Start. The result is shown below by **Period Measure(S)**:

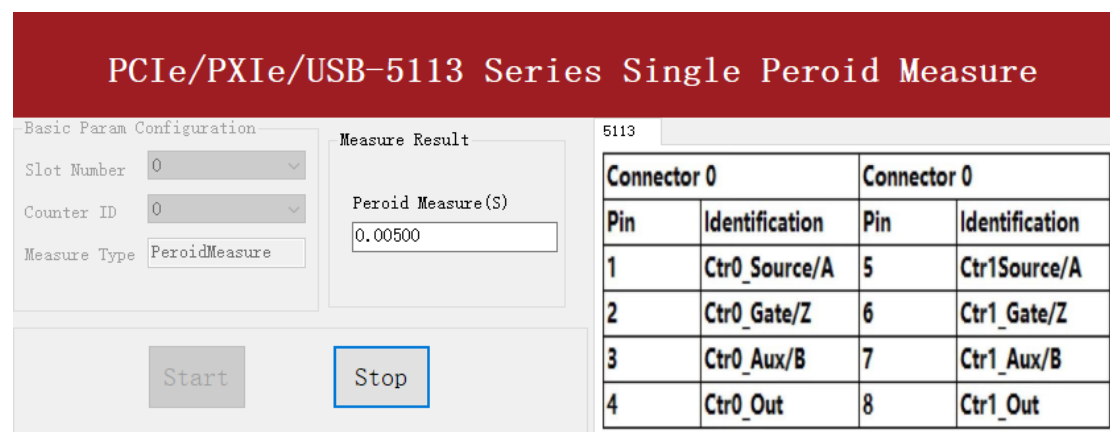

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 52 Period Measure For Single Mode

Finite/Continuous Mode

- Open **Counter Input-->Winform CI Finite/Continuous Period Measure** and click Start. The result is shown below by **PeriodMeasure (S)**.

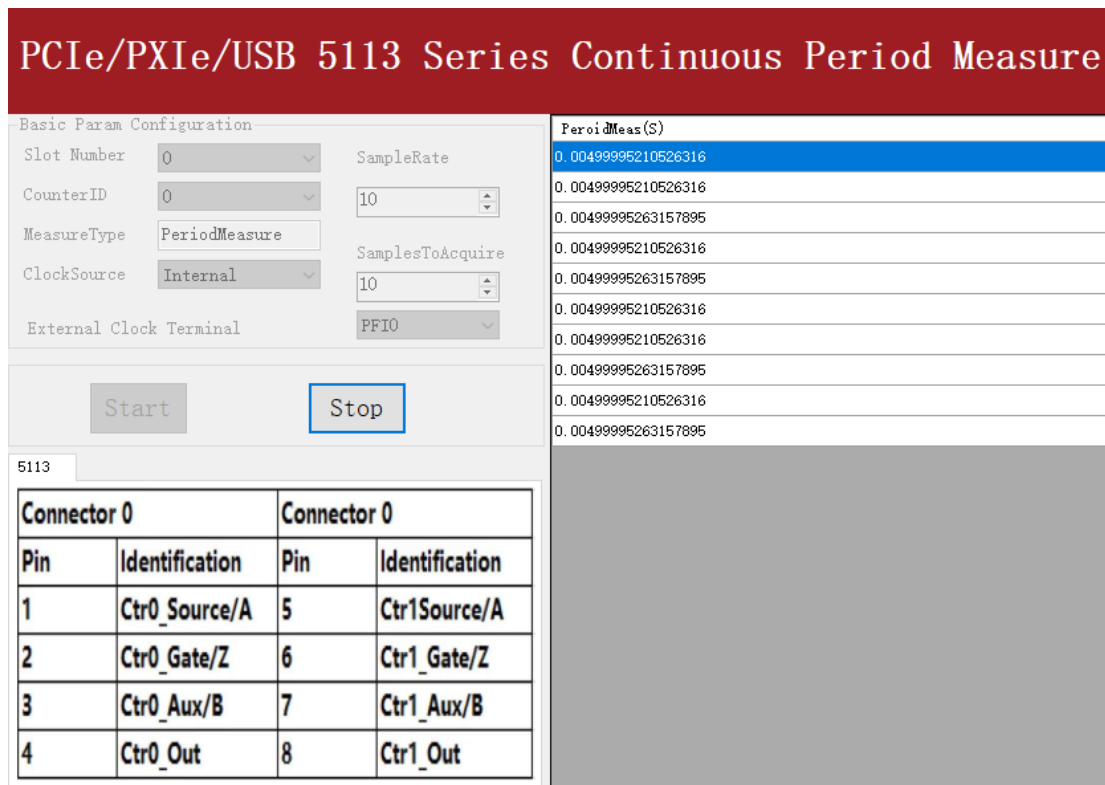


Figure 53 Peroid Measure For Continuous Mode

- The table in the sample program is a connection diagram for your convenience.
- The result of **Period Measure(S)** shows the correspond to the frequency set before.

9.8.5. Two-Edge Separation

The counter measures the separation between the rising edges of two signals.

Timing

1) Single Mode

The number of rising edges of timebase between the rising edge of the first signal and the rising edge of the second signal is written to the register on each rising edge of the second signal.

The number of rising edges of timebase between previous rising edge of the second signal and current rising edge of the first signal is written to the register on each rising edge of the first signal as shown in 错误!不能识别的开关参数。4.

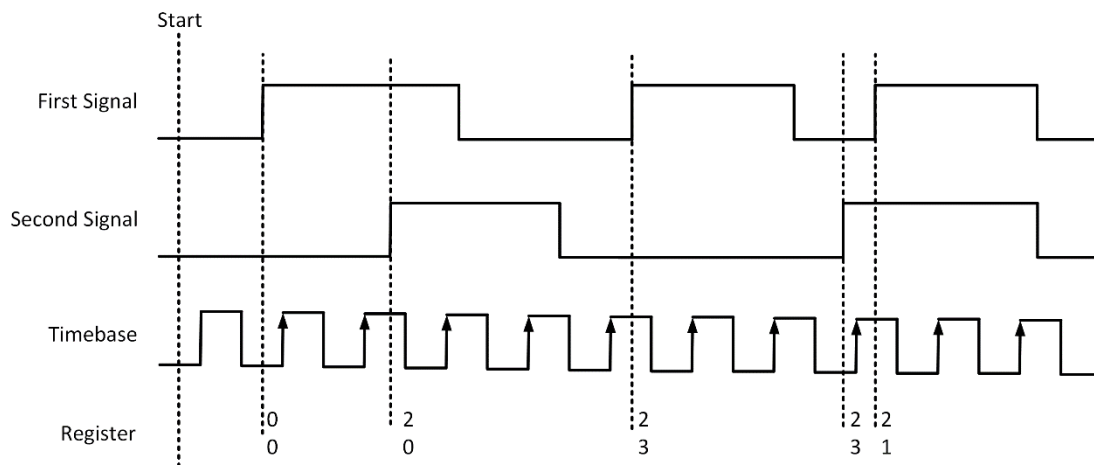


Figure 54 Two-Edge Separation in Single Mode

2) Finite/Continuous Mode with Internal Sample Clock:

The count values of rising edges of timebase between first signal and second signal are stored into buffer on each rising edge of the sample clock, as shown in 错误!不能识别的开关参数。5.

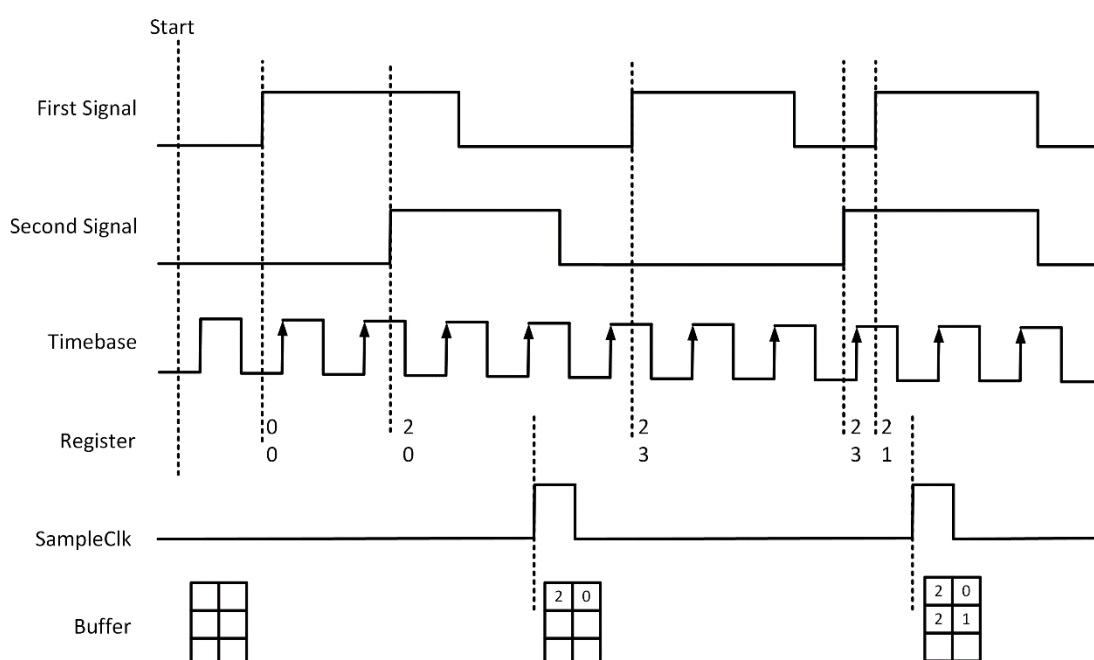


Figure 55 Two-Edge Separation with Internal Sample Clock

3) Finite/Continuous Mode with Implicit Sample Clock

The count values of rising edges of timebase between first signal and second signal are stored into buffer on each rising edge of the first signal, as shown in 错误!不能识别的开关参数。6.

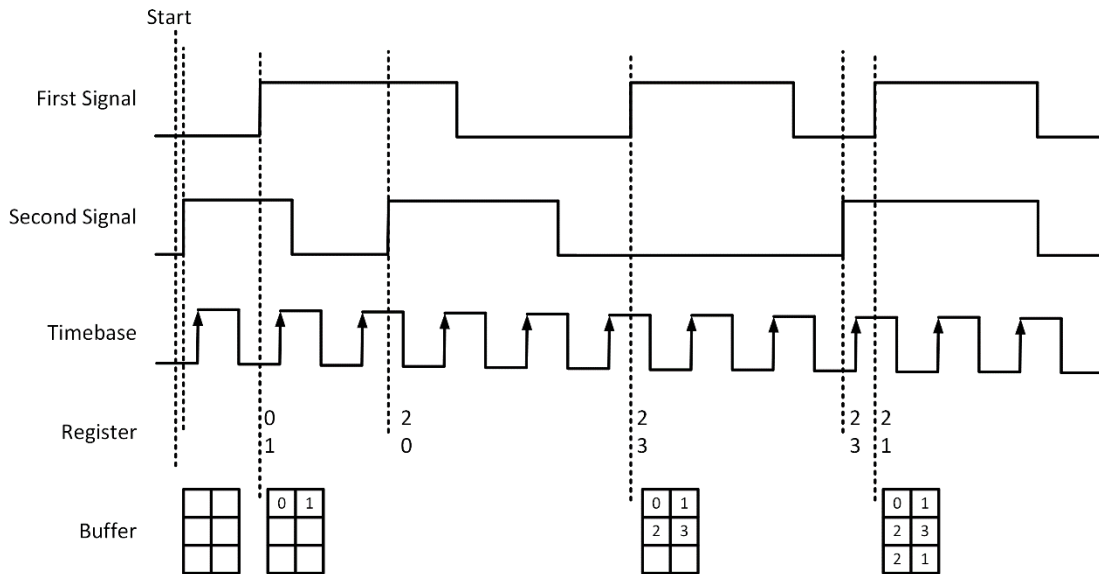


Figure 56 Two-Edge Separation with Implicit Sample Clock

Learn by Examples 9.8.5

- Connect the signal source's two positive terminals to PCIe/PXIe-5113 first signal input (squarewave, CTR0_Gate/Z, Pin #2) and second signal input (squarewave, CTR0_AUX/B, Pin#3), two negative terminals to the ground (DGND, Pin #35). Set a squarewave signal ($f=1\text{Hz}$, $\text{Phase}=0^\circ$) and a squarewave signal ($f=1\text{Hz}$, $\text{Phase}=135^\circ$).

Single Mode

- Open **Counter Input-->Winform CI Single TwoEdgeSeparation Measure** and click Start. The result is shown below by **First to Second(S)** and **Second to First(S)**, which represent the time difference between the rising edges of the two signals:

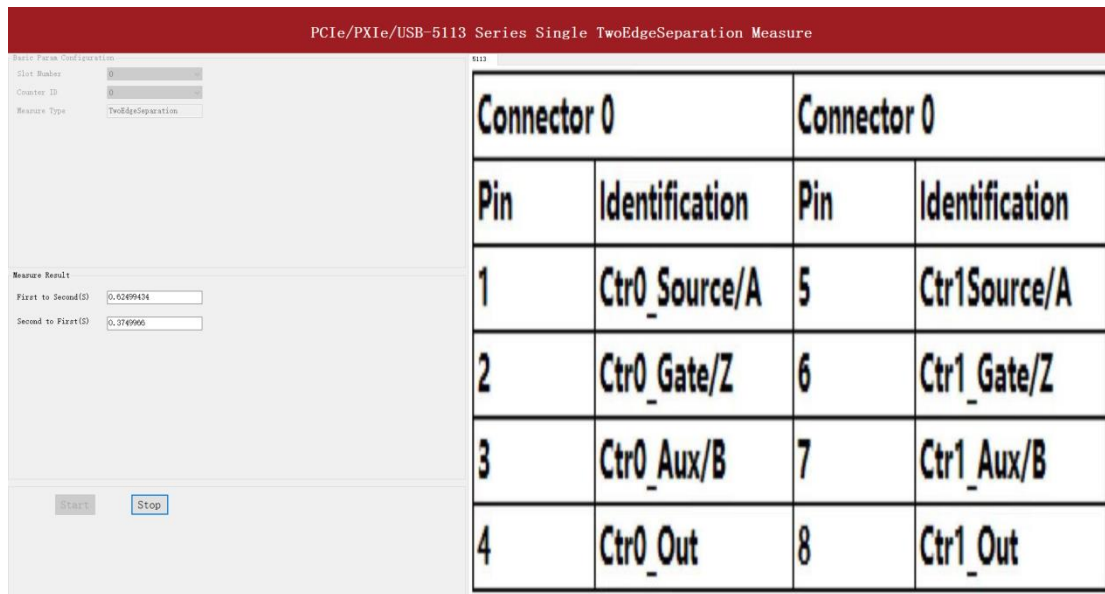


Figure 57 Two-EdgeSeparation Measure For Single Mode

- The table in the sample program is a connection diagram for your convenience.
- Due to the phase-difference between First Signal and Second Signal, **First to Second** and **Second to First** are different and summarize as 1.

Finite/Continuous Mode

- Open **Counter Input-->Winform CI Finite/Continuous TwoEdge Separation Measure** and click Start. The result is shown below by **First to Second(S)** and **Second to First(S)**, which represent the time difference between the rising edges of the two signals:

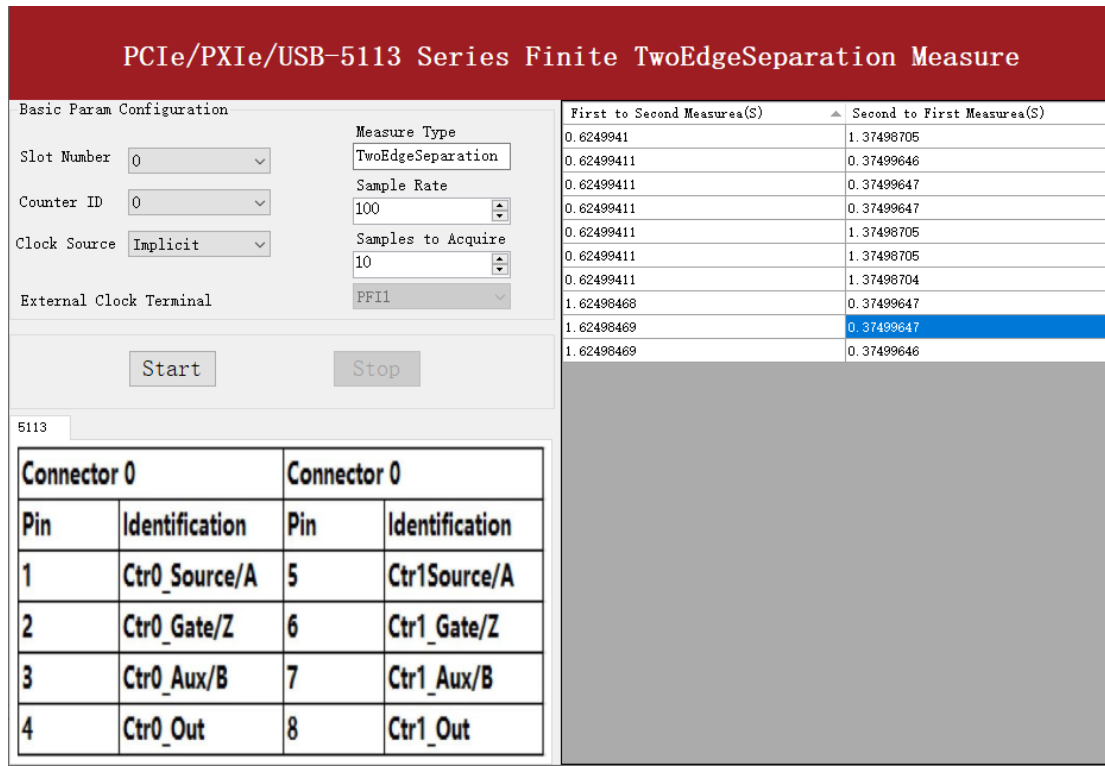


Figure 58 Two-EdgeSeparation Measure For Finite Mode

- The result in this picture is similar to the result in **Single Mode** before.
- The table in the sample program is a connection diagram for your convenience.

9.8.6. Quadrature Encoder

The quadrature encoder includes three encoding types: x1, x2, and x4.

Encoding Type

1) x1 Encoding

When A leads B, the count increase occurs on the rising edge of A; when B leads A, the count decrease occurs on the falling edge of A as shown in 错误!不能识别的开关参数。 9.

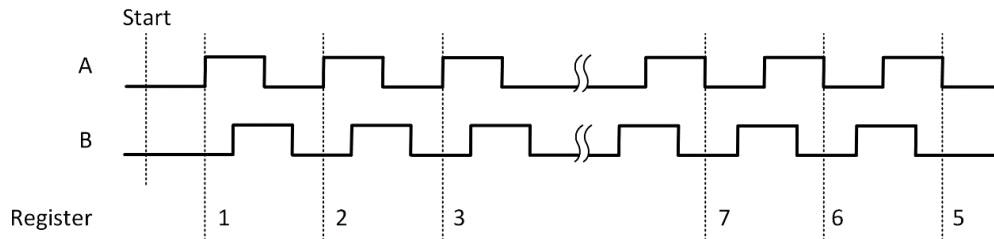


Figure 59 Quadrature Encoder x1 Mode

2) x2 Encoding

When A leads B, the count increase occurs on the rising edge and the falling edge of A; when B leads A, the count reduction occurs on the rising edge and falling edge of A as shown in 错误!不能识别的开关参数。0.

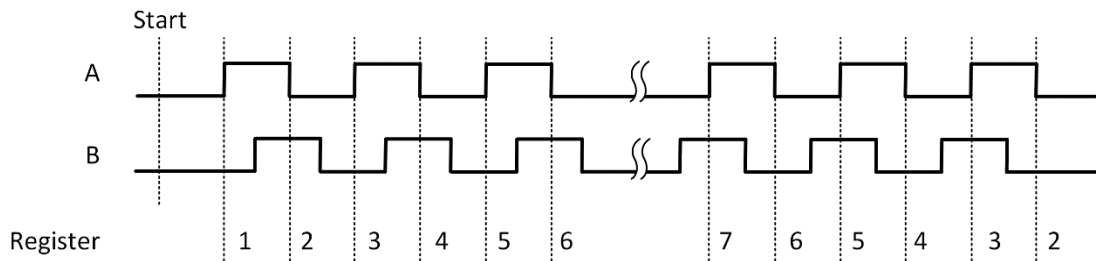


Figure 60 Quadrature Encoder x2 Mode

3) x4 Encoding

When A leads B, the increase of count occurs on the rising and falling edges of A and B. When B leads A, the decrease in count occurs on the rising and falling edges of A and B. As shown in 错误!不能识别的开关参数。1.

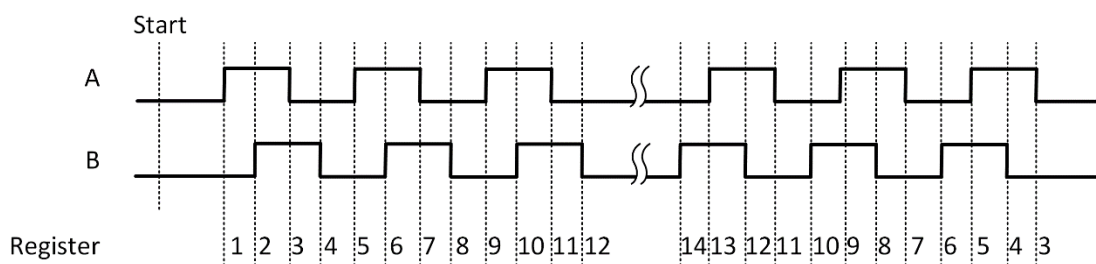


Figure 61 Quadrature Encoder x4 mode

Channel Z Behavior

The phase is reloaded when channel Z is high, A and B are low.

Timing

Take Encoding x1 mode as an example.

1) Single Mode

The count value is written to the register on each rising edge of the signal A. To configure the counter to work in this mode, set JY5113CITask.Mode to CIMode.Single.

2) Finite/Continuous Mode with Internal Sample Clock

The count value is stored into the buffer on each rising edge of the sample clock, as shown in 错误!不能识别的开关参数。2.

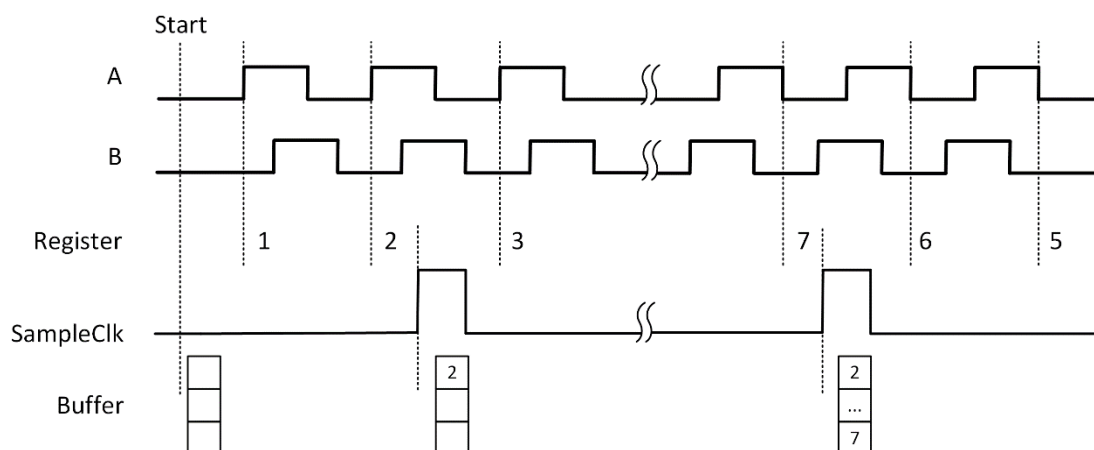


Figure 62 Quadrature Encoder x1 with Sample Clock

3) Finite/Continuous Mode with Implicit Sample Clock

The count value is stored into the buffer every time it changes, as shown in 错误!不能识别的开关参数。3.

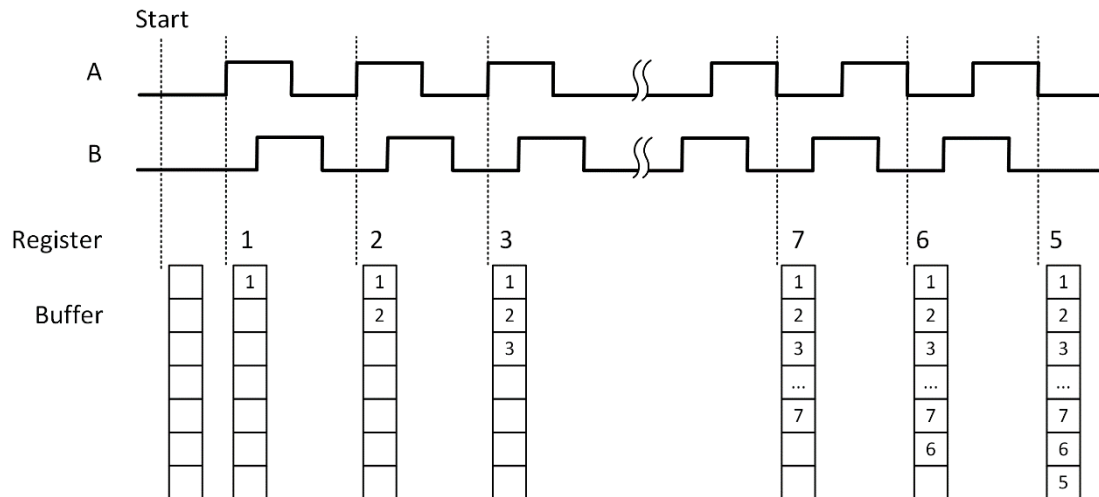


Figure 63 Quadrature Encoder x4 with Implicit Sample Clock

Learn by Examples 9.8.6

- Connect the signal source's two positive terminals to PCIe/PXIe-5113 first signal input (sinewave, CTR0_Source/A, Pin #1) and second signal input (squarewave , CTR0_AUX/B, Pin#3), two negative terminals to the ground (DGND, Pin #35). (CTR0_Source/A, DGND) consists of the first signal to be measured; (CTR0_AUX/B, D_GND) consists of the second signal to be measured.
- Set a squarewave signal (f=10Hz, Phase=90°) and a squarewave signal (f=10Hz, Phase=0°).

Single Mode

- Open **Counter Input--> Winform CI Single QuadEncoder** and click Start. The result is shown below by **CounterValue** according to the counting rules explained in 9.8.6:

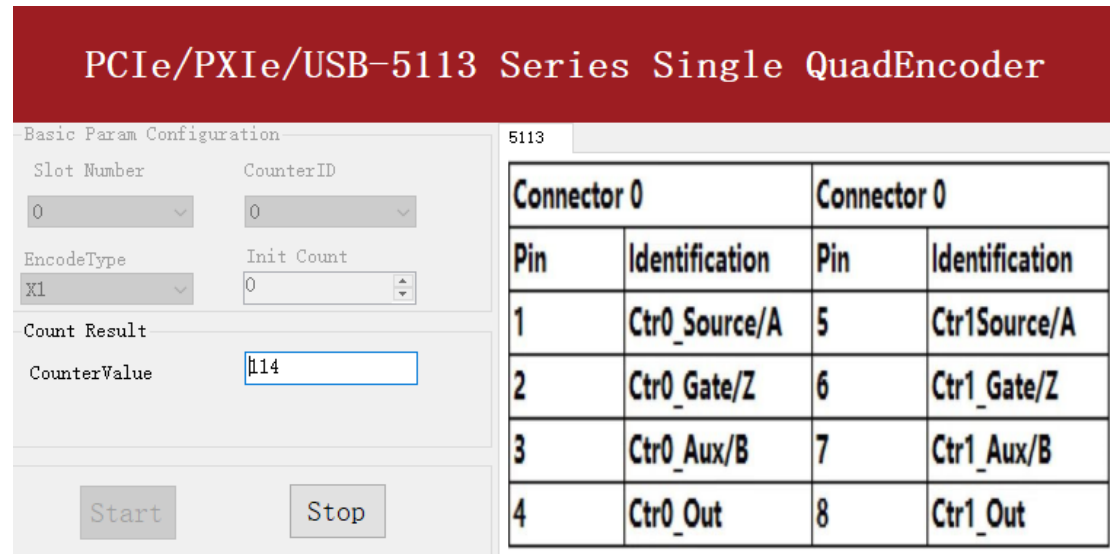


Figure 64 QuadEncoder For Single Mode

- The table in the sample program is a connection diagram for your convenience.
- *Encoding Type* is set by **Encode Type (x1, x2, x4)**.
- When the *encode type* is changed from x1 to x2 and x4, you can see the rising speed of **CounterValue** is twice and four times than x1Mode.

Continuous Mode

- Open **Counter Input--> Winform CI Continuous QuadEncoder** and click Start. The result is shown below by **CounterValues**.

PCIe/PXIe/USB-5113 Series Continuous QuadEncoder

Basic Param Configuration

Slot Number: 0
Counter ID: 0
Encode Type: X1
Clock Source: Internal
External Clock Terminal:

Sample Rate: 10
Samples to Acquire: 10
PFIO

Start
Stop

CounterValues

51
52
53
54
55
56
57
58
59
60

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 65 QuadEncoder For Continuous Mode

- The table in the sample program is a connection diagram for your convenience.
- *Encoding Type* is set by **Encode Type (x1, x2, x4)**.
- When the *encode type* is changed from x1 to x2 and x4, you can see the rising speed of **CounterValue** is twice and four times than x1Mode.

9.8.7. Two-Pulse Encoder

The count value increases on the rising edge of A and decreases on the rising edge of B.

Timing

1) Single Mode

The count value is written to the register on each rising edge of the signal A, and signal B, as shown in 错误!不能识别的开关参数。6.

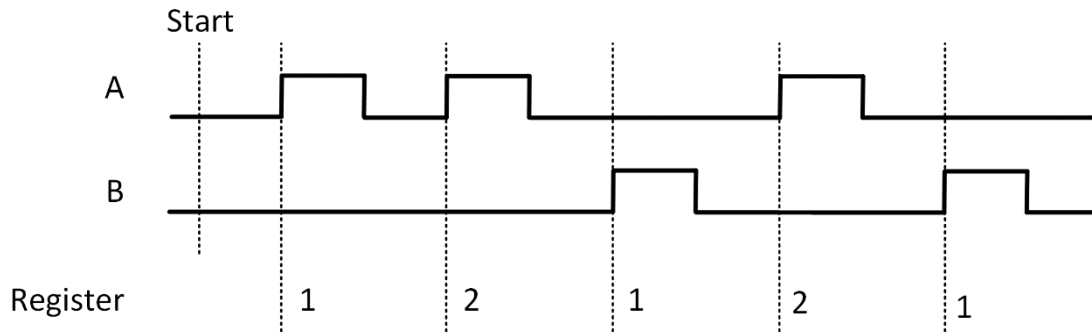


Figure 66 Two-Pulse Encoder in Single Mode

2) Finite/Continuous Mode with Internal Sample Clock

The count value is stored into the buffer on each rising edge of the sample clock, as shown in 错误!不能识别的开关参数。7.

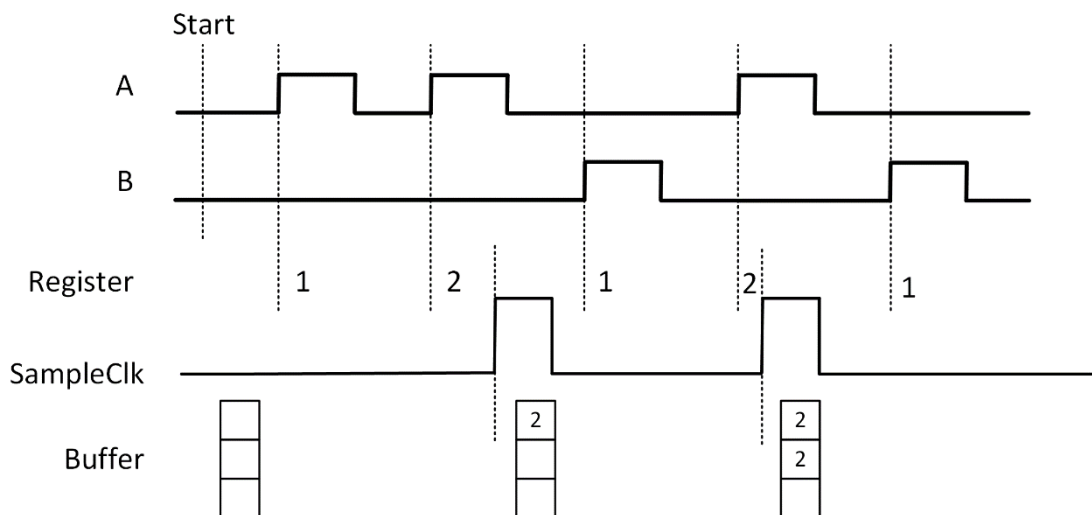


Figure 67 Two-Pulse Encoder with Internal Sample Clock

3) Finite/Continuous Mode with Implicit Sample Clock

The count value is stored into the buffer every time it changed, as shown in 错误!不能识别的开关参数。8.

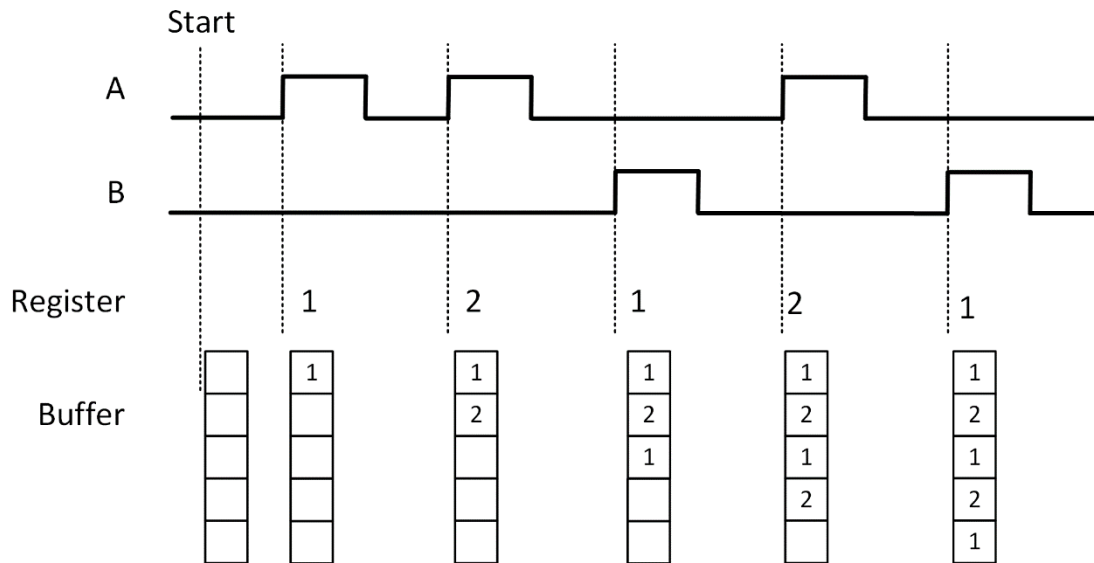


Figure 68 Two-Pulse Encoder with Implicit Sample Clock

Learn by Examples 9.8.7

- Connect the signal source's positive terminal to PCIe/PXle-5113 signal input (squarewave, CTR0_Source/A, Pin #1) , negative terminal to the ground (DGND, Pin#35).
- Connect the PCIe-5113 signal input(CTR0_AUX/B, Pin#3)to ground (DGND, Pin#35).
- Set a squarewave signal (f=40Hz)

Single Mode

- Open **Counter Input-->Winform CI Single Two PulseEncoder** and set the numbers as shown.

PCIe/PXle/USB-5113 Series Single TwoPulseEncoder

Basic Param Configuration

Slot Number

CounterID

EncoderType

Count Result

CounterValue

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 69 Two-PulseEncoder For Single Mode

- The table in the sample program is a connection diagram for your convenience.
- Click Start to start counting. You can see a continuously rising of the **Counter Value**, which follows the counting rules explained in this chapter.

Finite Mode

- Connect the signal source's positive terminal to PCIe-5113 signal input (squarewave, CTR0_AUX/B, Pin#3) , negative terminal to the ground (DGND, Pin#37).
- Connect the PCIe-5113 signal input(CTR0_Source/A, Pin #1)to ground (DGND, Pin#35).
- Set a squarewave signal (f=40Hz).
- Open **Counter Input-->Winform CI Finite Two PulseEncoder** and set the numbers as shown.

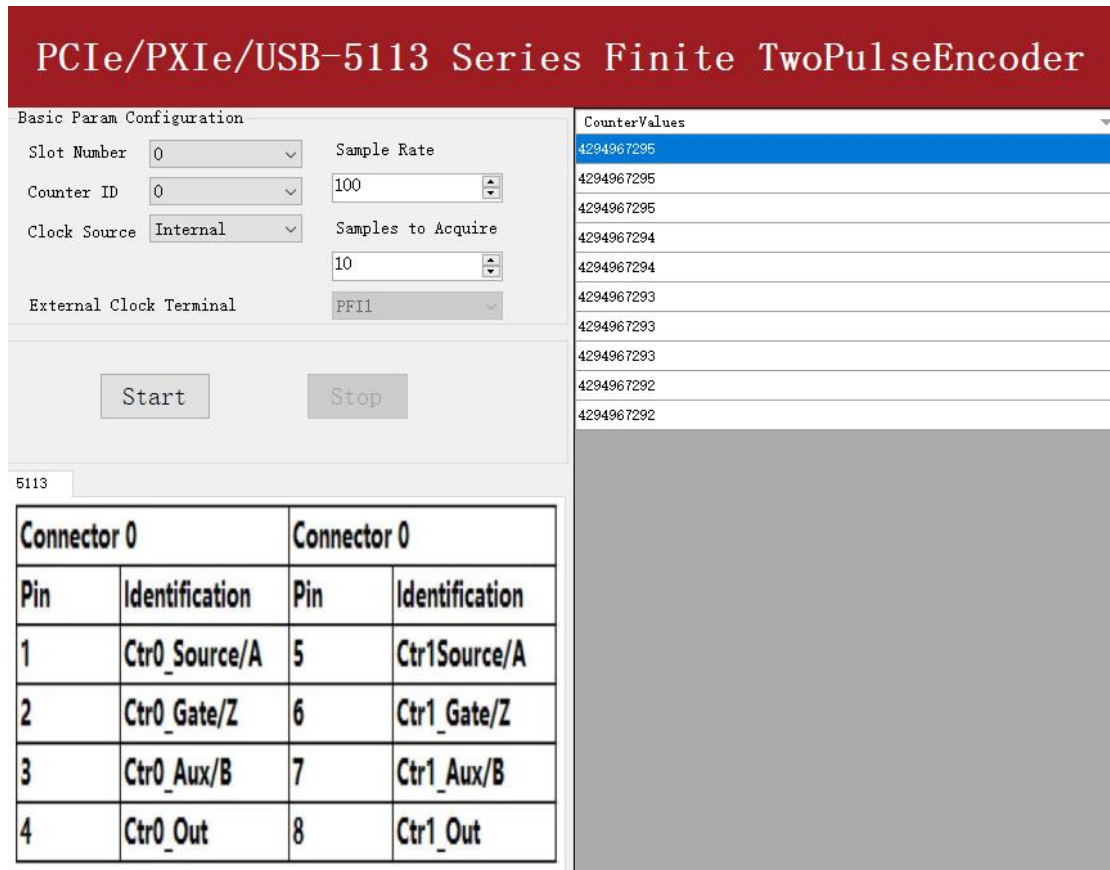


Figure 70 Two-PulseEncoder For Finite Mode

- The table in the sample program is a connection diagram for your convenience.
- Click Start to start counting. You can see that the **CounterValue** is decreasing, which follows the counting rules explained in this chapter.

Continuous Mode

- Open **Counter Input-->Winform CI Continuous Two PulseEncoder** and set the numbers as shown.

PCIe/PXle/USB-5113 Series Finite TwoPulseEncoder

Basic Param Configuration

Slot Number
Counter ID
Clock Source
External Clock Terminal

Sample Rate
Samples to Acquire

CounterValues

0
4294967295
4294967295
4294967294
4294967294
4294967294
4294967293
4294967293
4294967292
4294967292

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctr0_Source/A	5	Ctr1Source/A
2	Ctr0_Gate/Z	6	Ctr1_Gate/Z
3	Ctr0_Aux/B	7	Ctr1_Aux/B
4	Ctr0_Out	8	Ctr1_Out

Figure 71 Two-PulseEncoder For Continuous Mode

- The table in the sample program is a connection diagram for your convenience.
- Click Start to start counting. You can see that the **CounterValue** is decreasing, which follows the counting rules explained in this chapter.

9.9. Counter Output Operations

9.9.1. Single Pulse Output

The PCIe/PXle-5113 timer/counter can output a single pulse with a specified pulse width. The timing diagram of the pulse output is shown in 错误!不能识别的开关参数。2.

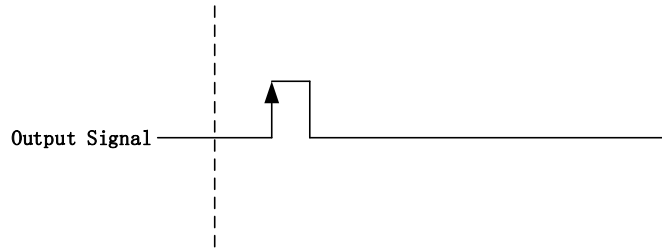


Figure 72 Single Pulse Output

In single pulse output mode, the user could set up the pulse width by configuring the frequency and duty cycle.

If you want to generate a single pulse with 1 ms pulse width, the parameter, frequency should be setup 500Hz and the duty cycle is 50%. Here is the formula for frequency setting:

$$\text{Frequency} = 1 / (1\text{ms} / 0.5) = 500\text{Hz}$$

Learn by Example 9.9.1

- Connect the oscilloscope probe to PCIe/PXIe-5113 CTR0_OUT (Connector 0 Pin #4), and the ground lead to D_GND (Connector 0 Pin #38). (CTR0_OUT, D_GND) provides the pulse output signal for observation.
- Open **Counter Output --> Winform CO Single**.
- Set Slot Number to 0, Counter ID to 0, select DutyCycleFrequency as the Pulse Parameter, set Frequency to 500 Hz, Duty Cycle to 0.5, and Number of Pulses to 1.
- Click Start to generate the pulse.
- The oscilloscope displays a single pulse with 1 ms pulse width and 5V amplitude, then returns to idle state. The result matches the software configuration.

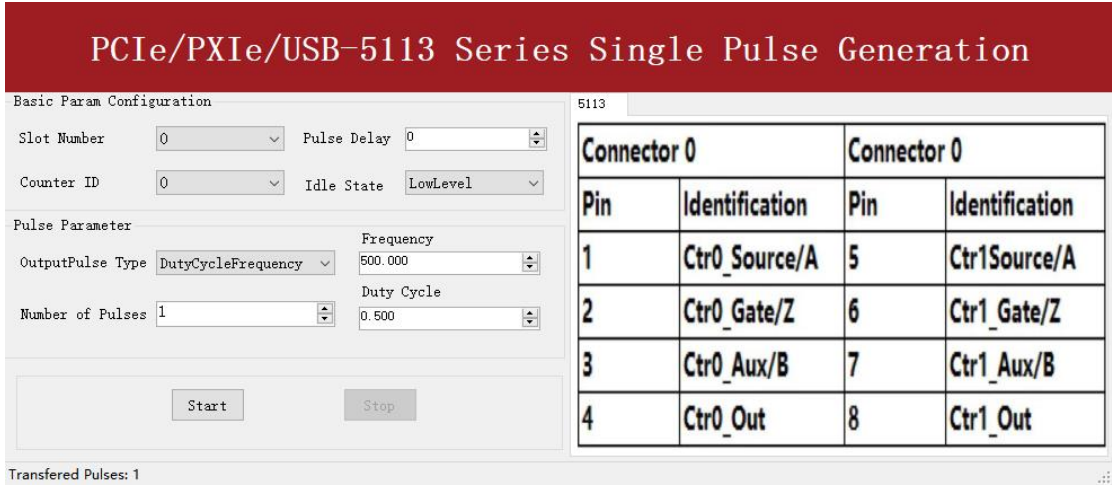


Figure 73 Single Pulse Generation

9.9.2. Finite Pulse Output

The pulse output timing is as shown in 错误!不能识别的开关参数。4.

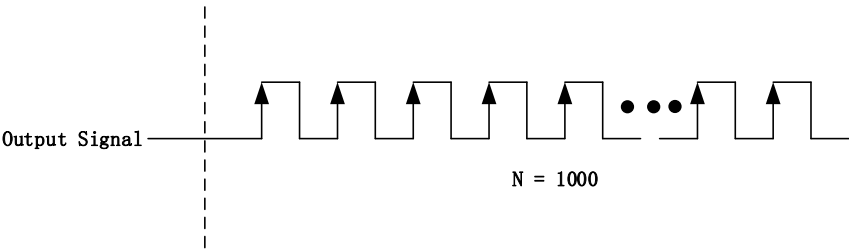


Figure 74 Finite Pulse Output

In finite pulse output mode, the user is required to configure the output frequency, duty cycle and the number of output pulses.

Assuming that the pulse width to be output by the user is 1ms, the frequency calculated according to the duty cycle of 50% is as follows:

$$\text{Set frequency} = 1 / (1\text{ms} / 0.5) = 500\text{Hz}$$

That is to say, when the user sets the frequency as 500Hz and the duty cycle as 0.5, a limited pulse of 1ms pulse width will be obtained.

Learn by Example 9.9.2

- Connect the oscilloscope probe to PCIe/PXle-5113 CTR0_OUT (Connector 0 Pin #4), and the ground lead to D_GND (Connector 0 Pin #38). (CTR0_OUT, D_GND) provides the pulse output signal for observation.
- Open **Counter Output --> Winform CO Finite** and set the parameters as shown below.
- Click Start to generate the pulse sequence.
- The oscilloscope displays the pulse output. The program executes the three configurations in sequence: 10 pulses are output in HighLowTime mode, 10 pulses in DutyCycleFrequency mode, and 300 pulses in HighLowTick mode. The output stops automatically after the set number of pulses is reached.

PCIe/PXle/USB-5113 Series Finite Pulse Generation

Basic Param Configuration

Slot Number:

CounterID:

Initial Delay (s):

Idle State:

Pulse Type	Freq/HighTime/HighTicl	DutyCycle/LowTime/LowT	Number of Pulses
HighLowTime	0.5	0.5	10
DutyCycleFrequency	5	0.5	20
HighLowTick	1000000	1000000	30

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctrl_Source/A	5	CtrlSource/A
2	Ctrl_Gate/Z	6	Ctrl_Gate/Z
3	Ctrl_Aux/B	7	Ctrl_Aux/B
4	Ctrl_Out	8	Ctrl_Out

Figure 75 Finite Pulses Generation

9.9.3. Continuous Pulse Output

Learn by Example 9.9.3

- Connect the oscilloscope probe to PCIe/PXle-5113 CTR0_OUT (Connector 0 Pin #4), and the ground lead to D_GND (Connector 0 Pin #38). (CTR0_OUT, D_GND) provides the pulse output signal for observation.

■ Open **Counter Output --> Winform CO ContinuousWrapping** and set the parameters as shown below.

■ Click Start to generate the continuous pulse output.

■ The oscilloscope displays the pulse output. The program executes the three configurations in sequence: 10 pulses are output in HighLowTime mode, 20 pulses in DutyCycleFrequency mode, and 30 pulses in HighLowTick mode. The sequence loops continuously until Stop is clicked.

PCIe/PXIe/USB 5113 Series ContinuousWrapping Pulse Generation

Basic Param Configuration

Slot Number:

Counter ID:

Initial Delay (s):

Idle State:

Pulse Type	Freq/HighTime/HighTicks	DutyCycle/LowTime/LowTic	Number of Pulses
HighLowTime	0.5	0.5	10
DutyCycleFrequency	5	0.5	20
HighLowTick	1000000	1000000	30

5113

Connector 0		Connector 0	
Pin	Identification	Pin	Identification
1	Ctrl0_Source/A	5	Ctrl1Source/A
2	Ctrl0_Gate/Z	6	Ctrl1_Gate/Z
3	Ctrl0_Aux/B	7	Ctrl1_Aux/B
4	Ctrl0_Out	8	Ctrl1_Out

Figure 76 Continuous Pulse Generation

9.10. System Synchronization Interface (SSI) for PCIe Modules

The synchronization between PCIe modules are handled differently from the PXIe synchronization, it is implemented by the system synchronization interface (SSI). SSI is designed as a bidirectional bus and it can synchronize up to four PCIe modules. One PCIe module is designated as the master module and the other PCIe modules are designated as the slave modules.

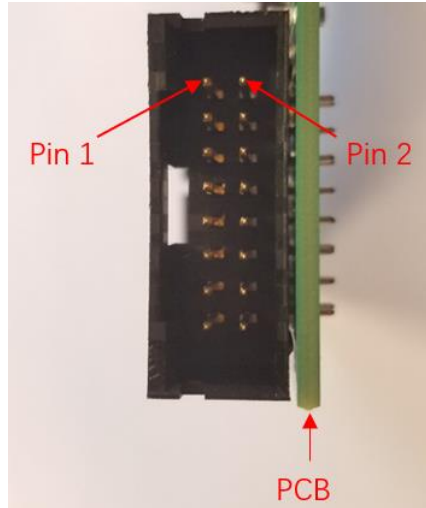


Figure 77 SSI Connector in PCIe-5113

Pin	Signal Name	Signal Name	Pin
1	PXI_TRIG0	GND	2
3	PXI_TRIG1	GND	4
5	PXI_TRIG2	GND	6
7	PXI_TRIG3	GND	8
9	PXI_TRIG4	GND	10
11	PXI_TRIG5	GND	12
13	PXI_TRIG6	GND	14
15	PXI_TRIG7	GND	16

Table 15 SSI Connector Pin Assignment for PCIe-5113

9.11. DIP Switch in PCIe/PXle-5113

PCIe/PXle-5113 modules have a DIP switch. The card number can be adjusted manually by changing the DIP switch setting, which is used to identify the boards with different slot positions.

10. Calibration

PCIe/PXle-5113 boards are precalibrated before the shipment. We recommend you recalibrate PCIe/PXle-5113 boards periodically to ensure the measurement accuracy. A commonly accepted practice is one year. If for any reason, you need to recalibrate your board, please contact JYTEK.

11. Appendix(Measurement Issues)

11.1. Performance and Tests

11.1.1. AI Accuracy

The maximum AI accuracy is limited by three factors: Total Gain Error, Total Offset Error and the Noise Uncertainty as shown in the following table. The PCIe/PXIe-5113 device is first calibrated. The test temperature is 23 °C±5°C.

Typical Tested 5110 AI Accuracy							
	Nominal Range						
Total Gain Error (μV)	314.0	153.5	57.2	29.1	16.4	7.1	5.2
Total Offset Error (μV)	154.0	95.0	24.8	23.2	19.1	16.9	15.2
Noise Uncertainty (μV)	2.8	1.6	0.8	0.5	0.4	0.4	0.4
Absolute Accuracy at Full Scale (μV)	470.8	250.1	82.8	52.8	35.9	24.3	20.8

Table 16 Typical AI Accuracy

A typical test of different input ranges is shown below. The input voltage is normalized to -1.0V and 1.0V.

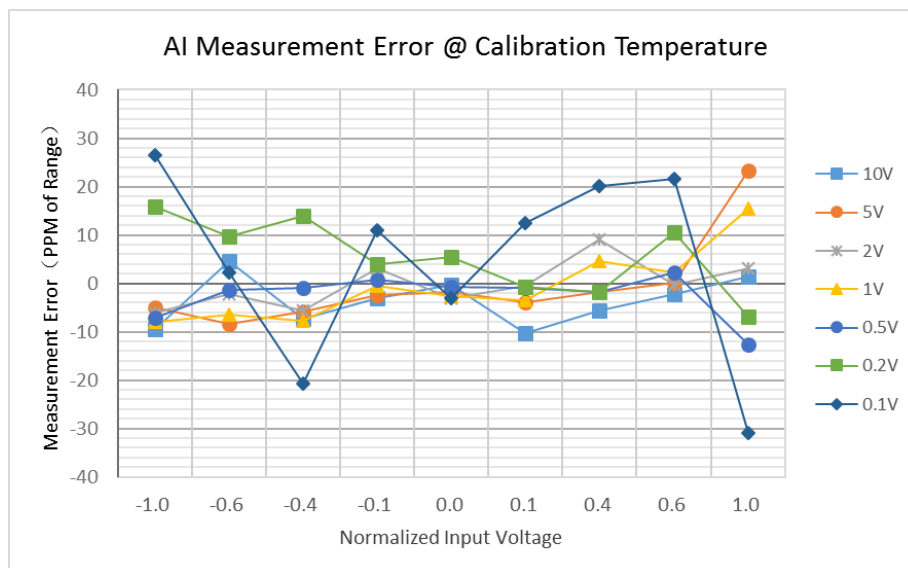


Figure 78 AI Measurement Error

11.1.2. AI Bandwidth

Analog Input Bandwidth	
Nominal Range Full Scale (V)	-3dB Bandwidth (MHz)
± 10	3.26
± 5	2.77
± 2	1.39
± 1	0.78
± 0.5	0.78
± 0.2	0.72
± 0.1	0.63

Table 17 AI Bandwidth

11.1.3. System Noise

A typical system noise is show below.

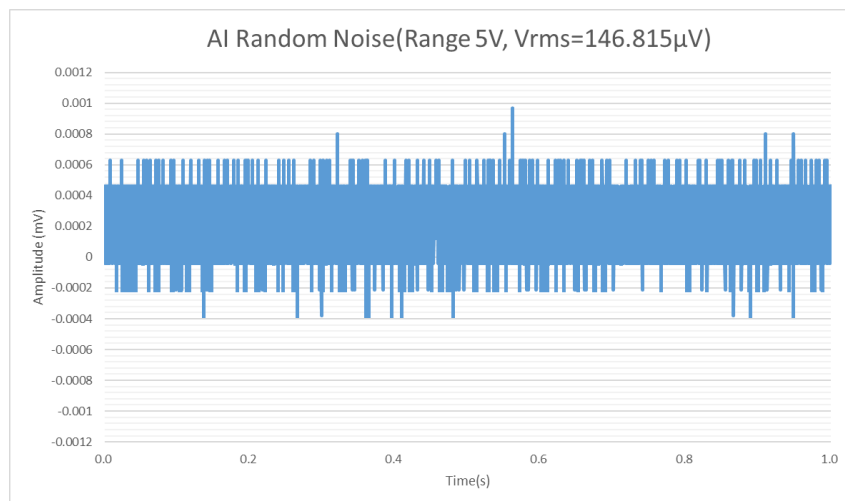


Figure 79 AI Error due to System Random Noise

11.1.4. PCIe/PXle-5113 CMRR

A typical CMRR performance is shown below.

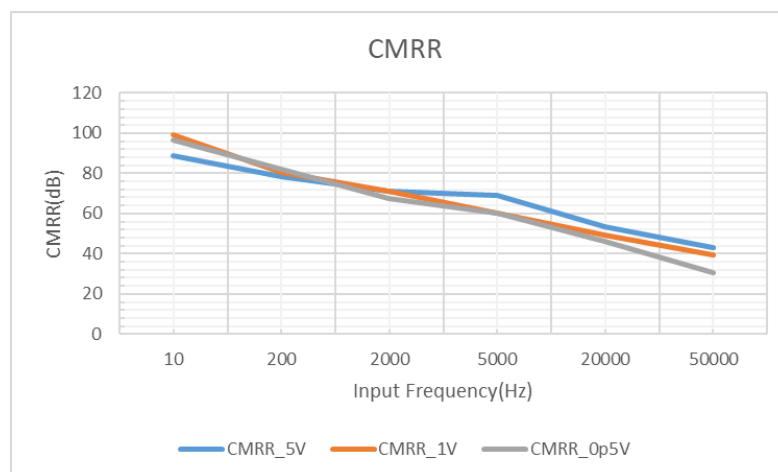


Figure 80 Common Mode Rejection Ratio

11.1.5. AO Accuracy

The maximum AO accuracy is limited by two factors: Total Gain Error, Total Offset Error as shown in the following table. The PCIe/PXIe-5113 device is first calibrated. The test temperature is 2 °C from the calibration temperature.

Typical Tested 5110 AO Accuracy		
Nominal Range Positive Full Scale (V)	10	5
Gain Error	33.7	23.7
Offset Error	77	59.4
Absolute Accuracy at Full Scale (μV)	1052	416

Table 18 Typical AO Accuracy

11.2. Floating Signals and Ground Referenced Signals

Signals to be measured often fall into two categories: floating and ground referenced. The floating signals include battery output, isolated output, thermocouples etc; the ground referenced signals include most instrumentation output signals. Some instruments also offered isolated floating output.

11.3. Differential, NRSE, RSE Modes

The DAQ boards have three measurement modes: differential (DIFF), non-referenced singled end (NRSE), and the referenced single end (RSE). The NRSE mode is also referred as the pseudo differential mode. Under the NRSE mode, the DAQ card provides a common connecting terminal, referred as AI_Sensing. The negative ends of input signal and the DAQ boards are all connected to this terminal, making it look like the differential mode. Thus, the NRSE mode can handle twice as many channels as the DIFF mode.

The three measurement modes and the two types of input signals, floating and ground referenced, form 6 different measurement scenarios as shown in the following.

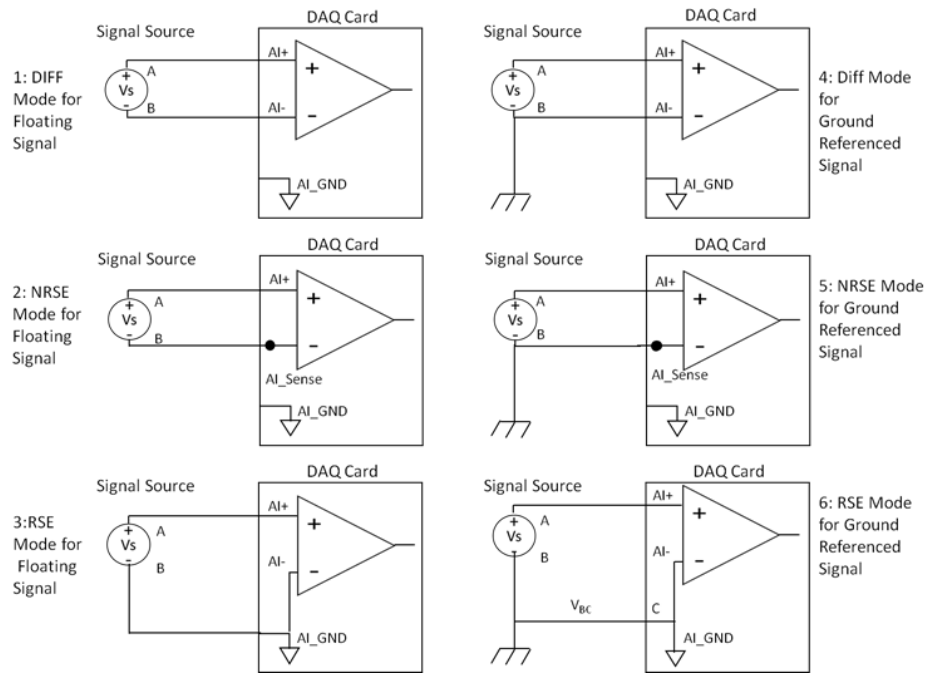


Figure 81 Six Measurement Scenarios

In the first 5 scenarios, V_{AB} is measured voltage. But in the 6th scenario, both the measured signal and the DAQ have own grounds. The two ground may have a voltage difference V_{BC} . The actual measurement is $V_{AC}=V_{AB}+V_{BC}$, not V_{AB} . Due to the ground noise, V_{BC} is quite noisy. This affects the measurement accuracy. The caution must be taken using 6th mode.

11.4. Reducing the Common Mode Voltage Effect

In the first 2 modes, the measured signal is floating. It is quite often that the common mode voltage will appear. To reduce this effect on the measurement accuracy, a resister can be added as shown. The value of this resister depends on the impedance of the signal source. As a rule of thumb, R should be 1000 times of the signal source output impedance, roughly 10K to 100K Ω . At this level, R has very little impact on the measurement.

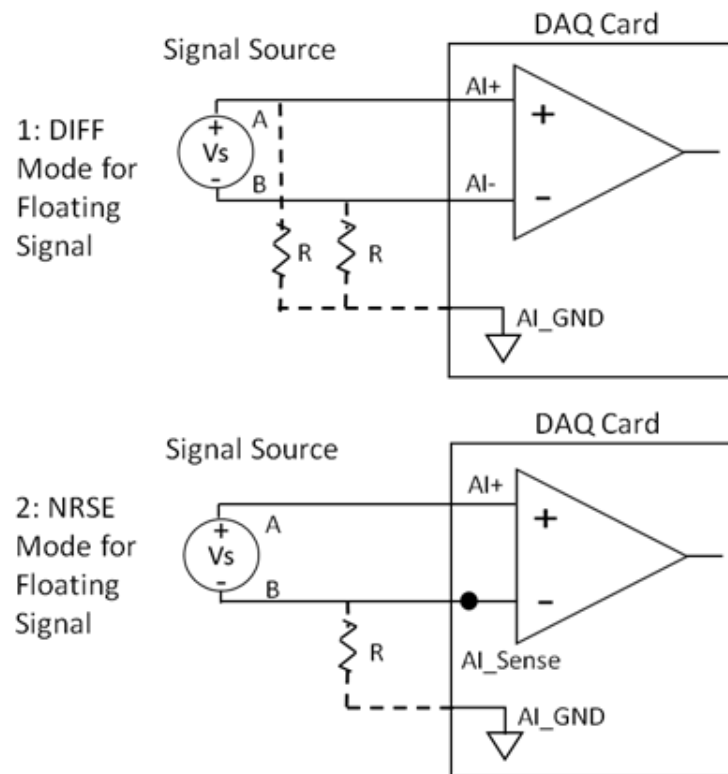


Figure 82 Using Resister to Reduce Common Mode Voltage Effect

12. About JYTEK

12.1. JYTEK China

Founded in June, 2016, JYTEK China is a leading Chinese test & measurement company, providing complete software and hardware products for the test and measurement industry. The company has evolved from re-branding and reselling PXI(e) and DAQ products to a fully-fledged product company. The company offers complete lines of PXI, DAQ, USB products. More importantly, JYTEK has been promoting open-sourced based ecosystem and offers complete software products. Presently, JYTEK is focused on the Chinese market. Our Shanghai headquarters and production service center have regular stocks to ensure timely supply; we also have R&D centers in Xi'an and Chongqing. We also have highly trained direct technical sales representatives in Shanghai, Beijing, Tianjin, Xi'an, Chengdu, Nanjing, Wuhan, Guangdong, Haerbin, and Changchun. We also have many partners who provide system level support in various cities.

12.2. JYTEK Software Platform

JYTEK has developed a complete software platform, SeeSharp Platform, for the test and measurement applications. We leverage the open sources communities to provide the software tools. Our platform software is also open sourced and is free, thus lowering the cost of tests for our customers. We are the only domestic vendor to offer complete commercial software and hardware tools.

12.3. JYTEK Warranty and Support Services

With our complete software and hardware products, JYTEK is able to provide technical and sales services to wide range of applications and customers. In most cases, our products are backed by a 1-year warranty. For technical consultation, pre-sale and after-sales support, please contact JYTEK of your country.

13. Statement

The hardware and software products described in this manual are provided by JYTEK China, or JYTEK in short.

This manual provides the product review, quick start, some driver interface explanation for PCIe/PXle-5113 of temperature sensor data acquisition cards. The manual is copyrighted by JYTEK.

No warranty is given as to any implied warranties, express or implied, including any purpose or non-infringement of intellectual property rights, unless such disclaimer is legally invalid. JYTEK is not responsible for any incidental or consequential damages related to performance or use of this manual. The information contained in this manual is subject to change without notice.

While we try to keep this manual up to date, there are factors beyond our control that may affect the accuracy of the manual. Please check the latest manual and product information from our website.

Shanghai Jianyi Technology Co., Ltd.

Address: Room 201, Building 3, NO.300 Fangchun Road, Shanghai.

Post Code: 201203

Tel: 021-5047 5899

Website: www.jytek.com