



JY-6301 User Manual

High Accuracy, 24 bits Resolution Temperature Input Module for Resistance Temperature Detector User Manual



User Manual Version: V2.2.3

Revision Date: May 8, 2024

Table of Contents

1.Introduction.....	1
1.1 Overview	1
1.2 Main Features	1
1.3 RTD Temperature Measurement.....	1
1.4 Abbreviations	2
1.5 JYPEDIA.....	2
1.6 Learn by Example	3
2.Resistance Measurement Specifications	5
2.1 Gain and Offset Errors.....	5
2.2 Basic Resistance Accuracy.....	5
2.3 Example of Calculating Gain and Offset Errors.....	5
3.Temperature Measurement Accuracy.....	6
3.1 RTD Measurement Basics	6
3.2 RTD Accuracy	7
3.3 Temperature Measurement Accuracy by JY-6301.....	7
3.4 Total Temperature Measurement Accuracy.....	8
4.Additional Specifications	9
4.1 Analog Hardware Specifications	9
4.2 PFI.....	9
4.3 Trigger	10
4.4 Clock.....	10
4.5 Front Panel conections	10
4.6 Channel Assignment	11
4.7 Pinouts for 4-wire Mode.....	12
4.8 Pinouts for 2 and 3-wire Mode	14
4.9 Channel Pin Connections	16
4.1 Mixing 2-wire and 4-wire RTD Measurements	16
4.1 Bus Supported.....	16
4.1 Physical and Environment.....	17
5.Software	17
5.1 System Requirements	17
5.2 System Software	18
5.3 C# Programming Language	18
5.4 JY-6301 Hardware Driver	18
5.5 Install the SeeSharpTools from JYTEK.....	19
5.6 Running C# Programs in Linux	19
6.Operating JY-6301 Modules.....	20

6.1 Quick Start.....	20
6.2 Special Operating Instructions	20
6.3 AI Operations	22
6.3.1 Channel Scan Sequence	24
6.3.2 Sampling Rate	27
6.4 Conversion of Resistance and Temperature.....	29
6.5 Trigger Source	30
6.5.1 Immediate Trigger.....	30
6.5.2 Software Trigger.....	31
6.5.3 External digital trigger.....	31
6.6 Trigger Mode.....	34
6.6.1 Start Trigger	34
6.6.2 Reference Trigger.....	36
6.6.3 Retrigger.....	36
Learn by Example 6.6.2 and 6.6.3	37
6.7 System Synchronization Interface (SSI) for PCIe Modules.....	39
6.8 DIP Switch in PCIe-6301	40
7.Calibration	41
8.Using JY-6301 in Other Software	42
8.1 Python	42
8.2 C++	42
9.Appendix	43
9.1 RTD Connections.....	43
9.2 PT100 Temperature/Resistance Table	46
10.About JYTEK.....	48
10.1 JYTEK China	48
10.2 JYTEK Software Platform.....	48
10.3 JYTEK Warranty and SupportServices	48
11.Statement.....	49
Figure 1 Resistance and Temperature Measurements.....	2
Figure 2 JYPEDIA Information	3
Figure 3 TB- 68 terminal block	4
Figure 4 RTD Temperature Measurement Principle.....	7
Figure 5 JY-6301 Front Panel	11
Figure 6 AI Continuous Parameters	22
Figure 7 Single Channel Continuous Acquisition	23

Figure 8 Typical channel scan sequence	24
Figure 9 Random channel scan sequence.....	25
Figure 10 AI MutilChannel Continuouas Paraments.....	26
Figure 11 MultiChannel Continuous Acquisition	26
Figure 12 A / D conversion and sampling	27
Figure 13 Immediate Trigger Paraments	30
Figure 14 Rising and falling edges of digital signals	31
Figure 15 Digital Trigger Paraments.....	32
Figure 16 Digial Trigger Acquisition	33
Figure 17 Start Trigger Mode	34
Figure 18 Start Trigger Paraments	35
Figure 19 Reference Trigger mode	36
Figure 20 Retrigger mode	37
Figure 21 Retrigger Paraments	37
Figure 22 Retrigger in Reference Trigger Mode	38
Figure 23 Retrigger Complete State.....	38
Figure 24 SSI Connector in PCIe-6301.....	39
Figure 25 DIP Switch in PCIe-6301	40
Figure 26 2-wire RTD connection.....	43
Figure 27 3-wire RTD connection.....	44
Figure 28 4-wire RTD connection.....	45
Table 1 Resistance Measurement Accuracy	5
Table 2 Calculating Gain and Offset Errors	6
Table 3 JY-6301 Temperature Measurement Accuracy.....	6
Table 4 Err_1 : RTD Tolerance Class Information.....	7
Table 5 Err_2 : JY- 6301 Temperature Measurement Accuracy.....	8
Table 6 Calculating Total Error	8
Table 7 Analog Input Performance	9
Table 8 PFI Specification	10
Table 9 Trigger Specification	10
Table 10 Clock Specification.....	10
Table 11 RTD Mode and Channel Assignment.....	11
Table 12 Pinouts for 4-wire mode RTD Measurement	13
Table 13 Pinouts for 2, 3-wire RTD Measurement	15
Table 14 Channel Pin Connections.....	16
Table 15 Mixing 2-wire and 4-wire Modes	16

Table 16 6301 on different buses	16
Table 17 Physical and Environment	17
Table 18 Supported Linux Versions	17
Table 19 SSI Connector Pin Assignment for PCIe-6301	39
Table 20 Relationship between switch position and card number	40

1. Introduction

This chapter presents the information how to use this manual and operate the module if you are already familiar with Microsoft Visual Studio and C# programming language.

1.1 Overview

JY-6301 is a high-accuracy, high-resolution and high-speed temperature measurement module designed for PT100 Resistance Temperature Detector (RTD).

JY-6301 supports “2-wire”, “3-wire”, and “4-wire” RTD measurements. It can measure resistance up to 400 Ω to cover the full range of PT100 RTD measurements and the maximum sampling rate is up to 800 samples per second. It also supports digital and software trigger. All trigger signals are routed through PFI or PXI chassis backplane.

JYTEK has made major changes in this revision. Version 2.1 users may experience incompatibility to our new driver because JYTEK has made 2-wire, 3-wire, 4-wire public properties and removed the previous 3-wire and 4-wire modes. Please contact JYTEK for assistance if you encounter any incompatibility issues.

1.2 Main Features

- High Accuracy: 341 ppm
- 24-bits of resolution
- 5 sample rates from 0.25 to 800 Sample/s
- 32 channels for 2 and 3-wire measurements
- 20 channels for 4-wire measurements
- -200 °C ~ +850 °C measurement range (using PT100)
- 0 ~ 400 Ω range
- The balance line resistance compensation is provided under the 3-wire RTD measurements
- 128M sample onboard FIFO buffer for analog input
- DMA for analog input
- Provide resistance or temperature measurement value
- Digital/Software Trigger

1.3 RTD Temperature Measurement

Figure 1 shows how JY-6301 is typically used to measure the temperature through the RTDs. A RTD converts a temperature measurement to a resistance which is measured by JY-6301.

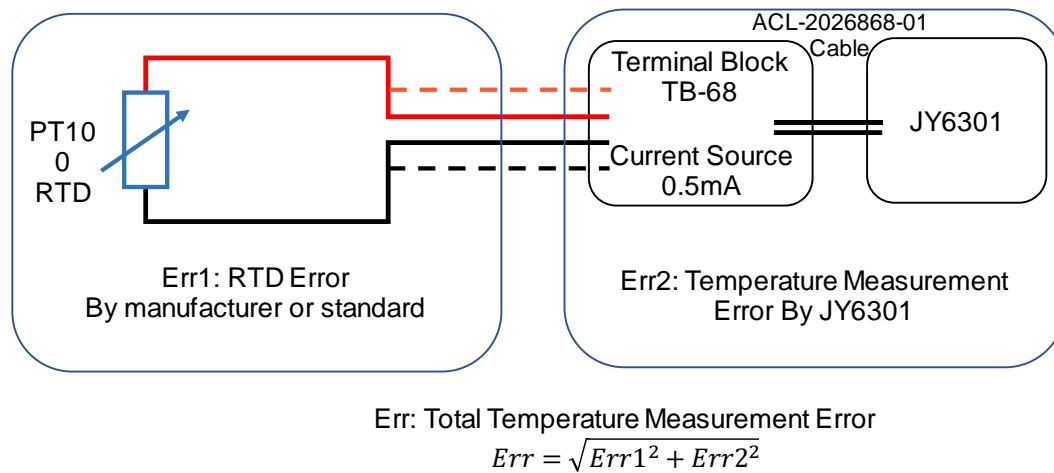


Figure 1 Resistance and Temperature Measurements

1.4 Abbreviations

- JY-6301: JYTEK PCIe/PXIe/TXI/USB-6301
- RTD: Resistance Temperature Detector
- AI: Analog Input
- ADC: Analog to Digital Converter
- PFI: Programmable Function Interface
- RTD: Resistance Temperature Detector
- Ex+: Positive terminal of current Excitation
- Ex-: Negative terminal of current Excitation
- RDC: Resistance-to-Digital Converter
- OS: Operating System

1.5 JYPEDIA

JYPEDIA is an excel file, which contains JYTEK product information, pricing, inventory information, drivers, software, technical support, knowledge base etc. You can download a JYPEDIA excel file from our web www.jytek.com. JYTEK highly recommends you use this file to obtain information from JYTEK.

1.6 Learn by Example

Learn by Example is a unique feature in JYTEK product manual. in this manual. We provide many sample programs for this device. Open JYPEDIA and search for JY-6301 in the driver sheet, select JY6301_Examples.zip. This will lead you to download the sample program for this device.

 简仪科技 JYTEK		Drivers are often u
Drivers	Update Date	
JY6301 V3.0.0 Linux.tar	2021/2/5	
JY6301 V3.0.0 Win.zip	2021/2/5	
JY6301 V3.0.0 Examples.zip	2021/2/5	

Figure 2 JYPEDIA Information

In a **Learn by Example** section, the sample program is in bold style such as **Winform AI Continuous MultiChannel**; the property name in the sample program is also in bold style such as **SamplesToAcquire**; the technical names used in the manual is in italic style such as *SampleRate*. You can easily relate the property names in the example program with the manual documentation.

In a **Learn by Example** section, the experiment is set up as follow. A JY-6301 card is plugged in a desktop computer. JY-6301 is connected to a TB- 68 terminal block. A signal source is also connected to the same terminal block as shown in Figure 3.

2. Resistance Measurement Specifications

This chapter provides the voltage accuracy specifications of JY-6301.

2.1 Gain and Offset Errors

JY-6301 measures RTD resistance. It has built-in filters to improve the measurement accuracy of JY-6301 accuracy is defined by:

$$\text{Accuracy} = \text{Gain Error (\% of reading)} + \text{Offset Error (m}\Omega\text{)}.$$

It should be noted when the reading is close to zero, the gain error is very small and negligible, the offset error is dominant; when the reading is getting close to the full range, the gain error becomes more significant.

2.2 Basic Resistance Accuracy

The basic RTD measurement accuracy is shown in Table 1.

JY6301 Accuracy = ±(Gain Error % of Reading + Offset Error mΩ), 4-Wire												
Sample Rate (Sample/s)	Range (Ω)	24 Hour Tcal ±1C°		90 Days Tcal ± 5°		24 Hr Accuracy @100Ω	90 Days Accuracy @100Ω	24 Hr Full Scale Accuracy @400Ω	90 Days Full Scale Accuracy @400Ω	24 Hr Full Scale Accuracy @400Ω (%)	90 Days Full Scale Accuracy @400Ω (%)	2,3-wire Offset Adjustment
40	400	0.012	+ 0.005	0.014	+ 0.007	32 mΩ	42 mΩ	68 mΩ	84 mΩ	0.017	0.021	1 mΩ
400	400	0.012	+ 0.005	0.014	+ 0.009	32 mΩ	50 mΩ	68 mΩ	92 mΩ	0.017	0.023	2 mΩ
800	400	0.012	+ 0.006	0.015	+ 0.014	36 mΩ	71 mΩ	72 mΩ	120 mΩ	0.018	0.030	12 mΩ

Table 1 Resistance Measurement Accuracy

Please refer to 9.1 for more information on 2,3 and 4-wire RTD connections.

2.3 Example of Calculating Gain and Offset Errors

Table 2 shows two examples of calculating the total gain and offset errors. Select the sample rate of 40S/s and the range of 400Ω. Then get two different measurements. The first one has a reading value of 100 Ω, while the second one has a reading value of 400 Ω. For the 100 Ω reading value, the gain error is 12mΩ, while for the 400 Ω reading value, the gain error is 48mΩ. The offset errors for both reading values are the same 40 mΩ. As a result, For the 100 Ω reading value, the total error(Gain+Offset) is 32mΩ, while for the 400 Ω. reading value, the total error(Gain+Offset) is 68mΩ.

Calculating Gain and Offset Errors				
Sample Rate (Sample/s)	40.0		40.0	
Error Calculation	Gain	Offset	Gain	Offset
Coef from Basic AccuracyTable (%)	0.012	0.005	0.012	0.005
Reading(Ω) and Range(Ω)	100	400	400	400
Gain and Offset Errors (m Ω)	12	20	48	20
Total Error (Gain+Offset) (m Ω)	32		68	

Table 2 Calculating Gain and Offset Errors

3. Temperature Measurement Accuracy

The temperature measurement is converted from the resistance measurement. The

Table 3 lists the temperature measurement accuracies for different wire configurations.

90Days Temperature Measurement Accuracy (4-Wire)				
RTD Type	Temperature Range ($^{\circ}\text{C}$)	Sample Rate (S/s)		
		40.0	400.0	800.0
PT 100	-200 to 850	0.29	0.31	0.40

24H Temperature Measurement Accuracy (4-Wire)				
RTD Type	Temperature Range ($^{\circ}\text{C}$)	Sample Rate (S/s)		
		40.0	400.0	800.0
PT 100	-200 to 850	0.23	0.23	0.25

Table 3 JY-6301 Temperature Measurement Accuracy

3.1 RTD Measurement Basics

A RTD temperature measurement utilizes the "Seebeck effect", and its basic measurement principle is shown in the Figure 4 RTD Temperature Measurement Principle.

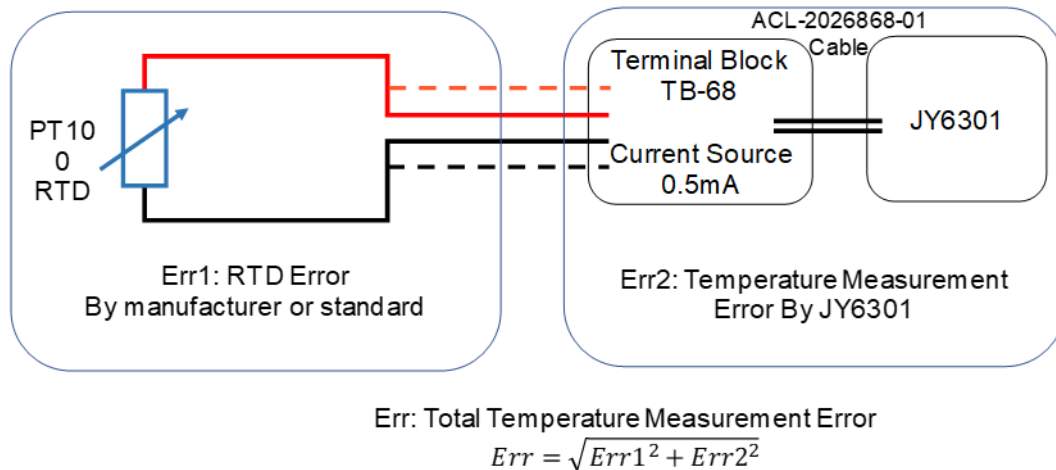


Figure 4 RTD Temperature Measurement Principle

This resistance is measured by JY-6301 and is then converted the temperature values using a conversion formula defined by the standard.

3.2 RTD Accuracy

A RTD has its own accuracy, also called the error tolerance in many international standards. Table 4 shows the accuracies of common RTD according to standards.

TOLERANCE	TOLERANCE VALUES(°C)	ERROR AT 100°C(°C)
ASTM Grade B	$\pm (0.25 + 0.0042 \cdot T)$	± 0.67
ASTM Grade A	$\pm (0.13 + 0.0017 \cdot T)$	± 0.3
IEC Class C	$\pm (0.6 + 0.01 \cdot T)$	± 1.6
IEC Class B	$\pm (0.3 + 0.005 \cdot T)$	± 0.8
IEC Class A	$\pm (0.15 + 0.002 \cdot T)$	± 0.35
IEC Class AA	$\pm (0.1 + 0.0017 \cdot T)$	± 0.27
1/10 DIN	$\pm (0.03 + 0.0005 \cdot T)$	± 0.8

Table 4 Err_1 : RTD Tolerance Class Information

The accuracies given by Table 4 are valid for unused RTD material only. It is important that users verify the accuracy of the RTD from the RTD manufacturer.

3.3 Temperature Measurement Accuracy by JY-6301

A RTD converts a temperature reading to a voltage which is then measured by JY-6301. The standard provides the conversion formula for different thermocouples and for

different temperature ranges. Table 5 shows the temperature measurement accuracy using JY-6301 for each type and each range of RTD . The operating conditions are also listed in the table.

Temperature Measurement Accuracy (4-Wire)							
RTD Type	Temperature Range (°C)	Sample Rate (S/s)					
		2.2	5.0	25.0	40.0	400.0	800.0
PT 100	-200 to 850	0.75	0.57	0.58	0.58	0.62	0.69
Operating Temperature: For 4-Wire, Tcal±1°C Add 0.8mΩ to all configurations when operating outside Tcal±1°C range The measurement errors do not include the errors from the RTD Terminal Block: TB-68 Cable:ACL-201686-01							

Table 5 Err₂: JY- 6301 Temperature Measurement Accuracy

3.4 Total Temperature Measurement Accuracy

The total temperature measurement accuracy consists of the errors due to the RTD and measurement errors by JY-6301 as shown in Figure 4. It can be calculated by:

$$\text{Total Accuracy Err} = \sqrt{\text{Err}_1^2 + \text{Err}_2^2}$$

Err₁ is the RTD error from Table 4 of Section 3.2. Err₂ is the temperature measurement accuracy from Table 5 of Section 3.3.

Table 6 shows two calculations for the total accuracies when using a class 1 K-type RTD to measure 100 °C and 800° C temperatures with 2.2Hz sample rate. The two temperatures fall into different range. Hence the temperature measurement errors by JY-6301 are different.

Total Temperature Measurement Error (PT 100)		
Sample Rate (Sample/s)	5	
RTD Type and Class	PT 100	PT 100
Temperature Being Measured (°C)	100	800
Fixed Error from Standard IEC Class A(°C)	0.15	0.15
Calculated from Standard IEC Class A(T *0.002) (°C)	0.20	1.60
Err1: Total RTD Error for PT 100, Larger of above two lines (°C)	0.35	1.75
Err2: JY6301 Temperature Measurement Accuracy for PT 100 (°C)	0.57	0.57
Total Accuracy, sqrt(err1^2+err2^2) (°C)	0.67	1.84

Table 6 Calculating Total Error

4. Additional Specifications

4.1 Analog Hardware Specifications

Number of channels	32ch (2-wire/3-wire)
	20ch (2-wire/3-wire/4-wire)
Synchronous acquisition	No
Sensor support	RTD PT100
ADC resolution	24 bits
ADC type	Δ - Σ
Input isolation	Yes
Sampling Rate Per Bank (4 Banks, 8 Chs/Bank), 4 Banks Use Same Sample Rate	800 Sample/s/N (N=1-8)
	160 Sample/s (2-wire/3-wire/4-wire, 20ch fully used)
	100 Sample/s (2-wire/3-wire, 32ch fully used)
Clock	Onboard (25 MHz)
	PX I_CLK100
	Clock in (PCIe /TX I Only)
Storage depth	128M Samples
Measuring range	0 Ω ~ 400 Ω / -200 $^{\circ}$ C ~ +850 $^{\circ}$ C(for PT100)
Terminal type	2-wire/3-wire/4-wire
Excitation current	1000 μ A (4-wire)
	500 μ A (2-wire/3-wire)
Overvoltage protection	\pm 30 V
Trigger type	Digital/Software
Analog trigger range	0 Ω ~ 400 Ω / -200 $^{\circ}$ C ~ +850 $^{\circ}$ C (for PT100)
Trigger mode	StartTrigger, ReferenceTrigger, ReTrigger
Digital trigger source	PX I_TRIG <0..7>
	PX I_STAR
	PFI<0..7>

Table 7 Analog Input Performance

JY-6301's 32 channels are grouped by 4 banks, each having 8 channels. The sampling rate per channel must be divided by the sampling rate per bank.

4.2 PFI

The PFIs(Programable Fuction Interface) are digital IO interfaces and are used for general purpose IO, a trigger input/ output, a clock-in and clock out. In 6501, the PFI can only be used for the external digital triggering and cannot be configured as output.

Number of channels	8 (4 of them have hardware pull-ups)
External digital trigger interface	Trigger voltage: 5 V TTL
	Trigger edge: Rising /Falling
Initial state	Input*
<i>*6301's PFI is only used for external digital triggering, cannot be configured as output</i>	

Table 8 PFI Specification

4.3 Trigger

Digital trigger

Trigger source:	PXI_TRIG <0..7>, PXI_STAR, PFI <0..7>
Trigger mode:	Start Trigger, Reference Trigger
Trigger polarity:	Software-selectable

Analog trigger

Trigger source:	AI CH<0..31>
Trigger mode:	Start Trigger, Reference Trigger
Trigger polarity:	Software-selectable

Table 9 Trigger Specification

4.4 Clock

Clock source:	On Board
Clock Destination:	Sample Clock

Table 10 Clock Specification

4.5 Front Panel connections

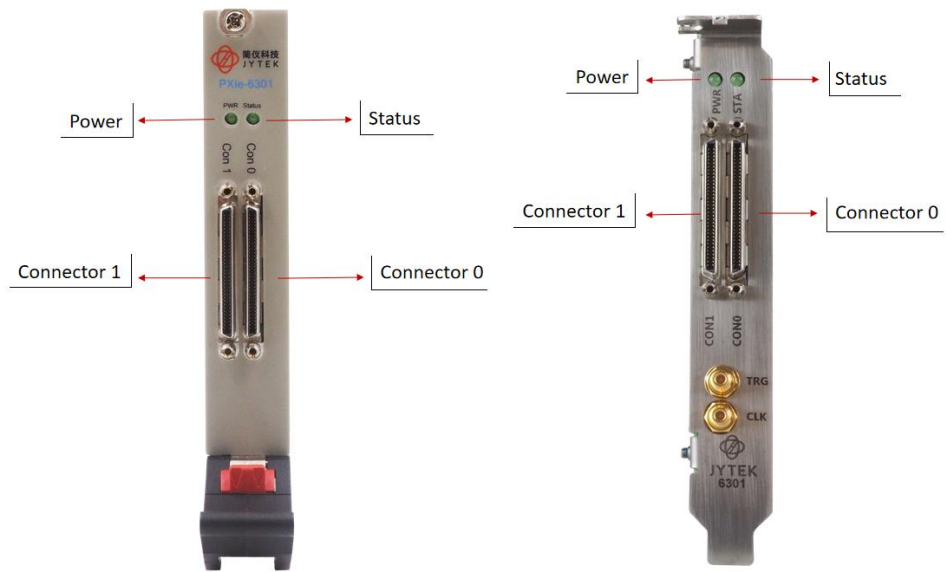


Figure 5 JY-6301 Front Panel

4.6 Channel Assignment

JY-6301 supports 20 channels of 4-wire RTD measurements and 32 channels of 2- or 3-wire RTD measurements. Their channel numbers are listed in Table 11.

Mode	Channels
4-wire mode	Ch0 - Ch19
2 and 3-wire mode	Ch0 - Ch31

Table 11 RTD Mode and Channel Assignment

4.7 Pinouts for 4-wire Mode

JY-6301 supports 20 channels of RTD measurement. The pinout of the “4-wire mode” is shown in Table 12,

Connector 1 (left)			Connector 0 (right)		
Channel	Pin No.	Description	Channel	Pin No.	Description
Ch10	P43	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch0	P43	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P35	Al+, resistance measurement high side		P35	Al+, resistance measurement high side
	P1	Al-, resistance measurement low side		P1	Al-, resistance measurement low side
	P36	Ex-, Negative terminal of current excitation		P36	Ex-, Negative terminal of current excitation
Ch11	P9	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch1	P9	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P37	Al+, resistance measurement high side		P37	Al+, resistance measurement high side
	P3	Al-, resistance measurement low side		P3	Al-, resistance measurement low side
	P2	Ex-, Negative terminal of current excitation		P2	Ex-, Negative terminal of current excitation
Ch12	P44	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch2	P44	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P38	Al+, resistance measurement high side		P38	Al+, resistance measurement high side
	P4	Al-, resistance measurement low side		P4	Al-, resistance measurement low side
	P39	Ex-, Negative terminal of current excitation		P39	Ex-, Negative terminal of current excitation
Ch13	P10	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch3	P10	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P40	Al+, resistance measurement high side		P40	Al+, resistance measurement high side
	P6	Al-, resistance measurement low side		P6	Al-, resistance measurement low side
	P5	Ex-, Negative terminal of current excitation		P5	Ex-, Negative terminal of current excitation
Ch14	P46	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch4	P46	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P41	Al+, resistance measurement high side		P41	Al+, resistance measurement high side
	P7	Al-, resistance measurement low side		P7	Al-, resistance measurement low side
	P42	Ex-, Negative terminal of current excitation		P42	Ex-, Negative terminal of current excitation
Ch15	P58	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch5	P58	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P49	Al+, resistance measurement high side		P49	Al+, resistance measurement high side
	P15	Al-, resistance measurement low side		P15	Al-, resistance measurement low side
	P50	Ex-, Negative terminal of current excitation		P50	Ex-, Negative terminal of current excitation
Ch16	P24	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch6	P24	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P51	Al+, resistance measurement high side		P51	Al+, resistance measurement high side
	P17	Al-, resistance measurement low side		P17	Al-, resistance measurement low side
	P16	Ex-, Negative terminal of current excitation		P16	Ex-, Negative terminal of current excitation
Ch17	P59	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch7	P59	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P52	Al+, resistance measurement high side		P52	Al+, resistance measurement high side
	P18	Al-, resistance measurement low side		P18	Al-, resistance measurement low side
	P53	Ex-, Negative terminal of current excitation		P53	Ex-, Negative terminal of current excitation
Ch18	P25	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch8	P25	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P54	Al+, resistance measurement high side		P54	Al+, resistance measurement high side
	P20	Al-, resistance measurement low side		P20	Al-, resistance measurement low side
	P19	Ex-, Negative terminal of current excitation		P19	Ex-, Negative terminal of current excitation
Ch19	P61	Ex+, Positive terminal of current excitation (only for 4-wire mode)	Ch9	P61	Ex+, Positive terminal of current excitation (only for 4-wire mode)
	P55	Al+, resistance measurement high side		P55	Al+, resistance measurement high side
	P21	Al-, resistance measurement low side		P21	Al-, resistance measurement low side
	P57	Ex-, Negative terminal of current excitation		P57	Ex-, Negative terminal of current excitation
GND	P30	GND	GND	P30	GND
	P31				
	P32				
	P33				
	P34				
PFI	P64	PFI4	PFI	P64	PFI0
	P65	PFI5		P65	PFI1
	P66	PFI6 (with pull-up resistor)		P66	PFI2 (with pull-up resistor)
	P67	PFI7 (with pull-up resistor)		P67	PFI3 (with pull-up resistor)
Others	P13	Reserved, NO connect	Others	P13	Reserved, NO connect
	P47				
	P28				
	P62				
	P68				

Table 12 Pinouts for 4-wire mode RTD Measurement

4.8 Pinouts for 2 and 3-wire Mode

JY-6301 supports 32 channels of RTD measurement. The pinouts of the 2 and 3-wire mode is shown in Table 13.

Connector 1 (left)			Connector 0 (right)		
Channel	Port	Port definition	Channel	Port	Port definition
Ch16	P35	AI+, resistance measurement high side	Ch0	P35	AI+, resistance measurement high side
	P1	AI-, resistance measurement low side		P1	AI-, resistance measurement low side
	P36	Ex-, Negative terminal of current excitation (connet to AI-for 2 wire configuration)		P36	Ex-, Negative terminal of current excitation (connet to AI-for 2 wire configuration)
Ch17	P37	AI+, resistance measurement high side	Ch1	P37	AI+, resistance measurement high side
	P3	AI-, resistance measurement low side		P3	AI-, resistance measurement low side
	P2	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P2	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch18	P38	AI+, resistance measurement high side	Ch2	P38	AI+, resistance measurement high side
	P4	AI-, resistance measurement low side		P4	AI-, resistance measurement low side
	P39	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P39	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch19	P40	AI+, resistance measurement high side	Ch3	P40	AI+, resistance measurement high side
	P6	AI-, resistance measurement low side		P6	AI-, resistance measurement low side
	P5	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P5	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch20	P41	AI+, resistance measurement high side	Ch4	P41	AI+, resistance measurement high side
	P7	AI-, resistance measurement low side		P7	AI-, resistance measurement low side
	P42	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P42	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch21	P43	AI+, resistance measurement high side	Ch5	P43	AI+, resistance measurement high side
	P9	AI-, resistance measurement low side		P9	AI-, resistance measurement low side
	P8	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P8	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch22	P44	AI+, resistance measurement high side	Ch6	P44	AI+, resistance measurement high side
	P10	AI-, resistance measurement low side		P10	AI-, resistance measurement low side
	P45	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P45	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch23	P46	AI+, resistance measurement high side	Ch7	P46	AI+, resistance measurement high side
	P12	AI-, resistance measurement low side		P12	AI-, resistance measurement low side
	P11	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P11	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch24	P49	AI+, resistance measurement high side	Ch8	P49	AI+, resistance measurement high side
	P15	AI-, resistance measurement low side		P15	AI-, resistance measurement low side
	P50	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P50	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch25	P51	AI+, resistance measurement high side	Ch9	P51	AI+, resistance measurement high side
	P17	AI-, resistance measurement low side		P17	AI-, resistance measurement low side
	P16	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P16	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch26	P52	AI+, resistance measurement high side	Ch10	P52	AI+, resistance measurement high side
	P18	AI-, resistance measurement low side		P18	AI-, resistance measurement low side
	P53	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P53	NEG, Short circuit connection to AI- in two-wire mode
Ch27	P54	AI+, resistance measurement high side	Ch11	P54	AI+, resistance measurement high side
	P20	AI-, resistance measurement low side		P20	AI-, resistance measurement low side
	P19	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P19	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch28	P55	AI+, resistance measurement high side	Ch12	P55	AI+, resistance measurement high side
	P21	AI-, resistance measurement low side		P21	AI-, resistance measurement low side
	P57	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P57	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch29	P58	AI+, resistance measurement high side	Ch13	P58	AI+, resistance measurement high side
	P24	AI-, resistance measurement low side		P24	AI-, resistance measurement low side
	P23	NEG, short circuit connection to AI- in two-wire mode		P23	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch30	P59	AI+, resistance measurement high side	Ch14	P59	AI+, resistance measurement high side
	P25	AI-, resistance measurement low side		P25	AI-, resistance measurement low side
	P60	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P60	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
Ch31	P61	AI+, resistance measurement high side	Ch15	P61	AI+, resistance measurement high side
	P27	AI-, resistance measurement low side		P27	AI-, resistance measurement low side
	P26	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)		P26	Ex-, Negative terminal of current exciation (connet to AI-for 2 wire configuration)
GND	P30	GND	GND	P30	GND
	P31				
	P32				
	P33				
PFI	P64	PFI4	PFI	P64	PFI0
	P65	PFI5		P65	PFI1
	P66	PFI6 (with pull-up resistor)		P66	PFI2 (with pull-up resistor)
	P67	PFI7 (with pull-up resistor)		P67	PFI3 (with pull-up resistor)
Others	P13	Reserved, NO connect	Others	P13	Reserved, NO connect
	P47				
	P28				
	P62				
	P68				

Table 13 Pinouts for 2, 3-wire RTD Measurement

4.9 Channel Pin Connections

Each 2,3-wire RTD has three pins, A+/A-/Ex-; while each 4-wire RTD has four pins A+/A-/Ex+/Ex-. These pins must be connected to the external wires as shown in Table 14. “Short to” means to connect pins on the terminal block.

Mode	Pins			
	AI+	AI-	Ex+	Ex-
2-wire	Wire+	Wire- Short to Ex-	N/A	Short to AI-
3-wire	Wire+	Wire-	N/A	Wire-Ex-
4-wire	Wire+	Wire-	Wire-Ex+	Wire-Ex-

Table 14 Channel Pin Connections

4.1 Mixing 2-wire and 4-wire RTD Measurements

When JY-6301 is configured to make 4-wire RTD measurements, it can also be used to make 2-wire RTD measurements. Table 15 shows the wiring needed. “Short to” means to connect pins on the terminal block.

Mode	Pins			
	AI+	AI-	Ex+	Ex-
2-wire	Wire+ Short to Ex+	Wire- Short to Ex-	Short to AI+	Short to AI-

Table 15 Mixing 2-wire and 4-wire Modes

4.1 Bus Supported

The JY-6301 series are one of the family of temperature measurement module, which can run on PCIe, PXIe, TXI (Thunderbolt) and USB buses (coming soon). JY-6301 series on different buses are shown in Table 16.

6301 Model	PCIe	PXIe	TXI	USB
6301	√	√	√	√

Table 16 6301 on different buses

4.1 Physical and Environment

Bus

PXle standard:	x4 PXI Express module, specification rev 1.0 compliant
Slot supported:	x1 and x4 PXI Express or PXI Express hybrid slots

Size

External physical size:	3U PXIE
Weight:	190 g

Operating Environment

Ambient temperature range	0 °C to 50 °C
Relative humidity range	20% to 80%, noncondensing

Storage Environment

Ambient temperature range	-20°C to 80°C
Relative humidity range	10% to 90%, noncondensing

Power

3.3 V:	2.0 A
12 V:	0.04 A

Table 17 Physical and Environment

5. Software

5.1 System Requirements

JY-6301 can be used in a Windows or a Linux operating system.

Microsoft Windows: Windows 7 32/64 bit, Windows 10 32/64 bit.

Linux Kernel Versions: There are many Linux versions. It is not possible JYTEK can support and test our devices under all different Linux versions. JYTEK will at the best support the following Linux versions.

Linux Version	
Ubuntu LTS	
16.04:	4.4.0-21-generic(desktop/server)
16.04.6:	4.15.0-45-generic(desktop) 4.4.0-142-generic(server)
18.04:	4.15.0-20-generic(desktop) 4.15.0-91-generic(server)
18.04.4:	5.3.0-28-generic (desktop) 4.15.0-91-generic(server)
Localized Chinese Version	
中标麒麟桌面操作系统软件 (兆芯版) V7.0 (Build61) : 3.10.0-862.9.1.nd7.zx.18.x86_64	
中标麒麟高级服务器操作系统软件V7.0U6: 3.10.0-957.el7.x86_64	

Table 18 Supported Linux Versions

5.2 System Software

When using a JY-6301 in the Windows environment, you need to install the following software from Microsoft website:

Microsoft Visual Studio Version 2015 or above,

.NET Framework version is 4.0 or above.

.NET Framework is coming with Windows 10. For Windows 7, please check .NET Framework version and upgrade to 4.0 or later version.

Given the resources limitation, JYTEK only tested JY-6301 module with .NET Framework 4.0 and Microsoft Visual Studio 2015. JYTEK relies on Microsoft to maintain the compatibility for the newer versions.

5.3 C# Programming Language

All JYTEK default programming language is Microsoft Visual Studio C#. This is Microsoft recommended programming language in Microsoft Visual Studio and is particularly suitable for the test and measurement applications. C# is also a cross platform programming language.

5.4 JY-6301 Hardware Driver

After installing the required application development environment as described above, you need to install the JY-6301 hardware driver.

JYTEK hardware driver has two parts: the shared Common Kernel Driver (FirmDrive) and the hardware specific driver.

FirmDrive: FirmDrive is the JYTEK's common kernel driver for all hardware of JYTEK instruments. You need to install this kernel driver before using any other JYTEK hardware products. FirmDrive only needs to be installed once. After that, you can only install the hardware specific driver.

Hardware Specific Driver: Each JYTEK hardware has a C# hardware specific driver. This driver provides rich and easy-to-use C# interfaces for users to operate various JY-6301 functions. JYTEK has standardized the ways JYTEK and other vendor's DAQ cards are

used by providing a consistent Application Programming Interface, using the methods, properties and enumerations in the object-oriented programming environment. Once you get yourself familiar with how one JYTEK DAQ card works, you should be able to know how to use all other DAQ hardware using the same methods.

5.5 Install the SeeSharpTools from JYTEK

To efficiently and effectively use JY-6301 boards, you need to install a set of free C# utilities from JYTEK SeeSharp Test and Measurement platform. The SeeSharpTools offers versatile user interface functions you will find convenient in developing your applications. They are also needed to run the examples come with JY-6301 hardware. Please register and download the latest SeeSharpTools from our website www.jytek.com.

5.6 Running C# Programs in Linux

Most C# written programs in Windows OS can be run by MonoDevelop development system in Linux OS. You would develop your C# applications in Windows using Microsoft Visual Studio. Once it is done, run this application in the MonoDevelop environment. This is JYTEK recommended way to run your C# programs in Linux OS.

If you want to use your own Linux development system other than MonoDevelop, you can do it using our Linux driver. However, JYTEK does not have the capability to support the Linux applications. JYTEK completely relies upon Microsoft to maintain the cross-platform compatibility between Windows and Linux OS using MonoDevelop.

6. Operating JY-6301 Modules

This chapter provides the operation guides for JY-6301, including RTD measurement and programmable I/O interface, etc.

JYTEK provides extensive examples, on-line help and documentation to assist you to operate a JY-6301 board. JYTEK strongly recommends you go through these examples before writing your application. In many cases, an example can also be a good starting point for a user application.

6.1 Quick Start

After you have installed the driver software and the SeeSharpTols, you are ready to use Microsoft Visual Studio and our C# measurement and control platform tools (SeeSharp Platform) to operate a JY-6301 product.

If you are already familiar with Microsoft Visual Studio C#, the quickest way to use JY-6301 is to go through our extensive examples. We provide source code of our examples. In many cases, you can modify the source code and start to write your applications.

6.2 Special Operating Instructions

When using the JY-6301 module, it is crucial to avoid grounding the sensor, as doing so may significantly affect the measurement results. Grounding the sensor can introduce unwanted noise and errors into the system, leading to inaccurate temperature readings. To ensure the highest accuracy and reliability of your measurements, always follow these guidelines:

Isolate the Sensor: Keep the sensor electrically isolated from the ground. This means that the leads from the RTD sensor should only be connected to the designated terminals on the JY-6301 module and should not be connected to any ground or reference point on the system.

Avoid Ground Loops: A ground loop occurs when there are multiple paths to ground in a system, which can cause interference. Make sure that the sensor and the measurement system are referenced to a common ground point to prevent ground loops.

6.3 AI Operations

When performing AI operations, it will be helpful if you understand the characteristics of the signal to be acquired, then configure JY-6301 accordingly. Once configured, you can use our tools to read data and save it in the memory or on a disk for your future analysis. Please see the provided software examples for more information.

Learn by Example 6.2

- Connect the PT100's positive pole to AI+ (Pin#35), the negative poles to AI- (Pin#1) and Ex- (Pin#36);
- Open **Winform AI Continuous**, set the following numbers as shown. Choose **ThreeWire** in **RTD Terminal**;

Board Number	0
Channel Topology	FourWire20Ch
Physical Quantity	Temperature
Channel Number	Ch0
RTD Terminal	ThreeWire
Sampling Rate(S/s)	10.000
Samples To Acquire	10

Start Stop

Figure 6 AI Continuous Paraments

- Click **Start**, the result is shown below.

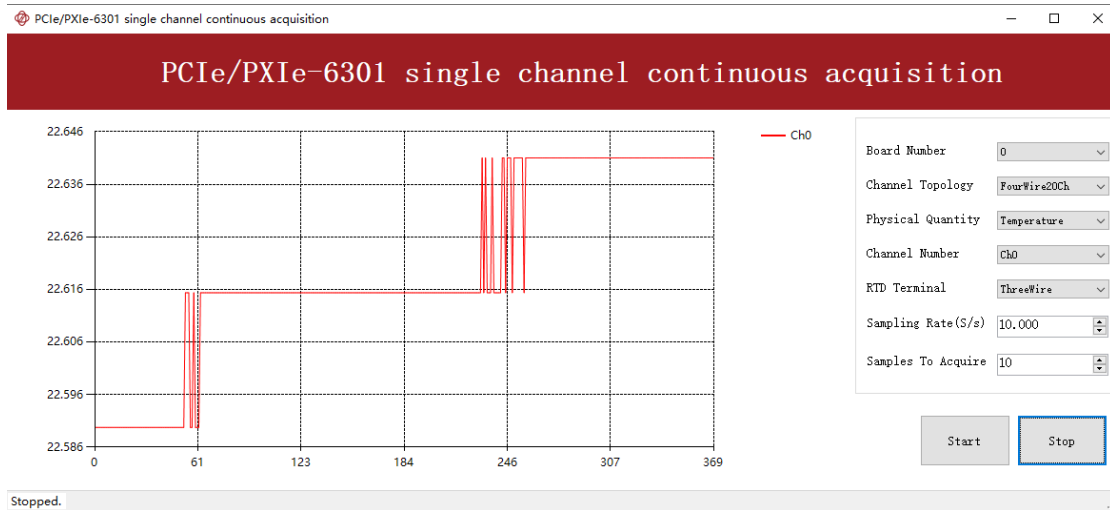


Figure 7 Single Channel Continuous Acquisition

- It shows that the temperature measured by channel0 is around 22.6°C.

6.3.1 Channel Scan Sequence

The scanning order of the channels is related to the order in which the user adds channels. When the acquisition task starts, the channels added by the user will be assigned to each ADC according to the group to which they belong. Each ADC will automatically switch channels through the multiplexer to traverse all enabled channels of the ADC for analog to digital conversion.

For a single ADC, the scan order is always consistent with the order in which the channels within the ADC packet range are added. However, since the four ADCs work at the same time, the scanning order of all the channels is not necessarily exactly the same as the order in which the user adds the channels.

Figure 8 shows a typical channel scan sequence. In this case, the user added all channels (Ch 0 ~ Ch 19) in order under the “4-wire mdoe” topology, and these channels were automatically assigned to 4 ADCs. At the beginning of the acquisition task, each ADC will start working at the same time, and then switch the channels in its group.

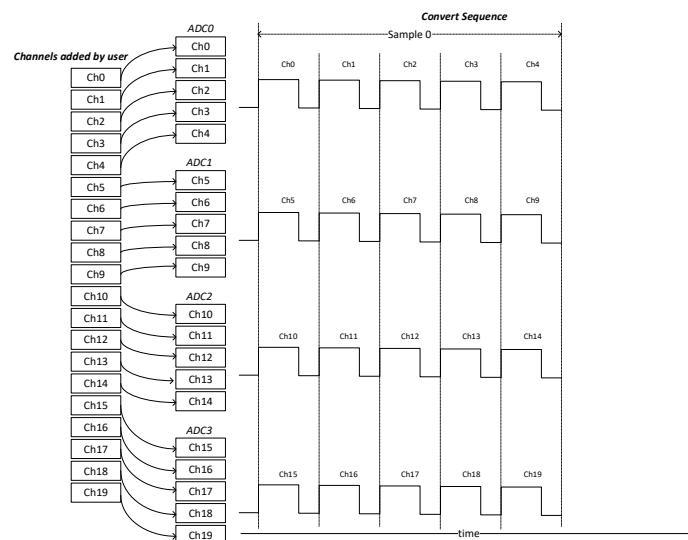


Figure 8 Typical channel scan sequence

Figure 9 shows another typical channel scan sequence, in which case the user added some channels in random order under the “4-wire mdoe” topology.

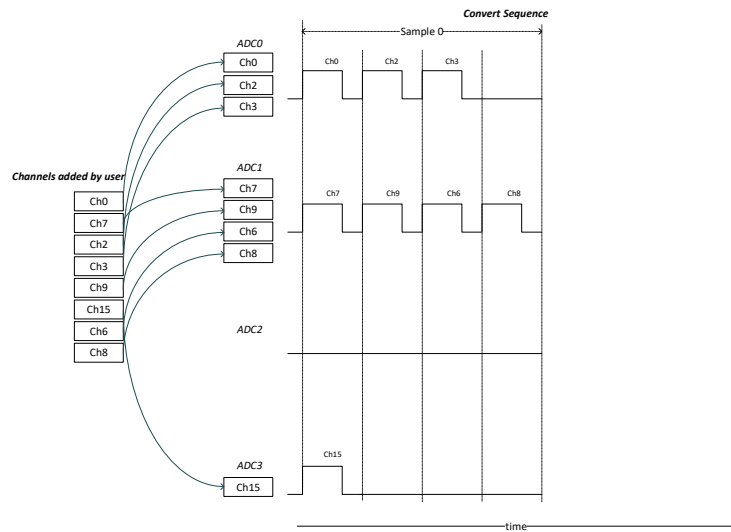


Figure 9 Random channel scan sequence

When using the driver, although the scan order of the channels does not necessarily match the order of adding channels, the data is automatically reordered internally by the driver, so the order of the data of each channel's reading data will always be the same as the order of adding channels.

Learn by Example 6.3.1

- Open the program **Winform AI Continuous MultiChannel**;
- Connect the PT100's positive pole to AI+ (Pin#35), the negative poles to AI- (Pin#1) and Ex- (Pin#36);
- Choose **Ch0** in **Channel Number** for measurement.
- Set other parameters as shown and click **Start**. The result is shown below.

Board Number: 0

Channel Topology: FourWire20Ch

Physical Quantity: Temperature

Channel Number:

- Ch0
- Ch1
- Ch2
- Ch3
- Ch4
- Ch5
- Ch6
- Ch7

RTD Terminal: ThreeWire

Sampling Rate(Sa/s): 10.000

Samples To Acquire: 10

Start Stop

Figure 10 AI MutilChannel Continuous Paraments

■ Click **Start**, the result is shown below.

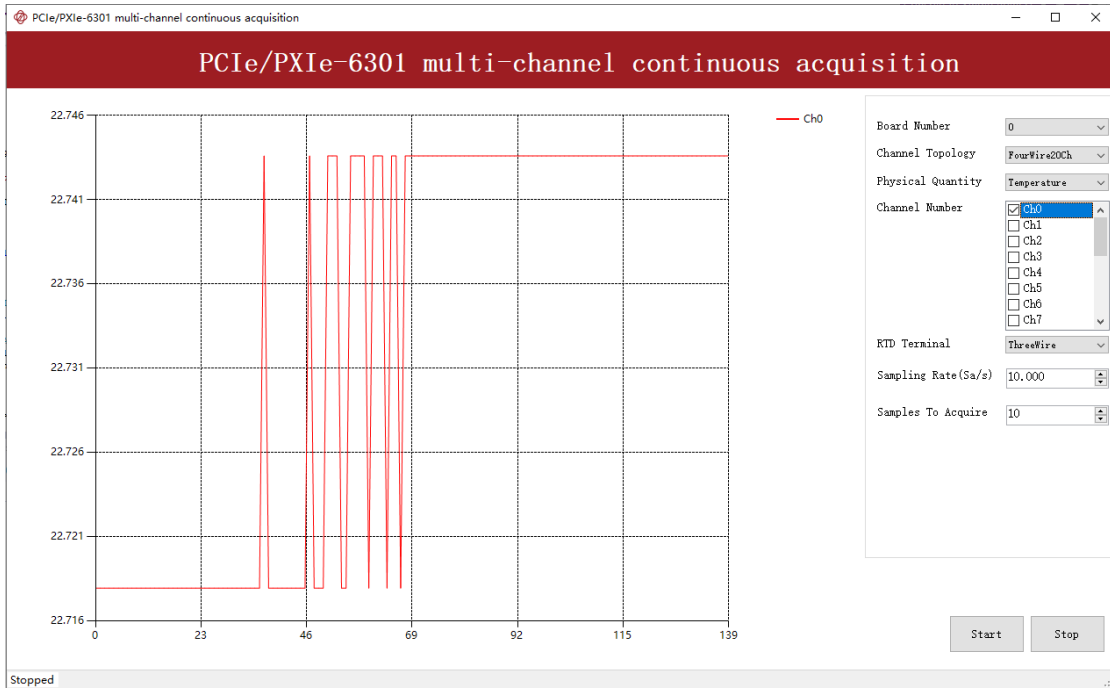


Figure 11 MultiChannel Continuous Acquisition

➤ It shows that the temperature measured by channel0.

6.3.2 Sampling Rate

When JY-6301 works, each sample contains the completion of an A/D converter (Convert) on all channels, the principle is as in Figure 12.

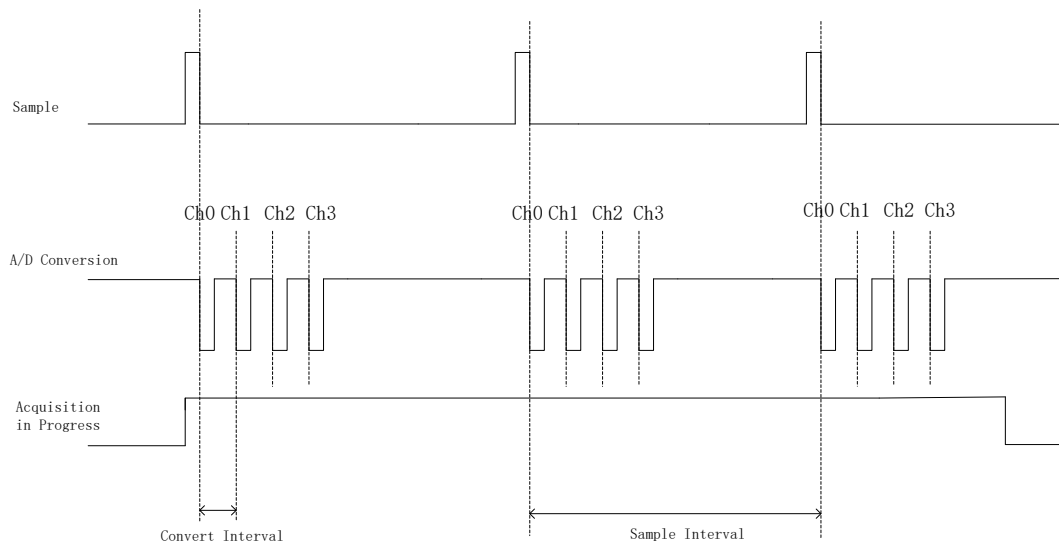


Figure 12 A / D conversion and sampling

The time required for each A/D conversion is controlled by the sampling rate level. The minimum sampling rate of JY-6301 is 0.25 S/s, and the maximum sampling rate is 800 S/s. The actual maximum sampling rate can be set according to the set rate grade and the number of channels added by each ADC for:

$$Max\ Sample\ Rate = \frac{Max\ Total\ Sample\ Rate}{max\ (number\ of\ channels\ on\ one\ ADC)}$$

Where:

- *Max Sample Rate*: The maximum sample rate that can be set
- *max (number of channels on one ADC)*: Maximum number of channels added on a single A DC.

When the user sets the timing mode to Auto, the driver internally reverses the current actual total sample rate according to the following formula:

$$Total\ Sample\ Rate = max(number\ of\ channels\ on\ any\ one\ ADC) * Sample\ Rate$$

Where:

- *Total Sample Rate*: Current actual total sampling rate
- $\max(\text{number of channels on any one ADC})$: Maximum number of channels added on a single ADC
- *Sample Rate*: User-set sampling rate

6.4 Conversion of Resistance and Temperature

JY-6301 is a temperature measurement module designed for the PT100 RTD with a maximum measurable resistance of 400 Ω . During temperature measurement, JY-6301 first measures the resistance value, then automatically converts the resistance value (Ω) to the temperature value ($^{\circ}\text{C}$).

For the conversion of resistance and temperature values, the internal conversion formula of the driver is referenced to the platinum RTD standard DIN/IEC 60751:2008 (Edition 2.0), ie:

When the temperature is between -200°C and 0°C :

$$R_t = R_0[1 + At + Bt^2 + C(t - 100^{\circ}\text{C})t^3]$$

When the temperature is between 0°C and 850°C :

$$R_t = R_0(1 + At + Bt^2)$$

Where:

- R_t : The resistance value (Ω) of PT100 when the temperature is t ($^{\circ}\text{C}$)
- R_0 : The resistance value (Ω) of PT100 when the temperature is 0°C , ie. 100 Ω
- $A = 3.9083 * 10^{-3} \text{ }^{\circ}\text{C}^{-1}$
- $B = -5.775 * 10^{-7} \text{ }^{\circ}\text{C}^{-2}$
- $C = -4.183 * 10^{-12} \text{ }^{\circ}\text{C}^{-4}$

The complete temperature/resistance index table is shown in

Appendix Table 1.

Get resistance value

The resistance value (Ω) can be read from JY-6301 when the ReadRawData method is called.

6.5 Trigger Source

6.5.1 Immediate Trigger

The module will acquire the signal immediately after executing the AI Task without any trigger condition setting by default.

Learn by Example 6.5.1

- Connect the PT100's positive pole to AI+ (Pin#35), the negative poles to AI- (Pin#1) and Ex- (Pin#36);
- Open **Winform AI Continuous**;
- Set parameters as shown and click **Start**.

Board Number	0
Channel Topology	FourWire20Ch
Physical Quantity	Temperature
Channel Number	Ch0
RTD Terminal	TwoWire
Sampling Rate(S/s)	10.000
Samples To Acquire	10

Figure 13 Immediate Trigger Parameters

- With Immediate trigger you can click **Start** to begin the task instead of sending a trigger signal.

6.5.2 Software Trigger

The analog acquisition task will wait on the software trigger signal in the software trigger mode until receiving a software trigger signal from driver, then AI task will start to acquire the data.

6.5.3 External digital trigger

The module supports different external digital trigger sources from PXI Trigger bus (PXI_TRIG<0..7>), PXI_STAR and connectors of front panel (PFI). The pulse width of digital trigger signal must be longer than 20 ns for effective trigger. The module will monitor the signal on digital trigger source and wait for the rising edge or falling edge of digital signal which depending on the set trigger condition, then enables the module to acquire the data as shown in Figure 14.



Figure 14 Rising and falling edges of digital signals

Learn by Example 6.5.3

- Connect the PT100's positive pole to AI+ (Pin#35), the negative poles to AI- (Pin#1) and Ex- (Pin#36), then connect the signal source's positive pole and negative pole to JY-6301 PFI2 (Pin#66) and GND (Pin#30);
- Set the signal source Ch1's output to square wave ($f=1\text{Hz}$, $V_{pp}=5\text{v}$);
- Choose **Rising** in **Trigger Condition** and choose **PFI_2** in **Trigger Source**;
- Open **Winform AI Continuous Digital Trigger**, set the following parameters as shown and click **Start**.

Board Number	0
Channel Topology	FourWire20Ch
Physical Quantity	Temperature
Channel Number	<input checked="" type="checkbox"/> Ch0 <input type="checkbox"/> Ch1 <input type="checkbox"/> Ch2 <input type="checkbox"/> Ch3 <input type="checkbox"/> Ch4 <input type="checkbox"/> Ch5 <input type="checkbox"/> Ch6
RTD Terminal	ThreeWire
Sampling Rate(Sa/s)	10.000
Samples To Acquire	10
Trigger Mode	Start
Pre Trigger Samples	0
Trigger Source	PFI_2
Trigger Condition	Rising

Start
Stop

Figure 15 Digital Trigger Parameters

- **Trigger Source** must match the pin on the terminal block.
- There are two **Trigger Conditions: Rising** and **Falling**.
- The result is shown below:

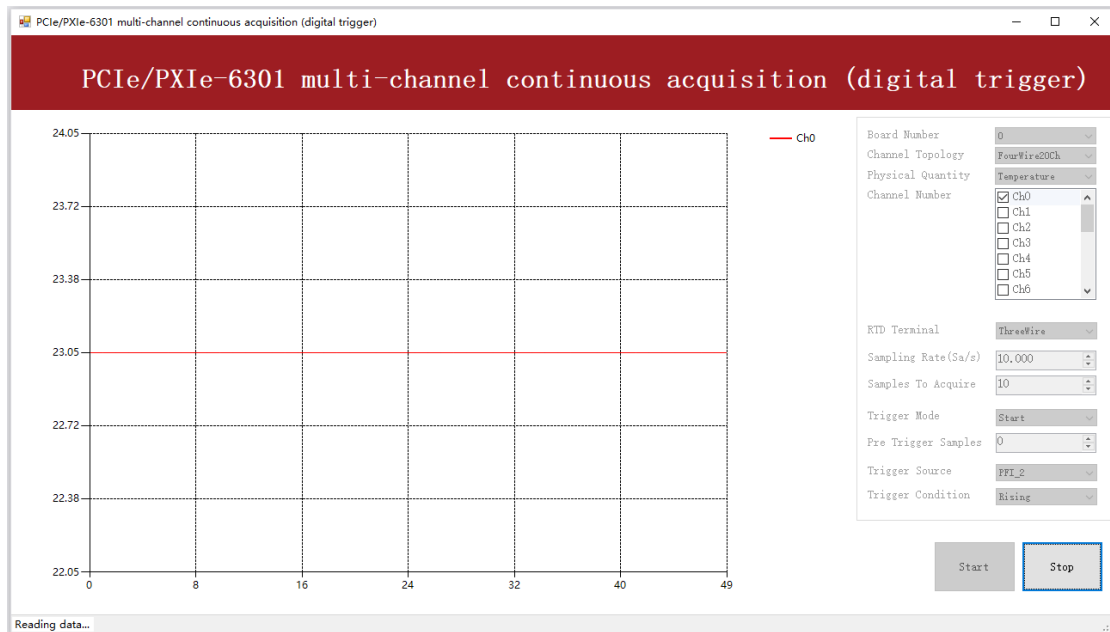


Figure 16 Digital Trigger Acquisition

- Since the squarewave is used for the digital trigger source, when a rising edge of the squarewave occurs, the digital trigger will be activated, and the data acquisition will start.

6.6 Trigger Mode

The analog inputs of JY-6301 support several trigger modes: Start Trigger, Reference Trigger and Retrigger.

6.6.1 Start Trigger

In this mode, the analog acquisition task will start to acquire the signal immediately after the trigger asserted as shown in

Figure 17. The Start Trigger mode is suitable for continuous and finite acquisition mode.

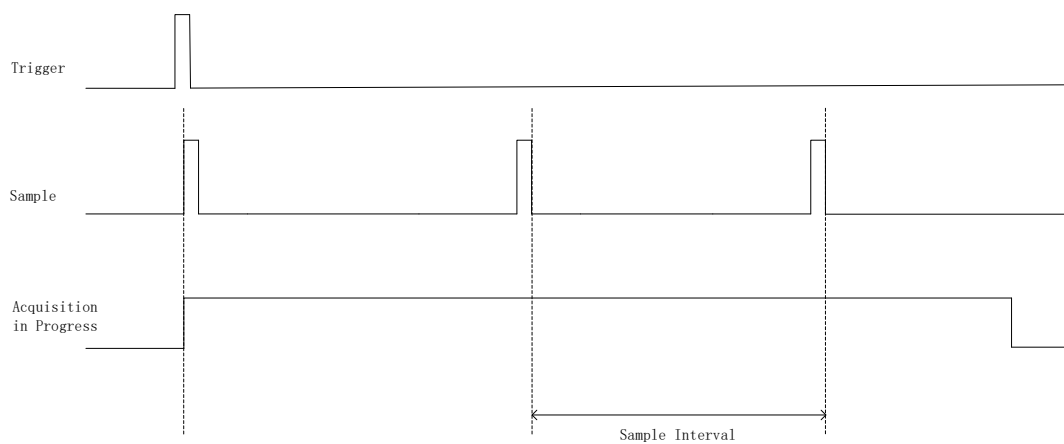


Figure 17 Start Trigger Mode

Learn by Example 6.6.1

- Open **Winform AI Continuous Digital Trigger**, set the following parameters as shown;
- Choose **Start in Trigger Mode** to use Start Trigger.

Board Number	0
Channel Topology	FourWire20Ch
Physical Quantity	Temperature
Channel Number	<input type="checkbox"/> Ch0 <input type="checkbox"/> Ch1 <input type="checkbox"/> Ch2 <input type="checkbox"/> Ch3 <input type="checkbox"/> Ch4 <input type="checkbox"/> Ch5 <input type="checkbox"/> Ch6
RTD Terminal	TwoWire
Sampling Rate(Sa/s)	10.000
Samples To Acquire	10
Trigger Mode	Start
Pre Trigger Samples	Start Reference
Trigger Source	PXI_Star
Trigger Condition	Rising

Figure 18 Start Trigger Parameters

- In **Trigger Mode** you can choose **Start** for Start Trigger, **Reference** for Reference Trigger.

6.6.2 Reference Trigger

User can configure a trigger condition and acquire the data between trigger asserted in the Reference Trigger mode. Data acquired before trigger occurred is pretrigger samples. Data acquired after trigger occurred is posttrigger samples. User can configure two parameters, “PretriggerSamples” and “SamplesToAcquire” to capture specified data as shown in Figure 19.

This trigger mode is only suitable for finite acquisition mode. The default number of pretrigger samples is 0.

Example

- SamplesToAcquire: 1000
- PretriggerSamples: 10
- Posttrigger samples: 990 (1000-10)

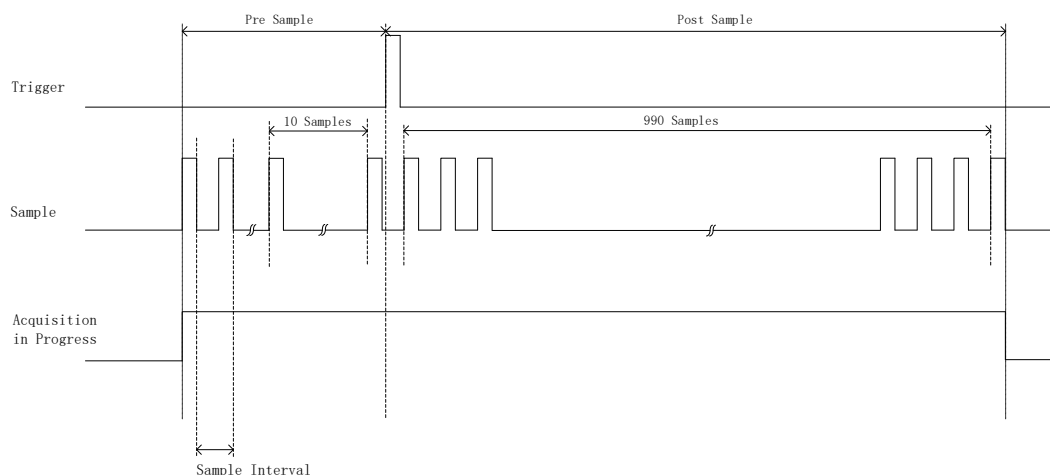


Figure 19 Reference Trigger mode

6.6.3 Retrigger

User can configure a specified trigger condition and repeated trigger times to capture signal. The number of repeated trigger times is set by the parameter “ReTriggerCount”. For example, we set the ReTriggerCount to N and the length of each acquisition to M, therefore the total acquired samples is $N * M * \text{channelcounts}$ as shown in Figure 20.

Note, Retrigger mode is only valid in finite acquisition mode.

When the ReTriggerCount is set to -1, it will wait on trigger infinitely until aborting the task.

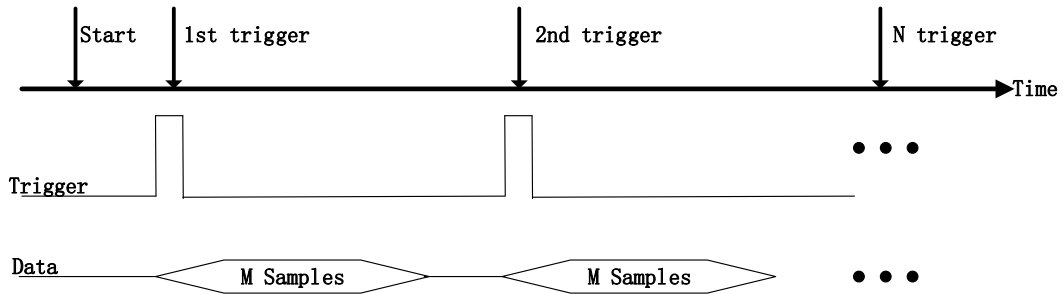


Figure 20 Retrigger mode

Learn by Example 6.6.2 and 6.6.3

- Connect the PT100's positive pole to AI+ (Pin#35), the negative poles to AI- (Pin#1) and Ex- (Pin#36), then connect the signal source's positive pole and negative pole to JY-6301 PFI2 (Pin#66) and D_GND (Pin#30);
- Set the signal source Ch1's output to square wave (f=1Hz, Vpp=5v);
- Open **Winform AI Finite Digital Trigger**, set the following numbers as shown.

Board Number	0
Channel Topology	FourWire20Ch
Physical Quantity	Temperature
Channel Number	<input checked="" type="checkbox"/> Ch0 <input type="checkbox"/> Ch1 <input type="checkbox"/> Ch2 <input type="checkbox"/> Ch3 <input type="checkbox"/> Ch4 <input type="checkbox"/> Ch5 <input type="checkbox"/> Ch6
KTD Terminal	ThreeWire
Sampling Rate(Sa/s)	10,000
Samples To Acquire	100
Trigger Mode	Reference
Pre Trigger Samples	10
ReTrigger Count	1
Trigger Source	PFI_2
Trigger Condition	Rising

Start Stop

Figure 21 Retrigger Parameters

- You can use three different kinds of triggers in this program as mentioned in this chapter. *Start Trigger* and *Reference Trigger* can be set by **Trigger Mode**. For *ReTrigger* can be used by changing the numbers in **Retrigger Count**.
- Now the **Trigger Mode** is “**Reference**”, and the PreTrigger Samples is 10. Click **Start** to begin the data acquisition, the result is shown below:

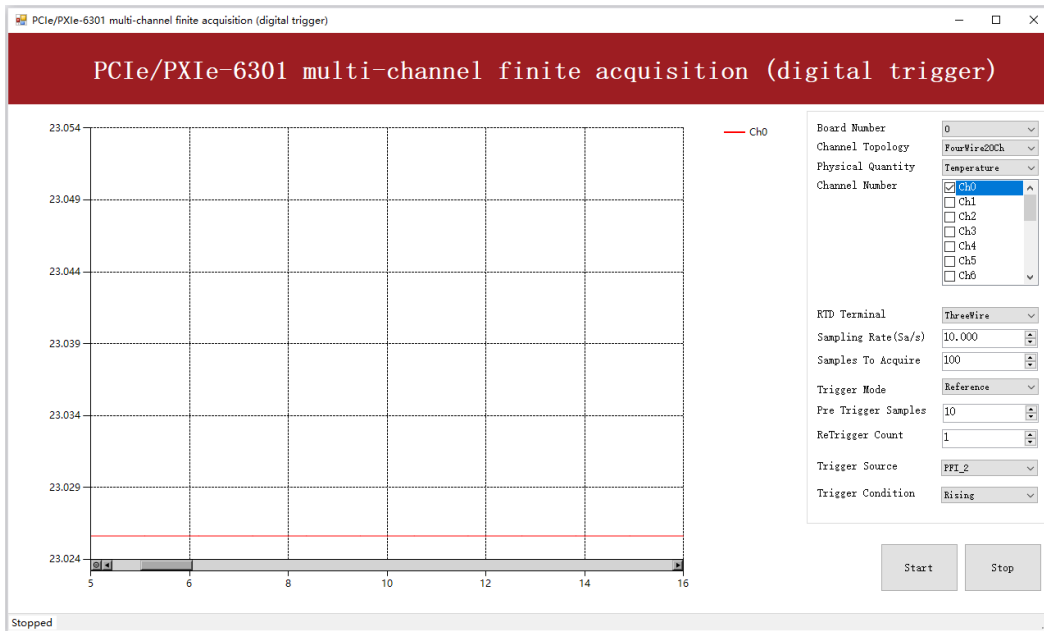


Figure 22 Retrigger in Reference Trigger Mode

- Because the measured waveform is a straight line, the effect of reference trigger can not be seen clearly.
- Now change the mode of trigger to **Retrigger** through giving **Retrigger Count** the number 5 and click **Start**. A message will appear in the lower left corner: “Samples acquired: 400/500”.

Samples acquired: 400 / 500

Figure 23 Retrigger Complete State

- It shows the acquisition process through every trigger signal.

6.7 System Synchronization Interface (SSI) for PCIe Modules

The synchronization between PCIe modules are handled differently from the PXIe synchronization, it is implemented by the system synchronization interface (SSI). SSI is designed as a bidirectional bus and it can synchronize up to four PCIe modules. One PCIe module is designated as the master module and the other PCIe modules are designated as the slave modules.

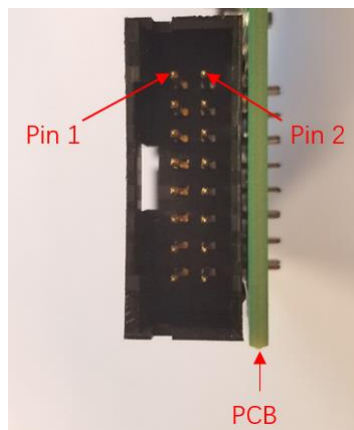


Figure 24 SSI Connector in PCIe-6301

Pin	Signal Name	Signal Name	Pin
1	PXI_TRIG0	GND	2
3	PXI_TRIG1	GND	4
5	PXI_TRIG2	GND	6
7	PXI_TRIG3	GND	8
9	PXI_TRIG4	GND	10
11	PXI_TRIG5	GND	12
13	PXI_TRIG6	GND	14
15	PXI_TRIG7	GND	16

Table 19 SSI Connector Pin Assignment for PCIe-6301

6.8 DIP Switch in PCIe-6301

PCIe-6301 has a DIP switch. The card number can be adjusted manually by changing the DIP switch setting, which is used to identify the boards with different slot position.

For example, if you want to set the card number to 3, you could turn the position 2 and 1 of the DIP switch to the ON position and the others to OFF. See below for details.

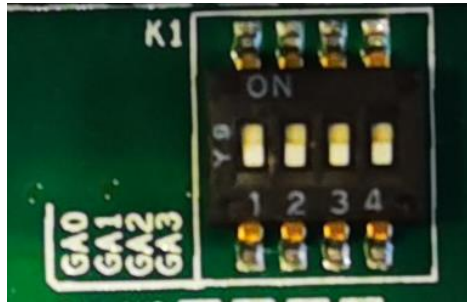


Figure 25 DIP Switch in PCIe-6301

	Position 4 (GA3)	Position 3 (GA2)	Position 2 (GA1)	Position 1 (GA0)
Slot 0	0	0	0	0
Slot 1	0	0	0	1
Slot 2	0	0	1	0
Slot 3	0	0	1	1
Slot 4	0	1	0	0
Slot 5	0	1	0	1
Slot 6	0	1	1	0
Slot 7	0	1	1	1
Slot 8	1	0	0	0
Slot 9	1	0	0	1
Slot 10	1	0	1	0
Slot 11	1	0	1	1
Slot 12	1	1	0	0
Slot 13	1	1	0	1
Slot 14	1	1	1	0
Slot 15	1	1	1	1

Note: OFF=0/ ON=1

Table 20 Relationship between switch position and card number

7. Calibration

JY-6301 boards are precalibrated before the shipment. We recommend you recalibrate JY-6301 board periodically to ensure the measurement accuracy. A commonly accepted practice is one year. If you need to recalibrate your board, please contact JYTEK.

8. Using JY-6301 in Other Software

While JYTEK's default application platform is Visual Studio, the programming language is C#, we recognize there are other platforms that are either becoming very popular or have been widely used in the data acquisition applications. Among them are Python, C++. This chapter explains how you can use JY-6301 DAQ card using one of this software.

8.1 Python

JYTEK provides and supports a native Python driver for JY-6301 cards. There are many different versions of Python. JYTEK has only tested in CPython version 3.5. There is no guarantee that JYTEK python drivers will work correctly with other versions of Python.

If you want to be our partner to support different Python platforms, please contact us.

8.2 C++

JYTEK internally uses our C++ drivers to design the C# drivers. We recommend our customers to use C# drivers because C# platform deliver much better efficiency and performance in most situations. We also make our C++ drivers available. However, due to the limit of our resources, we do not actively support C++ drivers. You can download our C++ drivers from JYTEK's website. We welcome you report the bugs in our C++ drivers, but will not be able to guarantee that we can fix it within your expectation.

If you want to be our partner to support C++ drivers, please contact us.

9. Appendix

9.1 RTD Connections

JY-6301 can support 2-wire, 3-wire or 4-wire RTD connection.

2-wire RTD connection

When using a 2-wire RTD configuration, user needs to connect the negative terminal of current excitation (Ex-) to the AI- terminal as shown in Figure 26. Due to the presence of lead wires resistance, this type of connection may introduce large measurement errors, which are related to the material of the lead wire. This type of wiring is not suitable for high precision temperature measurement needs.

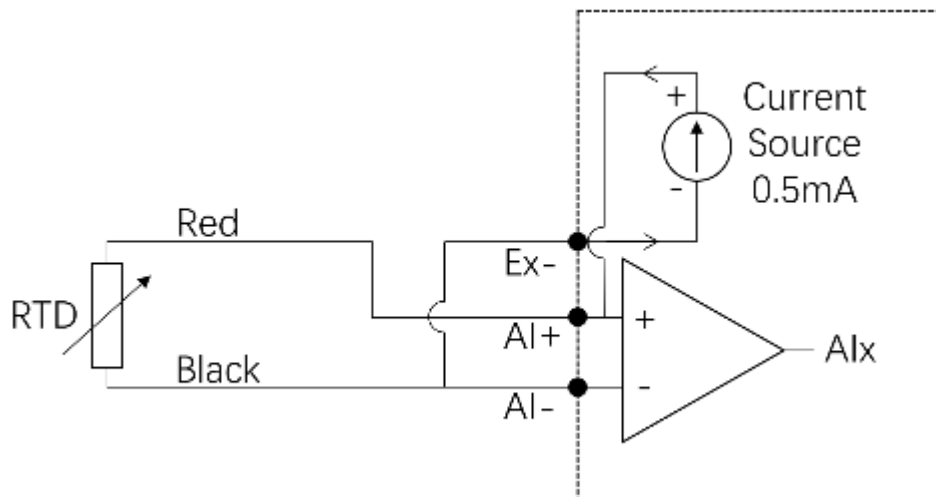


Figure 26 2-wire RTD connection

3-wire RTD connection

In a 3-wire RTD configuration, AI+ terminal will output a precision current excitation, 500 μ A to RTD sensor and flow back through the Ex- terminal and AI- terminal as shown in Figure 27 . Since the voltage generated by the RTD connecting the AI+ terminal and the voltage connected to the AI- terminal will cancel each other, this connection can effectively eliminate the influence of the lead wire resistance, but in practical applications, the resistance of the two lead wires are difficult to match completely, so there will still be a certain degree of mismatch error.

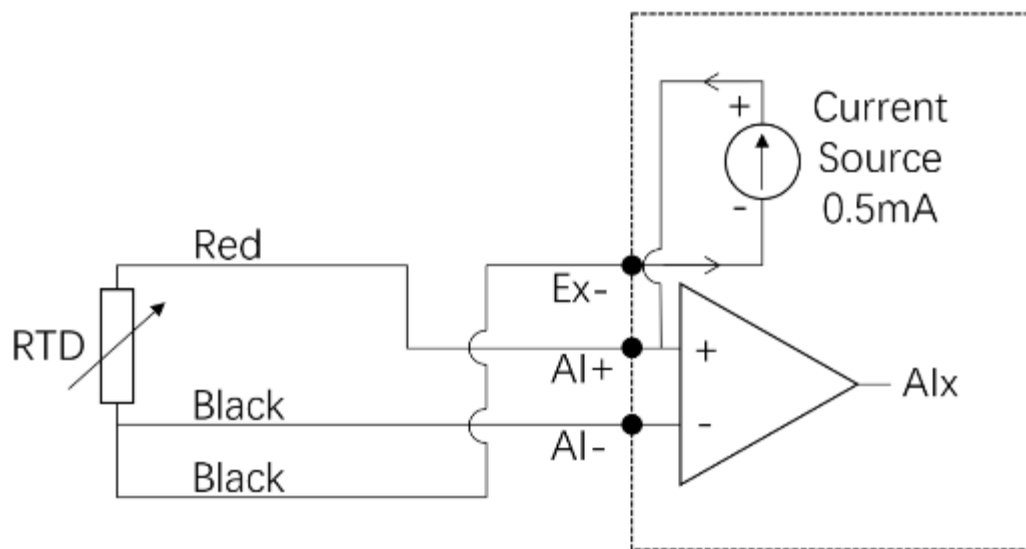


Figure 27 3-wire RTD connection

4-wire RTD connection ¹

In a 4-wire configuration, the Ex+ terminal will output a current excitation, 1000 μA and flows back through the Ex- terminal and AI- terminal as shown in Figure 28. Since the current loop and voltage measuring circuit of the lead wire are independently, so will not introduce errors due to lead wire resistance.

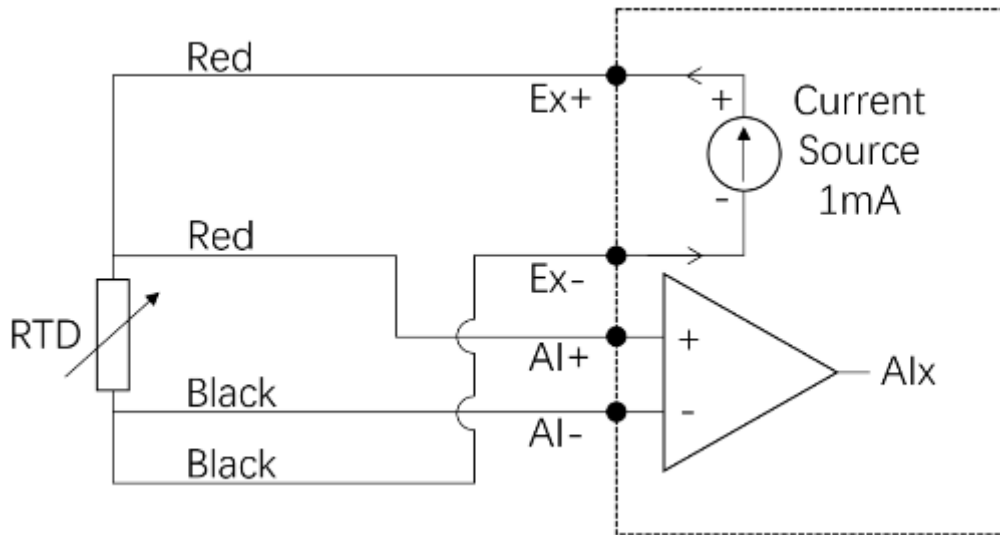


Figure 28 4-wire RTD connection

¹ If you need to use a 4-wire configuration, you must configure the channel topology to a "4-wire mode" when configuring the acquisition task. In this case, the PCIe/PXIe-6301 provides a 20 channels of temperature measurements. If you do not need to use a 4-wire configuration, you can configure the acquisition task to a "3-wire mode", in which case the PCIe/PXIe-6301 provides a 32 channels of temperature measurements.

9.2 PT100 Temperature/Resistance Table

t(°C)	Resistance at temperature t(Ω)										t(°C)
	0	-1	-2	-3	-4	-5	-6	-7	-8	-9	
-200	18.52										-200
-190	22.83	22.40	21.97	21.54	21.11	20.68	20.25	19.82	19.38	18.95	-190
-180	27.10	26.67	26.24	25.82	25.39	24.97	24.54	24.11	23.68	23.25	-180
-170	31.34	30.91	30.49	30.07	29.64	29.22	28.80	28.37	27.95	27.52	-170
-160	35.54	35.12	34.70	34.28	33.86	33.44	33.02	32.60	32.18	31.76	-160
-150	39.72	39.31	38.89	38.47	38.05	37.64	37.22	36.80	36.38	35.96	-150
-140	43.88	43.46	43.05	42.63	42.22	41.80	41.39	40.97	40.56	40.14	-140
-130	48.00	47.59	47.18	46.77	46.36	45.94	45.53	45.12	44.70	44.29	-130
-120	52.11	51.70	51.29	50.88	50.47	50.06	49.65	49.24	48.83	48.42	-120
-110	56.19	55.79	55.38	54.97	54.56	54.15	53.75	53.34	52.93	52.52	-110
-100	60.26	59.85	59.44	59.04	58.63	58.23	57.82	57.41	57.01	56.60	-100
-90	64.30	63.90	63.49	63.09	62.68	62.28	61.88	61.47	61.07	60.66	-90
-80	68.33	67.92	67.52	67.12	66.72	66.31	65.91	65.51	65.11	64.70	-80
-70	72.33	71.93	71.53	71.13	70.73	70.33	69.93	69.53	69.13	68.73	-70
-60	76.33	75.93	75.53	75.13	74.73	74.33	73.93	73.53	73.13	72.73	-60
-50	80.31	79.91	79.51	79.11	78.72	78.32	77.92	77.52	77.12	76.72	-50
-40	84.27	83.87	83.48	83.08	82.69	82.29	81.89	81.50	81.10	80.70	-40
-30	88.22	87.83	87.43	87.04	86.64	86.25	85.85	85.46	85.06	84.67	-30
-20	92.16	91.77	91.37	90.98	90.59	90.19	89.80	89.40	89.01	88.62	-20
-10	96.09	95.69	95.30	94.91	94.52	94.12	93.73	93.34	92.95	92.55	-10
0	100.00	99.61	99.22	98.83	98.44	98.04	97.65	97.26	96.87	96.48	0
t(°C)	0	1	2	3	4	5	6	7	8	9	t(°C)
0	100.00	100.39	100.78	101.17	101.56	101.95	102.34	102.73	103.12	103.51	0
10	103.90	104.29	104.68	105.07	105.46	105.85	106.24	106.63	107.02	107.40	10
20	107.79	108.18	108.57	108.96	109.35	109.73	110.12	110.51	110.90	111.29	20
30	111.67	112.06	112.45	112.83	113.22	113.61	114.00	114.38	114.77	115.15	30
40	115.54	115.93	116.31	116.70	117.08	117.47	117.86	118.24	118.63	119.01	40
50	119.40	119.78	120.17	120.55	120.94	121.32	121.71	122.09	122.47	122.86	50
60	123.24	123.63	124.01	124.39	124.78	125.16	125.54	125.93	126.31	126.69	60
70	127.08	127.46	127.84	128.22	128.61	128.99	129.37	129.75	130.13	130.52	70
80	130.90	131.28	131.66	132.04	132.42	132.80	133.18	133.57	133.95	134.33	80
90	134.71	135.09	135.47	135.85	136.23	136.61	136.99	137.37	137.75	138.13	90
100	138.51	138.88	139.26	139.64	140.02	140.40	140.78	141.16	141.54	141.91	100
110	142.29	142.67	143.05	143.43	143.80	144.18	144.56	144.94	145.31	145.69	110
120	146.07	146.44	146.82	147.20	147.57	147.95	148.33	148.70	149.08	149.46	120
130	149.83	150.21	150.58	150.96	151.33	151.71	152.08	152.46	152.83	153.21	130
140	153.58	153.96	154.33	154.71	155.08	155.46	155.83	156.20	156.58	156.95	140
150	157.33	157.70	158.07	158.45	158.82	159.19	159.56	159.94	160.31	160.68	150
160	161.05	161.43	161.80	162.17	162.54	162.91	163.29	163.66	164.03	164.40	160
170	164.77	165.14	165.51	165.89	166.26	166.63	167.00	167.37	167.74	168.11	170
180	168.48	168.85	169.22	169.59	169.96	170.33	170.70	171.07	171.43	171.80	180
190	172.17	172.54	172.91	173.28	173.65	174.02	174.38	174.75	175.12	175.49	190
200	175.86	176.22	176.59	176.96	177.33	177.69	178.06	178.43	178.79	179.16	200
210	179.53	179.89	180.26	180.63	180.99	181.36	181.72	182.09	182.46	182.82	210
220	183.19	183.55	183.92	184.28	184.65	185.01	185.38	185.74	186.11	186.47	220
230	186.84	187.20	187.56	187.93	188.29	188.66	189.02	189.38	189.75	190.11	230
240	190.47	190.84	191.20	191.56	191.92	192.29	192.65	193.01	193.37	193.74	240
250	194.10	194.46	194.82	195.18	195.55	195.91	196.27	196.63	196.99	197.35	250
260	197.71	198.07	198.43	198.79	199.15	199.51	199.87	200.23	200.59	200.95	260
270	201.31	201.67	202.03	202.39	202.75	203.11	203.47	203.83	204.19	204.55	270
280	204.90	205.26	205.62	205.98	206.34	206.70	207.05	207.41	207.77	208.13	280
290	208.48	208.84	209.20	209.56	209.91	210.27	210.63	210.98	211.34	211.70	290
300	212.05	212.41	212.76	213.12	213.48	213.83	214.19	214.54	214.90	215.25	300
310	215.61	215.96	216.32	216.67	217.03	217.38	217.74	218.09	218.44	218.80	310
320	219.15	219.51	219.86	220.21	220.57	220.92	221.27	221.63	221.98	222.33	320

Appendix Table 1 PT100 Temperature/Resistance Index Table

t(°C)	Resistance at temperature t(Ω)										t(°C)
	0	1	2	3	4	5	6	7	8	9	
330	222.68	223.04	223.39	223.74	224.09	224.45	224.80	225.15	225.50	225.85	330
340	226.21	226.56	226.91	227.26	227.61	227.96	228.31	228.66	229.02	229.37	340
350	229.72	230.07	230.42	230.77	231.12	231.47	231.82	232.17	232.52	232.87	350
360	233.21	233.56	233.91	234.26	234.61	234.96	235.31	235.66	236.00	236.35	360
370	236.70	237.05	237.40	237.74	238.09	238.44	238.79	239.13	239.48	239.83	370
380	240.18	240.52	240.87	241.22	241.56	241.91	242.26	242.60	242.95	243.29	380
390	243.64	243.99	244.33	244.68	245.02	245.37	245.71	246.06	246.40	246.75	390
400	247.09	247.44	247.78	248.13	248.47	248.81	249.16	249.50	249.85	250.19	400
410	250.53	250.88	251.22	251.56	251.91	252.25	252.59	252.93	253.28	253.62	410
420	253.96	254.30	254.65	254.99	255.33	255.67	256.01	256.35	256.70	257.04	420
430	257.38	257.72	258.06	258.40	258.74	259.08	259.42	259.76	260.10	260.44	430
440	260.78	261.12	261.46	261.80	262.14	262.48	262.82	263.16	263.50	263.84	440
450	264.18	264.52	264.86	265.20	265.53	265.87	266.21	266.55	266.89	267.22	450
460	267.56	267.90	268.24	268.57	268.91	269.25	269.59	269.92	270.26	270.60	460
470	270.93	271.27	271.61	271.94	272.28	272.61	272.95	273.29	273.62	273.96	470
480	274.29	274.63	274.96	275.30	275.63	275.97	276.30	276.64	276.97	277.31	480
490	277.64	277.98	278.31	278.64	278.98	279.31	279.64	279.98	280.31	280.64	490
500	280.98	281.31	281.64	281.98	282.31	282.64	282.97	283.31	283.64	283.97	500
510	284.30	284.63	284.97	285.30	285.63	285.96	286.29	286.62	286.95	287.29	510
520	287.62	287.95	288.28	288.61	288.94	289.27	289.60	289.93	290.26	290.59	520
530	290.92	291.25	291.58	291.91	292.24	292.56	292.89	293.22	293.55	293.88	530
540	294.21	294.54	294.86	295.19	295.52	295.85	296.18	296.50	296.83	297.16	540
550	297.49	297.81	298.14	298.47	298.80	299.12	299.45	299.78	300.10	300.43	550
560	300.75	301.08	301.41	301.73	302.06	302.38	302.71	303.03	303.36	303.69	560
570	304.01	304.34	304.66	304.98	305.31	305.63	305.96	306.28	306.61	306.93	570
580	307.25	307.58	307.90	308.23	308.55	308.87	309.20	309.52	309.84	310.16	580
590	310.49	310.81	311.13	311.45	311.78	312.10	312.42	312.74	313.06	313.39	590
600	313.71	314.03	314.35	314.67	314.99	315.31	315.64	315.96	316.28	316.60	600
610	316.92	317.24	317.56	317.88	318.20	318.52	318.84	319.16	319.48	319.80	610
620	320.12	320.43	320.75	321.07	321.39	321.71	322.03	322.35	322.67	322.99	620
630	323.30	323.62	323.94	324.26	324.57	324.89	325.21	325.53	325.84	326.16	630
640	326.48	326.79	327.11	327.43	327.74	328.06	328.38	328.69	329.01	329.32	640
650	329.64	329.96	330.27	330.59	330.90	331.22	331.53	331.85	332.16	332.48	650
660	332.79	333.11	333.42	333.74	334.05	334.36	334.68	334.99	335.31	335.62	660
670	335.93	336.25	336.56	336.87	337.18	337.50	337.81	338.12	338.44	338.75	670
680	339.06	339.37	339.69	340.00	340.31	340.62	340.93	341.24	341.56	341.87	680
690	342.18	342.49	342.80	343.11	343.42	343.73	344.04	344.35	344.66	344.97	690
700	345.28	345.59	345.90	346.21	346.52	346.83	347.14	347.45	347.76	348.07	700
710	348.38	348.69	348.99	349.30	349.61	349.92	350.23	350.54	350.84	351.15	710
720	351.46	351.77	352.08	352.38	352.69	353.00	353.30	353.61	353.92	354.22	720
730	354.53	354.84	355.14	355.45	355.76	356.06	356.37	356.67	356.98	357.28	730
740	357.59	357.90	358.20	358.51	358.81	359.12	359.42	359.72	360.03	360.33	740
750	360.64	360.94	361.25	361.55	361.85	362.16	362.46	362.76	363.07	363.37	750
760	363.67	363.98	364.28	364.58	364.89	365.19	365.49	365.79	366.10	366.40	760
770	366.70	367.00	367.30	367.60	367.91	368.21	368.51	368.81	369.11	369.41	770
780	369.71	370.01	370.31	370.61	370.91	371.21	371.51	371.81	372.11	372.41	780
790	372.71	373.01	373.31	373.61	373.91	374.21	374.51	374.81	375.11	375.41	790
800	375.70	376.00	376.30	376.60	376.90	377.19	377.49	377.79	378.09	378.39	800
810	378.68	378.98	379.28	379.57	379.87	380.17	380.46	380.76	381.06	381.35	810
820	381.65	381.95	382.24	382.54	382.83	383.13	383.42	383.72	384.01	384.31	820
830	384.60	384.90	385.19	385.49	385.78	386.08	386.37	386.67	386.96	387.25	830
840	387.55	387.84	388.14	388.43	388.72	389.02	389.31	389.60	389.90	390.19	840
850	390.48										850

Appendix Table 2 PT100 Temperature/Resistance Index Table (continued from the previous table)

10.About JYTEK

10.1 JYTEK China

Founded in June, 2016, JYTEK China is a leading Chinese test & measurement company, providing complete software and hardware products for the test and measurement industry. The company has evolved from re-branding and reselling PXI(e) and DAQ products to a fully-fledged product company. The company offers complete lines of PXI, DAQ, USB products. More importantly, JYTEK has been promoting open-sourced based ecosystem and offers complete software products. Presently, JYTEK is focused on the Chinese market. Our Shanghai headquarters and production service center have regular stocks to ensure timely supply; we also have R&D centers in Xi'an and Chongqing. We also have highly trained direct technical sales representatives in Shanghai, Beijing, Tianjin, Xi'an, Chengdu, Nanjing, Wuhan, Guangdong, Haerbin, and Changchun. We also have many partners who provide system level support in various cities.

10.2 JYTEK Software Platform

JYTEK has developed a complete software platform, SeeSharp Platform, for the test and measurement applications. We leverage the open sources communities to provide the software tools. Our platform software is also open sourced and is free, thus lowering the cost of tests for our customers. We are the only domestic vendor to offer complete commercial software and hardware tools.

10.3 JYTEK Warranty and SupportServices

With our complete software and hardware products, JYTEK is able to provide technical and sales services to wide range of applications and customers. In most cases, our products are backed by a 1-year warranty. For technical consultation, pre-sale and after-sales support, please contact JYTEK of your country.

11.Statement

The hardware and software products described in this manual are provided by JYTEK China, or JYTEK in short.

This manual provides the product review, quick start, some driver interface explanation for JY6301 family of temperature sensor data acquisition cards. The manual is copyrighted by JYTEK.

No warranty is given as to any implied warranties, express or implied, including any purpose or non-infringement of intellectual property rights, unless such disclaimer is legally invalid. JYTEK is not responsible for any incidental or consequential damages related to performance or use of this manual. The information contained in this manual is subject to change without notice.

While we try to keep this manual up to date, there are factors beyond our control that may affect the accuracy of the manual. Please check the latest manual and product information from our website.

Shanghai Jianyi Technology Co., Ltd.

Address: Room 201, Building 3, NO.300 Fangchun Road, Shanghai.

Post Code: 201203

Tel: 021-5047 5899

Website: www.jytek.com